66087 / 01






Kit "A"

Mounting plate


Mounting plate


screws


Required tools

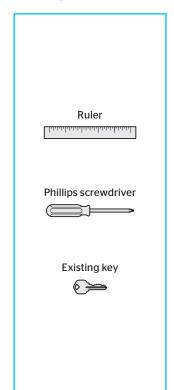

Parts in the box

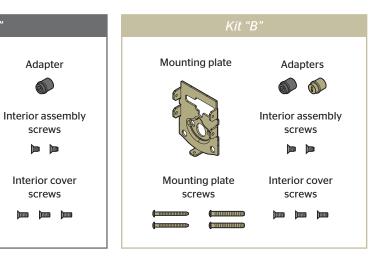

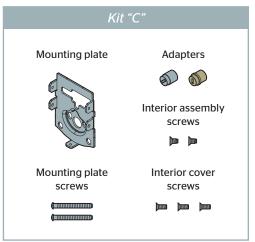


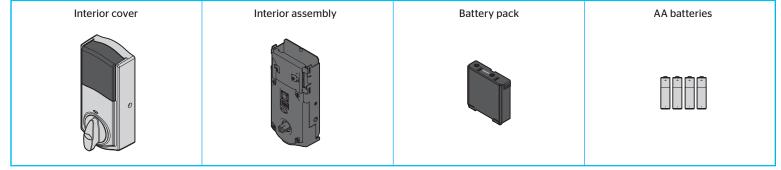

1


Make sure your existing deadbolt is compatible.

If you have a standard deadbolt mounted separately from the handle below it, it is compatible with Kevo Convert.

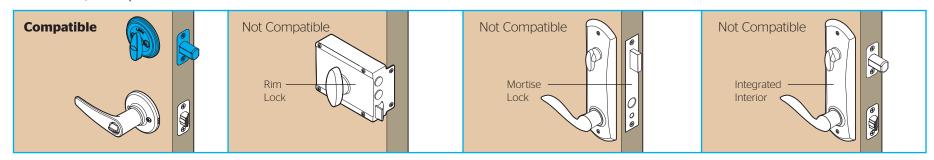

Measure the thickness of your door.


Measure to confirm that your door is either 1-3/8" or 1-3/4" (35 mm or 44 mm) thick.

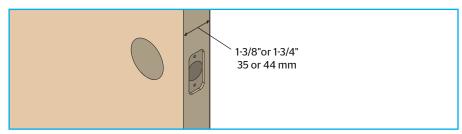


3 Disassemble your existing deadbolt.



Make sure your door is open and extend your latch bolt.

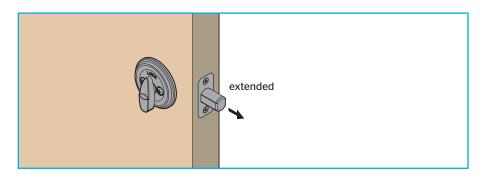

Remove all existing deadbolt hardware from the interior side of your door. Keep your deadbolt exterior in place.

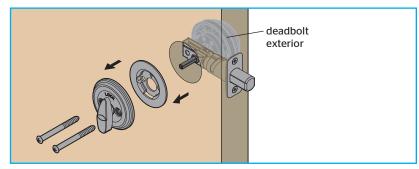




Determine the parts needed for your door.

Look at the hole in your door.

What shape is your torque blade (the part sticking out through the latch)?

D-shape

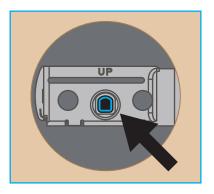

Kwikset and Weiser deadbolts:

 
Use kit "A" for your door.




Baldwin Reserve and Baldwin Prestige deadbolts:

Use kit "B" for your door.

You will need the black adapter and the thicker gold screws.



Vertical rectangle

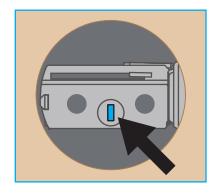


Baldwin Estate deadbolts:

Use kit "B" for your door.

You will need the gold adapter and the thinner gold screws.




Slanted rectangle

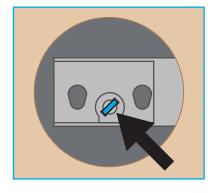


Schlage deadbolts:

 Use kit "C" for your door.
You will need the silver adapter.




Horizontal rectangle

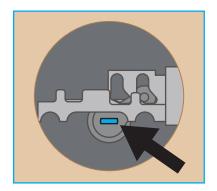

Schlage deadbolts:

 
Use kit "C" for your door.
You will need the gold adapter.



For a list of compatible deadbolt models, see page 11.


Install the mounting plate and test your latch.

A Place the mounting plate on the door so that the torque blade inserts through the center hole.

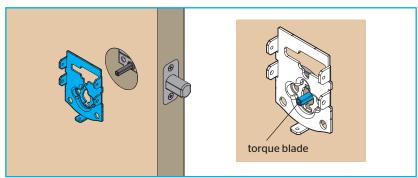


Note: A D-shaped torque blade is shown, but installation is the same for all models.


Insert your key and test the latch for smooth operation.

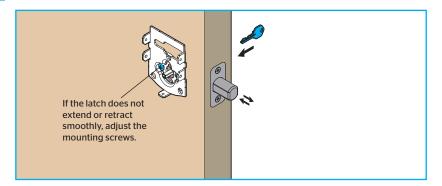


B Secure the mounting plate with the mounting screws.

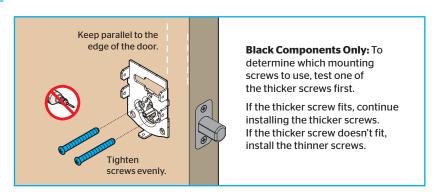


Remove your key and make sure the bolt is fully extended.

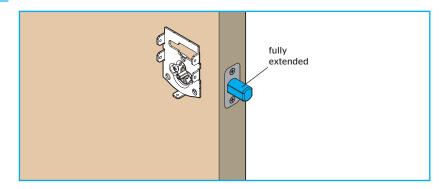

- 6 Install the interior assembly.
- A Prepare the interior assembly.

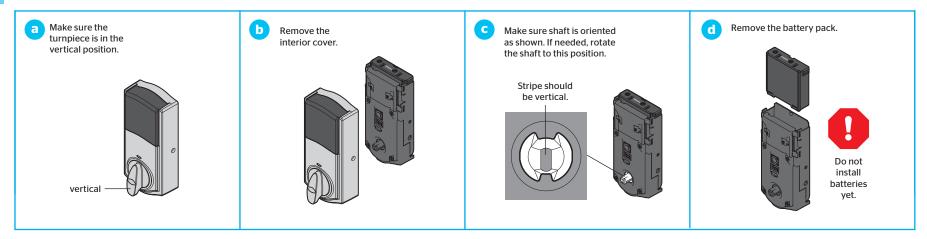

B Install the adapter on the interior assembly.

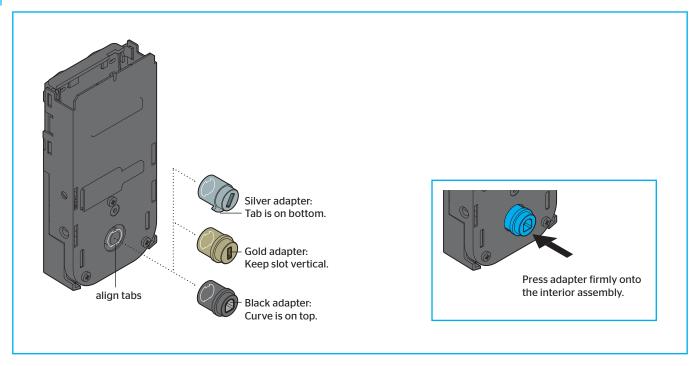


Install the interior assembly (continued).


SCHLAGE DEADBOLTS ONLY:

Look at your mounting plate.
Is your latch bolt to the left or right of your mounting plate?




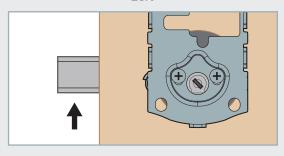


No adjustment is required. Proceed to the next page.

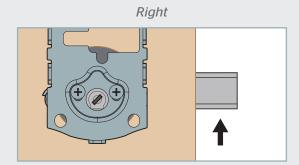

On your interior assembly, flip switch #2 to the top position.

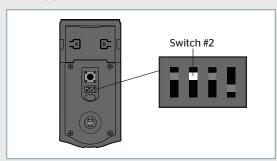

- 6 Install the interior assembly (continued).
- Install the interior assembly onto the mounting plate.

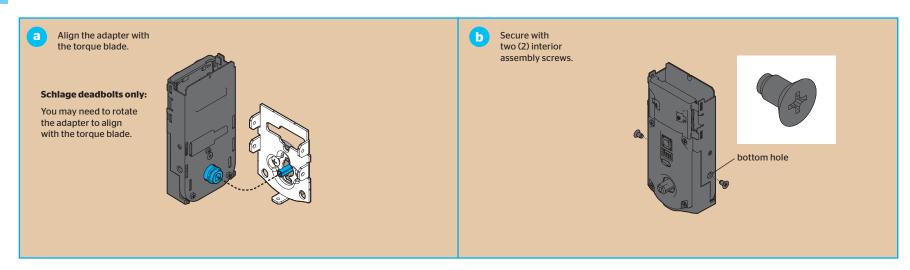


7

Perform the door handing process.


This step will teach the lock the orientation of your door and is crucial for lock operation.

A


Install 4 AA batteries in the battery pack.

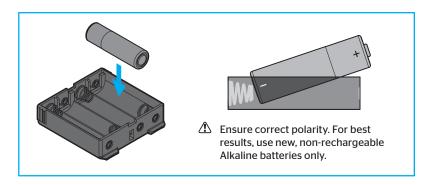


IMPORTANT: The Status LED will flash red and green, and the lock will beep. Press and release the Program button again.

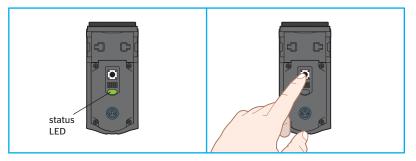

IMPORTANT: Make sure the door is open. Insert the battery pack while PRESSING AND HOLDING the Program button. Release the button when the battery pack is all the way inside the lock interior.

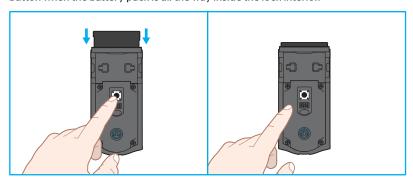

The latch bolt will retract and extend on its own to learn the orientation of the door.

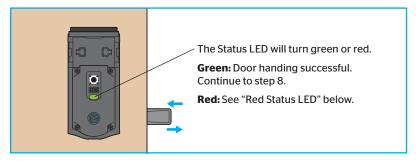


If the bolt does not move, make sure the batteries are installed correctly, and perform steps B-D again.

Red Status LED

BALDWIN ESTATE DEADBOLTS ONLY:

If your latch bolt is to the RIGHT of your interior assembly, and the Status LED is solid red after door handing, press and release the Program button again. The door handing process will restart.

If you are unsure if your lock is Baldwin Estate, see chart on page 3 or compatible deadbolt list on page 11.

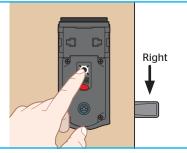

OTHER DEADBOLTS:

If the Status LED is solid red after door handing, make sure the batteries are installed correctly and the lock interior is correctly installed. Perform steps B-D again.








Follow the instructions inside the app to create an account, enroll your first smartphone and send eKeys to family and friends.




Install the interior cover.

Important information about the interior cover: The interior cover will be If the window is unlocked, secured by three screws it can slide up for more to prevent someone convenient access to from removing the programming buttons window battery or tampering with while the cover is installed. your lock's settings. Note: The interior The window on the interior cover and screws cover is locked by default. must be removed for battery pack access.

If you want to keep the window locked:

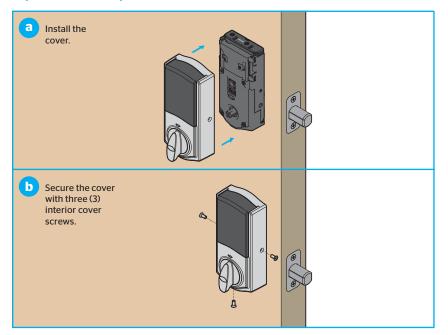

If you want to unlock the window:

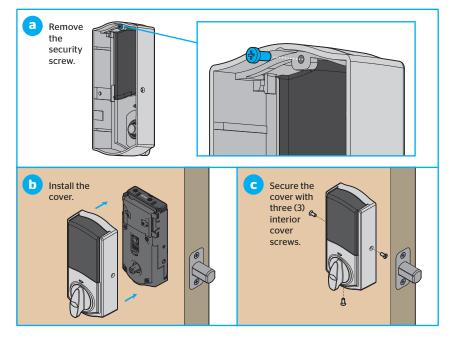


Kevo Convert Compatibility Chart

Kevo Convert is compatible with the following models:

Kwikset	Weiser	Baldwin Prestige	Baldwin Reserve	Baldwin Estate	Schlage
Deadbolts	Deadbolts	Deadbolts	Deadbolts	Deadbolts	Deadbolts
158 660 660M 780 816 980 980AUD 993 <i>Combo Packs</i>	GD9471 GDC9471 GCD9471 GCD9571 SSD9471 9471-K3 (SQT) 9471-K3 (RDT) Door Handles Acacia Amherst	380 All single cylinder deadbolts 8011 8031 8031 Entrance 8041 8220 Avendale Alcott Adirondack Handleset 8231 Avendale Carnaby Chesapeake Handleset 8237 Avendale Tobin Columbus Handleset 8241 Bighorn Handleset Cottonwood Handleset 8244 Medina Handleset Del Mar Handleset 8250 Nautica Handleset Elizabeth Handleset 8252 Pistoria Handleset Elkhorn Handleset 8254 Segovia Handleset Fairbanks Handleset 8285	8031 8041 8220 8231 8237 8241 8244 8250 8252	B360N B560P B60N B660P6 B760P	
Handlesets Amherst Arlington Ashfield Chelsea Austin Avalon Hawthorne Montara Shelburne Tavaris Wellington Belleview Dakota	Ashfield Augusta Avalon Bingsley Brentridge Colonnade Columbia Davenport Grayson Hawthorne Heritage Longbourn Monaco Pemberly Tavaris Whistler Shelburne	Spyglass Handleset Wesley Alcott Wesley Carnaby	Kodiak Handleset La Jolla Handleset Longview Handleset Miami Handleset Napa Handleset New Hampshire Handleset Santa Cruz Handleset Seattle Handleset Westcliff Handleset	Entrance (Tubular products only) Bethpage Knob Sectional Trim Canterbury Knob Sectional Trim Canterbury Lever Sectional Trim Glennon Escutcheon Trim Logan Knob Sectional Trim Logan Lever Sectional Trim Logan Sectional Trim Madison Knob Sectional Trim Madison Lever Sectional Trim Minneapolis Sectional Trim Nantucket Escutcheon Trim Palm Springs Sectional Handleset Soho Sectional Trim	

Kevo Convert at a Glance

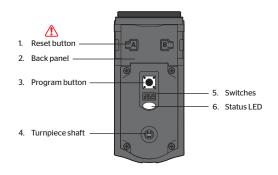

- Only use to reset Kevo Convert to delete all eKeys from your system. See "System Reset" for more information.
- 2. Where all the programming features are located.
- Use to enroll smartphones.
- Engages with turnpiece when interior cover is installed. When the cover is removed, the
- turnpiece shaft can be used to manually lock and unlock the door.
- 5. Use to enable and disable the Status LED, Invert, Audio, and Auto-Lock
- Communicates whether the door is locked or unlocked and flashes red for a low battery alert. Can be turned on and off by Switch #1.

Kevo-Compatible Devices

Smartphones and Smart Devices

A Kevo-compatible smartphone (or other mobile internet-connected device or tablet) must have Bluetooth Smart Ready/ Bluetooth 4.0 and an app specific to the device must be installed. Find out if your device is compatible at www.kwikset.com/kevo/devices.



Standard Key

Always make sure you have access to your standard key.

Switches



on off

Switch 1

Status LED

Door lock status LED blinks every 6 seconds. ON position is factory default.

Switch 2

1 Invert

Only used for right-handed doors that have installed silver components. See page 6 for details.

Switch 3

Audio

Beeping sound is heard during programming and normal operation. ON position is factory default.

Switch 4

Auto-Lock


Automatically re-locks door 30 seconds after unlocking. OFF position is factory default.

CAUTION: With this feature enabled, it is possible to lock yourself outside if you don't have an enrolled smartphone or standard key with you.

System Reset

WARNING: Resetting your Kevo system will restore your lock to factory settings and delete all smartphones from Kevo's memory.

If you wish to perform a system reset, **press and hold** the Reset button on the back panel for 10 seconds until the lock beeps.

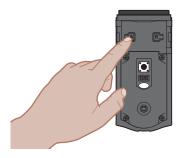

After a system reset, you will need to re-enroll your Owner phone. You will still be able to send eKeys at no charge to anyone who previously had an active eKey at the time of reset.

Status LED Notifications



Amber flash Door is locked



Green flashDoor is unlocked.



Red flash
The 4 AA batteries in the Kevo interior are low and need to be replaced.

Advanced Features

History Log

A history of the lock's activity may be viewed through the Kevo app or by logging into the web portal: www.mykevo.com.

Notifications

The Kevo app can send notifications when the door is locked and unlocked by eKey holders. You can choose to receive the system's default notifications or set up custom notifications to monitor a specific user or time frame.

Dual Factor Authentication

Kevo features an optional, added-security passcode that you can enable inside the app to be used in addition to the app's password. Enabling the passcode will require you to enter a 4-digit PIN whenever you access the app, and it protects your Kevo account against unauthorized changes when your phone is unlocked.

Kevo Plus

With Kevo Plus, you will be able to lock and unlock your home and check whether your door is locked or unlocked when you are away from home. You can upgrade to Kevo Plus inside the Kevo app. Visit www.kwikset.com/kevo/kevo-plus for more information.

Connect Smart Products

Connect Kevo to select smart products. In the Kevo app, tap the gear icon to connect to smart products (iOS only: select "Preferences"). Visit www.kwikset.com/kevo/support for more information.

Important Safeguards

- 1. Read all instructions in their entirety.
- 2. Familiarize yourself with all warning and caution statements.
- 3. Remind all family members of safety precautions.
- 4. Always have access to your lock's standard key.
- If using the Auto-Lock feature, make sure to have your smartphone or standard key with you to prevent locking yourself out.
- 6. Replace low batteries immediately.

Preventing Inadvertent Unlocking of Your Door

WARNING: Failure to follow these safeguards could result in your lock opening inadvertently.

- Restrict access to your Kevo lock's back panel and routinely check your settings to ensure they have not been altered without your knowledge.
- 2. Protect the password to your Kevo app and web portal accounts.
- 3. When sending an eKey, always double-check that you are sending it to the correct recipient.
- Protect and restrict access to your smartphone so that your app settings cannot be altered without your knowledge.
- Enable the Kevo app's security passcode so that your app settings cannot be altered without your knowledge.
- When sending eKeys, be aware of the difference between an Admin user and other users in the system: an Admin user can send, disable and delete eKeys.
- 7. If your smartphone is lost or stolen, use the Kevo web portal (www.mykevo.com) to disable it.

WARNING: This Manufacturer advises that no lock can provide complete security by itself. This lock may be defeated by forcible or technical means, or evaded by entry elsewhere on the property. No lock can substitute for caution, awareness of your environment, and common sense. Builder's hardware is available in multiple performance grades to suit the application. In order to enhance security and reduce risk, you should consult a qualified locksmith or other security professional.