## **Creating Your Account**

## WEISER.

From the login screen, tap "Create an Account."	2 Enter your First and Last Name, then tap "Next."	3 Enter the email address you would like associated with the account, then tap "Send." A verification code will be sent to this email.
WEISER.	Kerk WEISER.	Keiser
Email Password Log In Forgot Password	Enter the First and Last Name of the account. First Name Last Name Next	Please enter the email address of the account. A verification code will be sent to this email address. Email Send
Create An Account	First and Last Name must be 2 to 20 characters, and include at least: • One letter	
Enter the verification code that was emailed to you, then tap "Verify."	5 Enter the mobile phone number you would like associated with the account, then tap "Next." A verification code will be sent to this mobile phone number.	6 Enter the verification code that was sent to your mobile phone, then tap "Verify."
Keiser.	Kerk WEISER	Keiser
Please enter the verification code sent to your email and tap Verify. Code Verify Resend	Please enter the smartphone number of the account. A verification code will be sent to this number. Standard text rates may apply. Phone Number Send	Please enter the verification code sent to your smartphone and tap Verify. Code Verify Resend
If you do not receive a verification code email within 5 minutes, tap	Manually enter phone number. Must be 10 digits (XXX-XXX-XXXX) and be	If you do not receive a verification code text within 5 minutes, check to make sure that you do not have
"Resend." Also, check	based in the United States or	

## **Creating Your Account (continued)**



characters and be unique.	C Back WEISER.	
These will be used for account recovery and lost password.	Please enter the password for the account.	Back WEISER
Back WEISER.	First Name : John Last Name : Doe Email : johndoe⊛example.com Phone Number : (949) 555-1234	Please enter the password for the account. First Name : John
Please select 3 security questions and provide answers for each which will be used for password recover. We will not have access to this information.	New Password	Email : johndoe@example.com Pho Success
Security Question #1  Answer	Re-enter New Password	Your account has been created
Security Question #2	Next	•••••
Answer		Next
Security Question #3		
Answer		
Next	Password must be 8 to 20 characters, and include at least:	
	One uppercase letter	
Please note that Weiser	One lowercase letter	
will not have access to the	One number	
answers you provide so be sure to remember your answers.	One of the following     special characters: ^ \$ *     ? -! @ # % &	
	NOTE: All other special	

## IMPORTANT NOTE

In some instances, the virtual keyboard may be hiding some fields and the "Next" button. If this occurs, tap "Done" on the virtual keyboard or "Back" on the phone to minimize the virtual keyboard (may vary by device).