
Changing Lock Settings

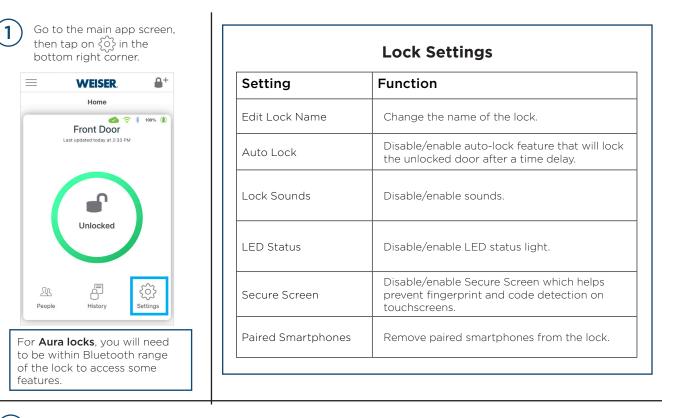



(2) Tap the setting you would like to change and follow the instructions in the chart below to set the parameters.

<u> </u>	<pre>K Back WEISER</pre>	. (i)	
To Edit Lock Name , enter a new name for the lock, then tap "Next" on the virtual keyboard.	Home Front Door	95% ()	To enable/disable Auto Lock, tap on C to toggle the setting.
Front Door	Edit Lock Name	Front Door >	Auto Lock Delay
Locks within the same Home must have unique names.	Auto Lock Lock Sounds LED Status	30 seconds >	30 Seconds
To disable/enable Lock Sounds , tap on 💽 to toggle the setting.	Secure Screen Paired Smartphones Oelete Lock	> >	3 Minutes 5 Minutes 10 Minutes
► Halo Touchscreen only: To disable/enable Secure Screen, tap on to toggle the setting.	To remove Paired Smartphones , tap on o next to the smartphone device name you would like to remove. Paired Smartphones		To change the time delay, tap on the desired time delay. At least one Access Code must be programmed in order to enable Auto Lock.
	JohnDoeiPhone DonnieViPhone		To disable/enable LED Status, tap on to toggle the setting.
	The lock Owner's si cannot be rem Aura Locks only : On this smartphone will able to view/contro	ioved. ce removed, no longer be	