


There are two ways to enable Alexa voice control of your Weiser Halo Smart Lock:

Method 1 - Linking the Weiser Smart Home skill


Method 2 - Adding a lock to your Alexa account

Method 1 - Linking the Weiser Smart Home skill

 
- 1 On your Android or iOS device, open the **Alexa** app.

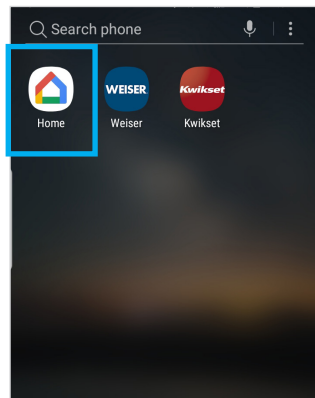


- 2 Tap on the hamburger menu.

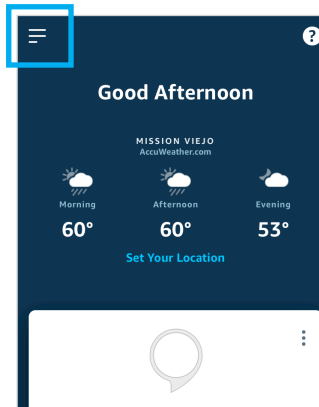 


- 3 Tap on **Skills and Games**.

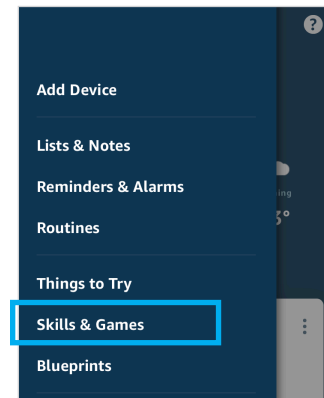 


- 4 Tap the search icon on the upper right of the screen.

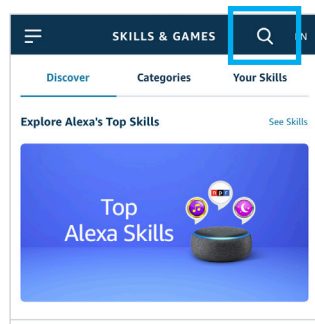 

 
- 5 Search for "**Weiser Smart Home**" and tap on it.

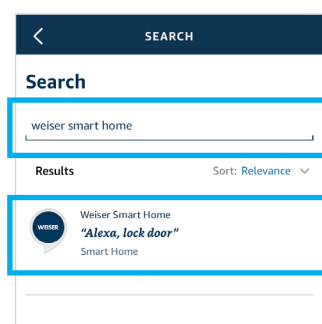


- 6 Tap **Enable to Use**.

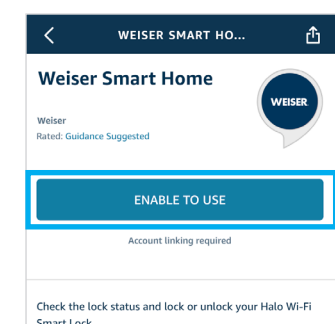 

 
- 7 On the account linking page, enter your Weiser app username and password, then tap **Sign In**.

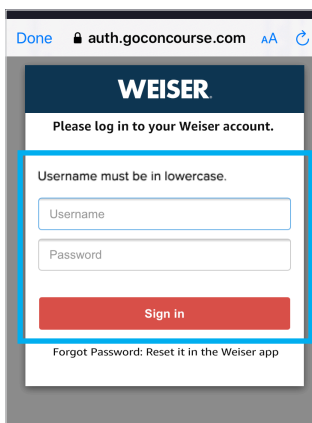

 - 8 When the account linking is complete, tap the **X** in the top right corner to continue to device discovery.

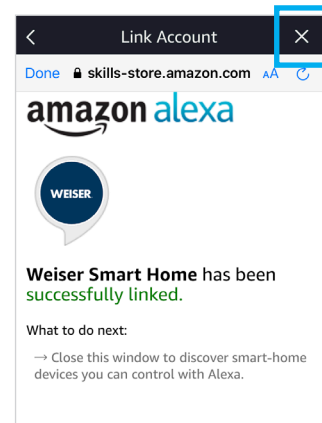


 - 9 Tap "**Discover Devices**" to show the newly discovered Halo devices that you can control using Alexa.

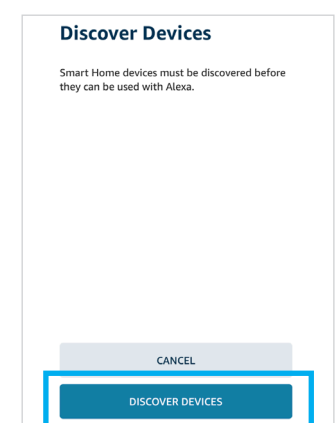


Continue to the next page for additional steps.

 
10 Wait while Alexa searches for your device.

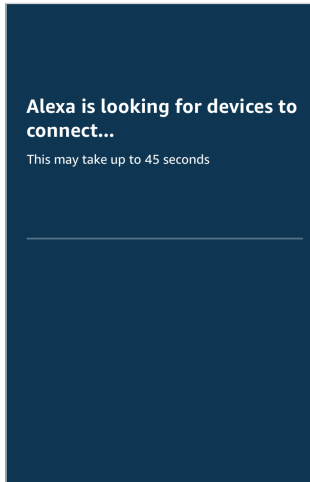

 
11 After your device is discovered, tap **Set Up Device**.

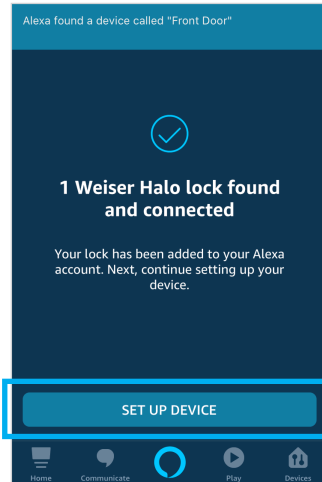

 
12 You can tap **Skip** or tap **Choose Group** to add your device to a group.

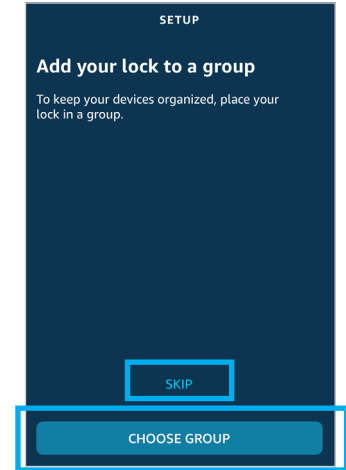

 
13 Tap the group name and **Add to Group** to add the device.

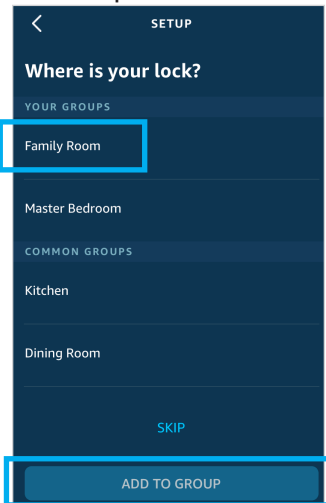

 14 The device is now in the group. Tap **Continue**.

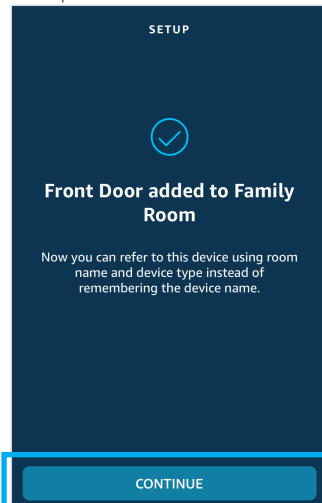

 15 Your device is now ready to use. Tap **Done**.

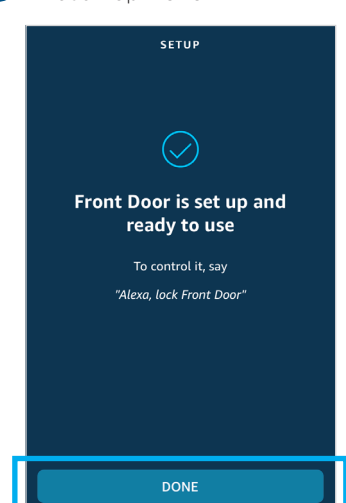

16 You're done! Now, you are able to use the following commands:

"Alexa, is [Lock Name] unlocked?"

"Alexa, is [Lock Name] locked?"

"Alexa, lock [Lock Name]."


"Alexa, unlock [Lock Name]."

NOTE: Unlocking will require an additional PIN for security.


For a secondary method of enabling Alexa, continue to the next page.

Method 2 - Adding a lock to your Alexa account

 
- 1 On your Android or iOS device, open the **Alexa** app.

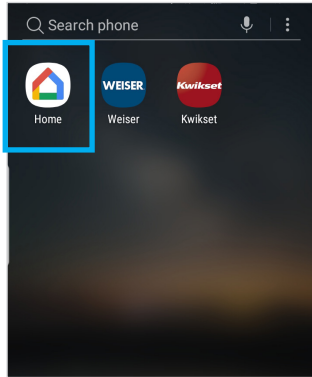


- 2 Tap on the hamburger menu.

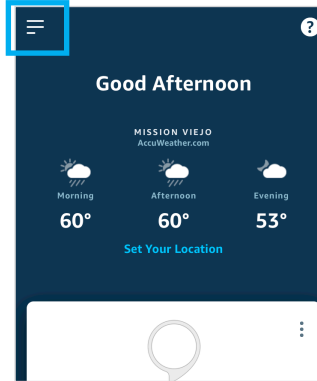 


- 3 Tap on **Add Device**.

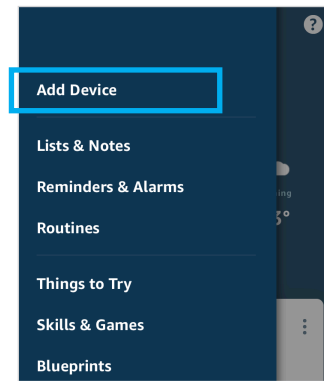 

 - 4 Scroll down until you see **Lock** then tap on it.

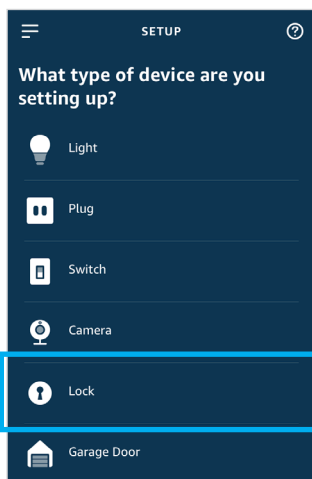


 - 5 Scroll down until you see **Weiser Halo** then tap on it.

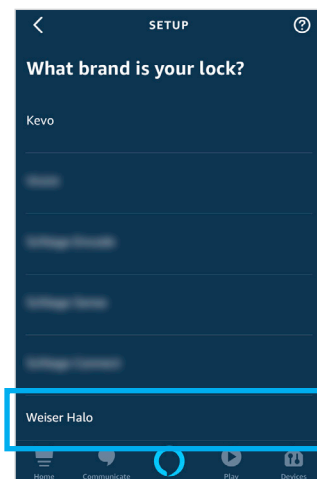


- 6 Set up your Weiser account and activate your lock if you haven't already.

 
If your Weiser account is already set up and your lock is already activated, tap **Continue**.

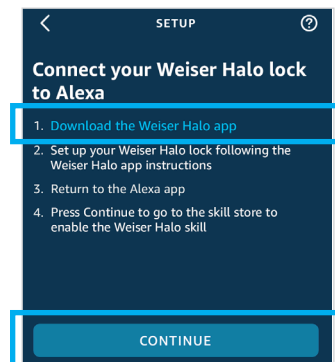


- 7 Tap **Enable to Use**.

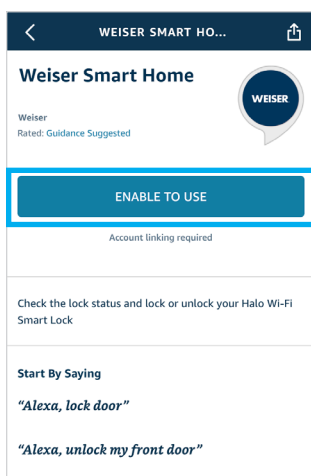 

 - 8 On the account linking page, enter your Weiser app username and password, then tap **Sign In**.

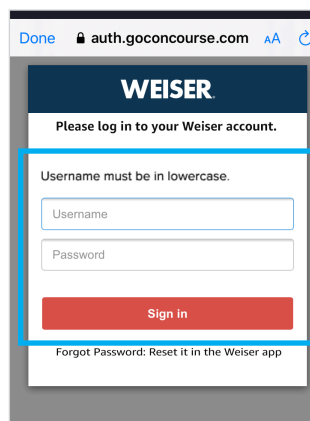


 - 9 When the accounting linking is complete, tap the **X** in the top right corner to continue to device discovery.

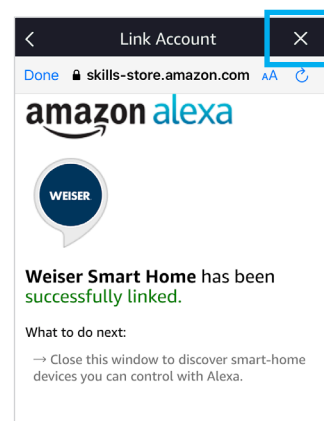


Continue to the next page for additional steps.

 
- 10 Tap “**Discover Devices**” to show the newly discovered Halo devices that you can control using Alexa.

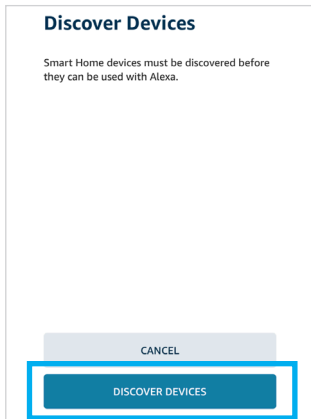

 
- 11 Wait while Alexa searches for your device.

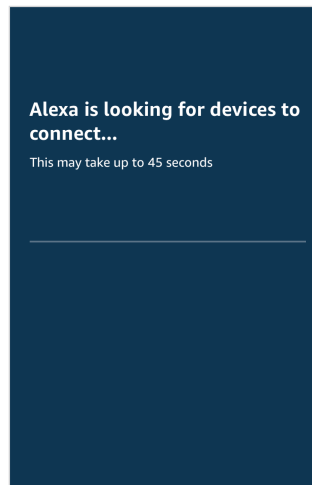

 
- 12 After your device is discovered, tap **Set Up Device**.

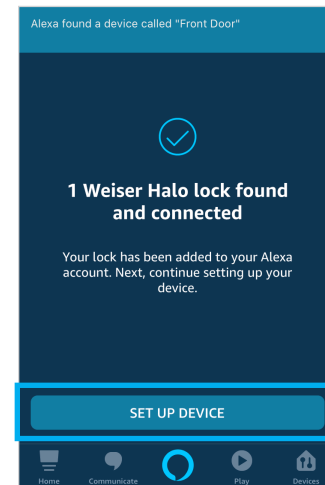

 
- 13 You can tap **Skip** or tap **Choose Group** to add your device to a group.

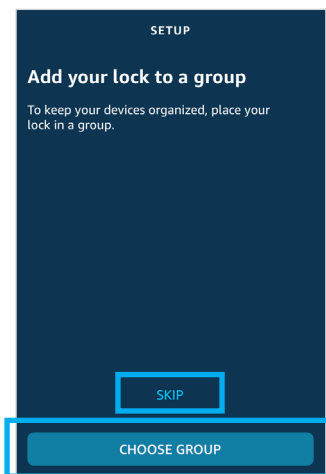

 
- 14 Tap the group name and **Add to Group** to add the device.

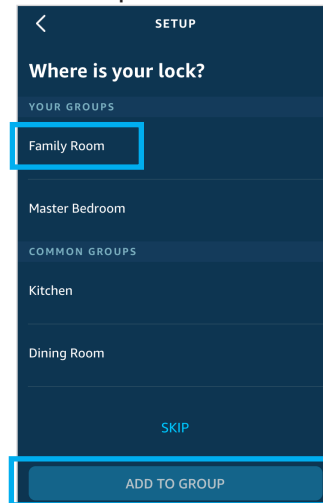

 - 15 The device is now in the group. Tap **Continue**.

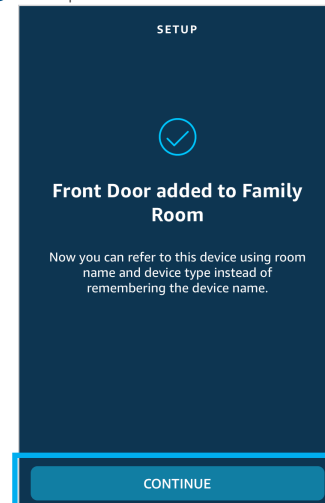

 - 16 Your device is now ready to use. Tap **Done**.

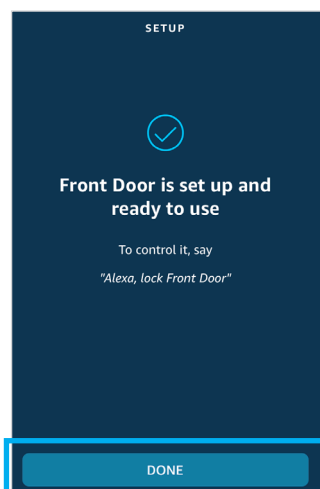

- 17 You're done! Now, you are able to use the following commands:

“Alexa, is [Lock Name] unlocked?”

“Alexa, is [Lock Name] locked?”

“Alexa, lock [Lock Name].”

“Alexa, unlock [Lock Name].”

NOTE: Unlocking will require an additional PIN for security.