 


CHS 3305 Changing Station Instructions

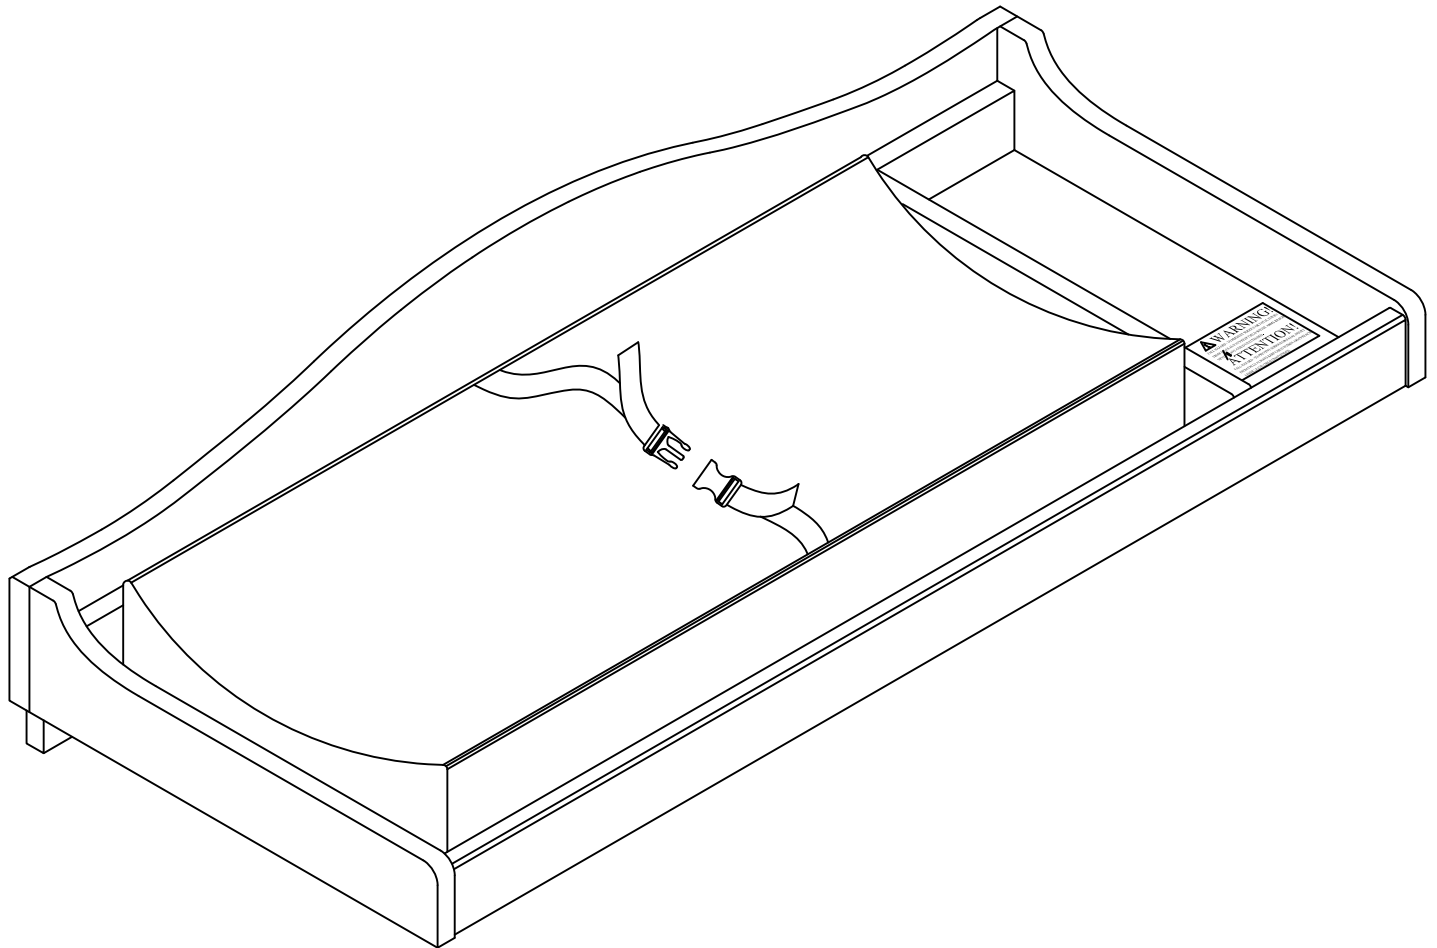

Your Young America changing station is designed with your child's safety in mind. It is certified to meet all safety guidelines established by ASTM International and the CPSC-Consumer Product Safety Commission.

Thank you for purchasing a Young America changing station. If you find that you are missing a part or if a part is defective in any way, contact your Young America retailer for assistance.

READ THESE INSTRUCTIONS CAREFULLY BEFORE ATTEMPTING TO USE THIS CHANGING STATION.

 
SAFETY WARNINGS:

1. FALL HAZARD - To prevent death or serious injury, always keep child in arms reach.
2. This Changing Station must be secured to a level, stable and structurally sound surface with minimum dimensions of 43 1/2" w X 18" d.
3. Read all instructions before use of the add-on changing unit.
4. Keep instructions for future use.
5. Do not use the add-on changing unit if it is damaged or broken.
6. Use only the changing pad provided by the manufacturer.
7.  **WARNING:** The weight of the occupant of this changing table is not to exceed 30 pounds.


CHS 3305 Changing Station Attachment to Dresser Instructions

Hardware Included:

4-1 1/4" Wood Screws

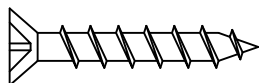


4-Adhesive Felt Pads

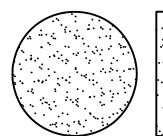 



Tools Required:

Phillips head screwdriver

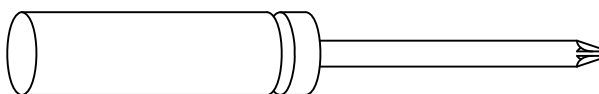

Assembly Instructions:

1. The 1 1/4" wood screws and the felt tabs are bagged together and attached to the bottom panel of the Changing Station. Remove the adhesive felt pads from the strip and place them on the bottom 4 corners of the Changing Station.
2. Position the dresser in a way that you can access the back of it easily.
3. Carefully position the Changing Station on top of the dresser. Center the Changing Station on the top of the dresser left to right and so that the front of the back rail of the Changing Station is against the back edge of the dresser top.
4. Attach the Changing Station to the back of the dresser by inserting the four 1 1/4" long wood screws that are provided through the pre-drilled holes along the bottom edge of the Changing Station back rail. Tighten the screws with a phillips head screwdriver.
5. After securing all four screws, carefully position the dresser in the desired location in your room.

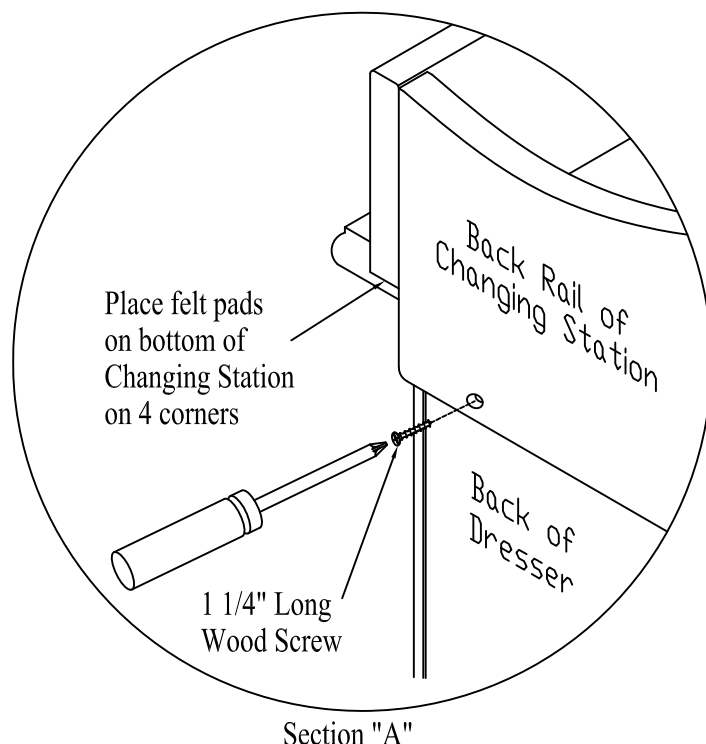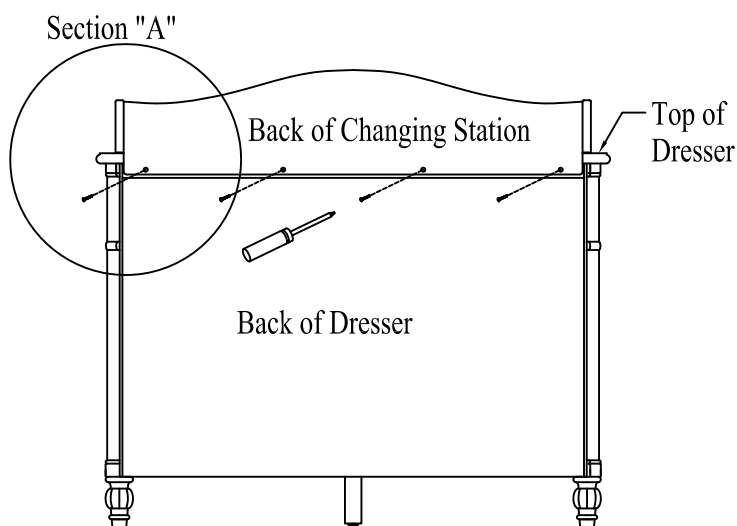


**Note:


Your furniture may have different design features than those shown in drawing.

PRODUCT USE:


- This Changing Station is intended for use with the supplied changing pad in place. Do not use without the supplied pad.
- Have any baby products that you will need, such as powder, wipes, etc., easily accessible. These items can be placed in the partitioned section on the right hand side of the Changing Station.
- Always use the restraining straps when using the Changing Station. Adjust the length of the strap to fit child and operate the buckle as shown below.

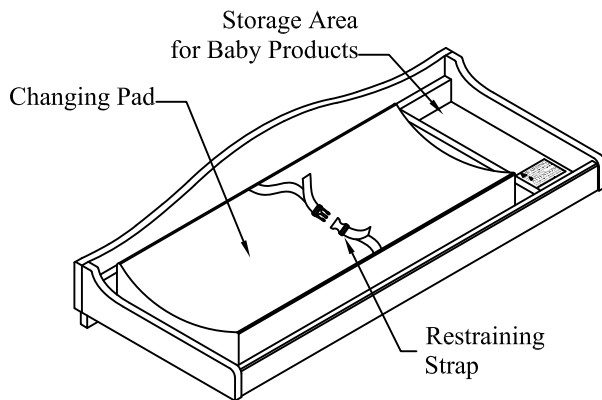

To Connect Buckle:
 1. Adjust strap length
 2. Engage ends fully

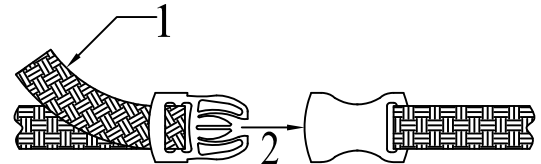

 To Release Buckle:
 1. Compress buckle lock
 2. Separate buckle ends

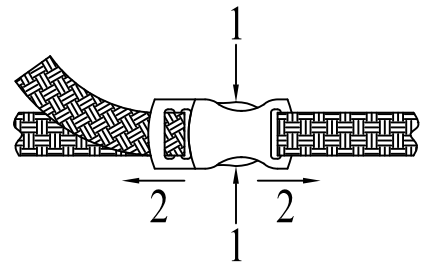

MAINTENANCE:

Periodically check to make certain all screws are fastened securely.

If you are missing a part or need a replacement part, do not use substitute parts. Ask your dealer for replacement parts or contact Customer Service at (800) 659-7297.

CLEANING:

Mix together a mild solution of gentle dishwashing liquid and water, apply to the crib surface using a soft clean cloth lightly dampened in the solution. Rinse with clear water, using a lightly dampened, soft clean cloth, then dry all surfaces thoroughly with a dry cloth. **NO ABRASIVE CLEANERS, SCOURING PADS, STEEL WOOL OR COARSE RAGS SHOULD BE USED TO CLEAN THIS FINE FURNITURE.**

KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.

IMPORTANT: REPLACEMENT PARTS MAY BE OBTAINED FROM ANY OF OUR STANLEY DEALERS!

For additional consumer information, call our Customer Services Department at 1-(800) 659-7297 Monday-Friday, 8-5 Eastern.

Stanley Furniture Company
 200 N Hamilton St
 No. 200
 High Point, NC 27260