


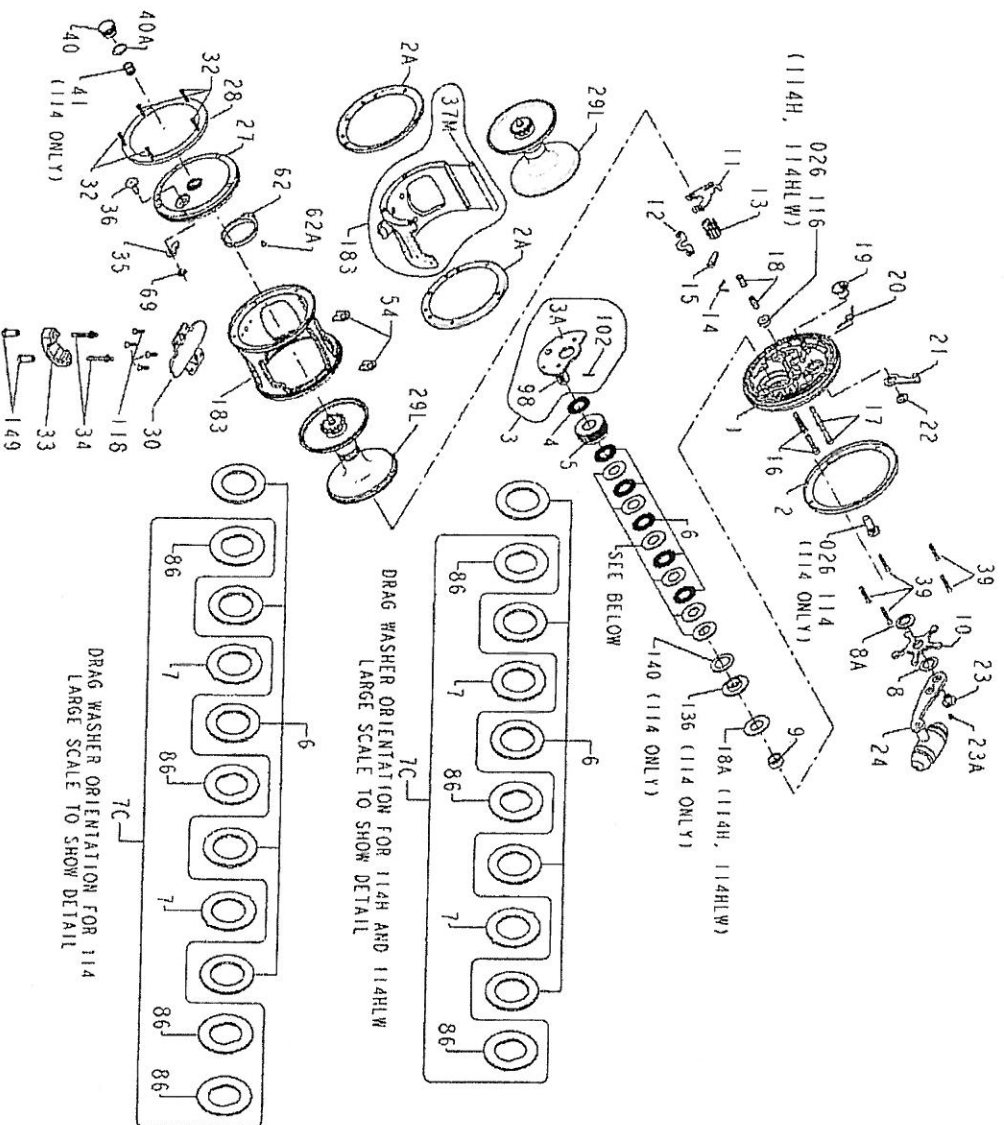

PARTS LIST FOR MODEL 114, 114H, 114HLW



KEY	114	114H	114HLW	DESCRIPTION
1	001 114	001 114H	001 114HL	Right Side Plate
2	002N114	002N114H	002N114HL	Right Side Ring
2A	003 114	002 114H	N/A	Inner Ring (2 Req)
3	003 114	003 114H	003 114HL	Bridge Assembly
3A	003 114-1	003 114H-1	003 114HL-1	Bridge Sub-Assembly
4	004 114	004 115	004 115	Fiber Washer
5	005 114	005 115	005 115	Main Gear
6	006 114	006 115	006 115	Fiber Drag Washer (5 req)
7	007 114	007 115	007 115	Metal Ear Washer (2 req)
7C	007C114	007C115	007C115	Metal Drag Washer Set
8	008 114	008 114	008 114	Tension Spring
8A	008 115	008 115	008 115	Spacing Sleeve
9	009N114	009 114H	009 114H	Star Drag Wheel
10	010 114	010 114	010 114	Eccentric Jack
11	011 114	011 114	011 114	Pinion Yoke
12	012 114	012 114	012 114	Pinion
13	013 114	013 114H	013 114H	Pinion Dog
14	014 114	014 114	014 114	Lower Bridge Screw (2 req)
15	015 114	015 114H	015 114H	Upper Bridge Screw (2 req)
16	016 114	016 114	016 114	Clutch (Yoke) Spring (2 req)
17	017 114	017 114	017 114	Spring Disc
18	018 114	018 114H	018 114H	Eccentric
18A	N/A	019 114	019 114	Eccentric Spring
19	019 114	020 114	020 114	Eccentric Lever
20	020 114	021 114	021 114	Eccentric Screw
21	021 114	022 060	023 060	Handle Lock Screw
22	023 060	023 060	023 060	Handle
23	023 116	023 116	023 116	R.S. Bearing
23A	110 060	110 060	110 060	Left Side Plate
24	024 057	024 057	024 057	Left Side Ring
26	026 114	026 116	026 116	Spool Assembly
27	027 114	027N114H	027N114H	Stand
28	002N114	002N114H	002N114H	L.S. Screw (5 req)
29	029L114	029L114HL	029L114HLW	*Ringed Rod Clamp (Optional)
30	030 114HL	030 114HL	030 114HL	Rod Clamp Screw (2 req)
32	032 021	032 021	032 021	Click Tongue
33	033 340	033 340	033 340	Click Button
34	*033R114	*033R114	*033R114	+Frame Post
35	034 010KG	034 010KG	034 010KG	R.S. Plate Screw (5 req)
36	035 114	035 114	035 114	Left Side Bearing
37	036 114H	036 114H	036 114H	Left Side Bearing O-Ring
38	+037M114	+037M114	N/A	Bearing Spring
39	039 012	039 012	039 012	Harness Lug (2 req)
40	040 114	040 114HL	040 114HL	Click Spring
40A	041 114	120 114H	120 114H	Click Spring Screw
41	054 114	N/A	N/A	Retaining Ring
54	054 114	054 114	054 114	Metal Keyed Washer
62	062 114	062 114	062 114	Gear Sleeve
62A	063 209	063 209	063 209	Sleeve Pin
69	069B600	069B600	069B600	Stand Screws (4 req)
86	086 114L (4)	086 115L (3)	086 115L (3)	Pressure Plate Washer
98	098 114	098 114	098 114	Felt Washer
102	102 114	102 114	102 114	Rod Clamp Nut (2 req)
118	118 080	118 080	118 080	Frame
136	136 114	N/A	N/A	
140	140 114	N/A	N/A	
149	149 045	149 045	149 045	
183	+183 114	+183 114H	183 114HLWT	

* = Not Shown
+ = When replacing an older frame (that uses a shield) you must also order 37M114 Frame Post.
N/A = Not Applicable