



| <u>KEY NO.</u> | <u>DESCRIPTION</u> | <u>PART NO.</u> |
|----------------|---------------------------------|-----------------|
| 1 | Housing w/Bushing | 001 714Z |
| 4 | Dog | 004 716 |
| 5 | Dog Spring | 005 716 |
| 6A | Eccentric | 006A716 |
| 6B | Eccentric Liner | 006B700Z |
| 6D | Eccentric Spring | 006D716 |
| 6E | Eccentric Lever | 006E716 |
| 8 | Main Gear w/Ratchet and Shaft | 008 716 |
| 13 | Crosswind Screw | 013 716 |
| 14 | Crosswind Roller | 014 716 |
| 15 | Handle Assembly (Complete) | 015 714Z |
| 17 | Handle Washer | 017 716 |
| 19 | Pinion Gear | 019 716 |
| 20 | Pinion Bearing | 020 722 |
| 21 | Bearing Retainer | 021 716 |
| 22 | Eccentric Screw | 022 109 |
| 22A | Bail Release Ramp | 022 716 |
| 23 | Bearing Retainer Screw (2 req.) | 023 716 |
| 24 | Bail Wire Assembly | 024 714 |
| 27 | Rotor Cup | 027 714Z |
| 28 | Bail Release Arm | 028 714 |
| 29 | Release Arm Pin | 029 716 |
| 30 | Arm Release Spring | 030 716 |
| 31 | Bail Arm Screw | 031 716 |
| 31A | Bail Screw | 031A716 |
| 32 | Bail Spring | 032 716 |
| 33 | Bail Arm Bumper | 033R712 |
| 34 | Bail Arm | 034 716 |
| 35 | Line Roller | 035 716 |
| 36 | Bail Lock Nut | 036 700 |
| 37 | Rotor Cup Washer | 037 716 |
| 38 | Rotor Cup Nut | 038 720 |
| 39 | Spool Shaft Assembly | 039 716 |
| 40 | Spool Sleeve | 040 716 |
| 43 | Crosswind Arm | 043 716 |
| 44 | Crosswind Shaft Screw | 044 716 |
| 45 | Housing Plate | 045 714Z |
| 46 | Housing Plate Screw | 046 716 |
| 47 | Spool Assembly (Complete) | 047 714Z |
| 48 | Click Spring | 048 714 |
| 50 | Release Arm Screw (2 req.) | 050 712 |
| 50A | Click Spring Screw | 050 716 |
| 52 | Drag Knob | 052 714Z |
| 54 | Drag Spring | 054 714 |
| 56T | Drag Washer (Teflon®) | 056T714 |
| 57 | Metal Keyed Washer | 057 430 |
| 60 | Rear Drag Washer | 060 716 |
| 62A | Dog Screw | 062A716 |