

# Cascapedia MkII Reel Series


The new Cascapedia MkII is a stunning lightweight version of one of the classic reels of all time. The reel retains its looks, its charm and its quality but it is brought so bang up to the minute that it will perfectly blend in with modern rods. What you've got here is a true fishing version of an ageless classic. Available in four sizes, two trout and two salmon, the #2/3/4 and #5/6/7 versions offer a wide ranging click check whilst the larger #8/9 and #10/11 feature a powerful disc drag capable of stopping the largest salmon.

The drag regulator button also has a pointer for easy reference in the heat of battle. The matt black side plates give a high tech sleek appearance that is perfectly complemented by the rims, which are hand-polished to a mirror-like finish. Above all, the 'S' shaped handle is retained, the immediate emblem of this magnificent reel.

The new Cascapedia MkII is a reel to collect, to look at, to treasure. But above all, it's a reel for the modern day, to be used with pleasure and admiration.

*Jamie Hardy*

J. L. Hardy

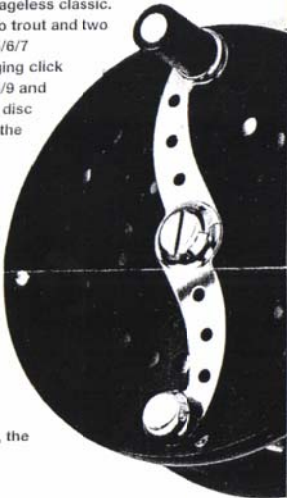

## General Care

The same method of cleaning is valid for all reels in the freshwater Cascapedia Mk II reel range.

- 1 Remove line and backing.
- 2 Flush away dirt by placing the reel under a stream of warm water.
- 3 Dry carefully with a lint free cloth.
- 4 Always turn the drag to the minimum setting to avoid compression of the pad.
- 5 Always ensure the reel and line are dry before storing in the case or pouch.




## Lubrication Maintenance

### Regular Maintenance Requirements

- 1 Using a well fitting screwdriver, remove handlebar screw by turning anti-clockwise, this gives access to the lubrication point. Oil this point until the reservoir is full. We recommend that this is done after every fishing outing.

### Annual Maintenance Requirements

- 1 Using a well fitting screwdriver, remove handle bar screw by turning anti-clockwise.
- 2 Lift handlebar clear of the drum location flats.
- 3 Using a well fitting screwdriver remove the S plate retaining screws.
- 4 Remove the drum and the plate out of the frame.
- 5 Flush away dirt by placing the drum/frame/plate under a stream of warm water.
- 6 Dry carefully with a lint free cloth.
- 7 Oil tongues & pivot studs.
- 8 Grease Spindle.
- 9 Re-assemble.

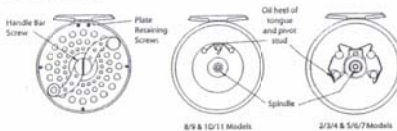


## Changing your reel from left to right hand wind

All Cascapedia reels are designed to work in right and left hand wind. When you receive your reel, it will be set for left hand wind.

To convert your reel to right hand wind:- 2/3/4 & 5/6/7 models

- 1 Remove the spool from the frame, (follow 1-4 on annual maintenance steps).
- 2 Turn the LH tongue into the off position using ones fingers.
- 3 Turn the RH tongue into the engaged position as shown below.
- 4 Re-assemble drum/plate into frame.

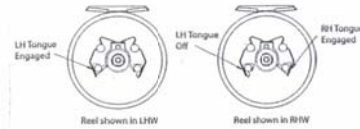

To convert your reel to right hand wind:- 8/9 & 10/11 models

- 1 Remove the spool from the frame, (follow 1-4 on annual maintenance steps).
- 2 Remove the 3 fixing screws from the checkwheel plate which is attached to the rear of the spool.
- 3 Remove the plate from the spool.
- 4 Remove the black clutch assembly unit out of the machined housing. Turn the housing over so that the identification letter R is visible and return the unit into the machined housing.
- 5 Refit the checkwheel plate onto the rear of the spool and tighten the 3 screws.
- 6 Re-assemble the drum / plate into the frame.




## Cascapedia Mk II Drag/Click Adjustment.

The drag/click mechanism can be adjusted by simply turning the regulator button on the face on the frame, clockwise to increase the drag/click, anti-clockwise to decrease. When the reel is not in use the drag/click should be turned to the minimum setting.

Disengagement of outgoing click (8/9 & 10/11 models only)

The reel can be made to run in silent mode by simply removing the tongue & spring out of the frame and storing in the reel pouch.

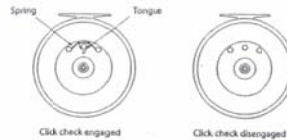

## Lifetime original user warranty

All Hardy Cascapedia reels carry an original owner lifetime warranty against any defect in workmanship or materials. Should there be any defect, Hardy will, at its option, repair or replace the item. This warranty does not cover damage caused by misuse, lack of maintenance, negligence or normal wear and tear. Warranty claims with the proof of purchase should be sent to the Customer service department (using the Hardy address).