

# Uniqua Series 1



This reel has been made by craftsmen using the best materials available to ensure its reliability. Its high quality components are precision machined with the absolute minimum susceptibility to wear or the need for future readjustment.


Given care and periodic cleaning, your reel will be a faithful servant and give you years of superb performance.

Hardy & Greys Limited, Willowburn, Alnwick,
Northumberland, NE66 2PF, England
Tel +44 (0)1665 602771 Fax +44 (0)1665 602389
www.hardyfishing.com sales@hardyfishing.com

#### Care and maintenance

The same method of cleaning is valid for all reels in the Uniqua Series 1 Reel range.

- 1. Remove line and backing.
- 2. Remove the spool
- 3. Flush away dirt by placing the spool and frame under a stream of warm water.
- 4. Dry carefully with a lint free cloth.
- 5. Lubricate with a good quality oil & grease at the points illustrated on the diagrams.
- 6. Always ensure the spindle head is adequately greased.
- Always turn the disc-drag to the minimum setting to avoid compression of the pads & springs.
- 8. Always ensure the reel and line are dry before storing in the case or pouch.

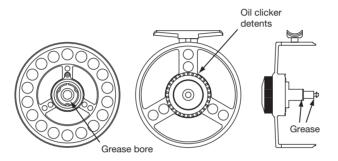


## Changing your reel from left to right hand wind

All Uniqua reels are designed to work in right and left hand wind. When you receive your reel, it will be set for left hand wind.

#### To convert your reel to right hand wind:

- 1. Remove the spool from the frame.
- Remove the circlip which holds the one way clutch into the pocket on the rear of the spool. The white inner sleeve of the one way clutch is visible in left hand mode.
- 3. Remove the one way clutch from the spool.
- Turn the one way clutch through 180 degrees and replace into the pocket in the rear of the spool, the stainless steel housing will now be visible.
- Refit the circlip to secure the one way clutch into place. Replace the spool back into the frame, your reel should now be operating in the right hand wind mode.

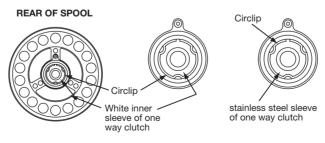

Left hand wind

Right hand wind

## **Uniqua Series 1 disc-drag**

The disc drag mechanism can be adjusted by simply turning the regulator button on the face of the frame, clockwise to increase the drag, anti-clockwise to decrease the drag. When the reel is not in use, the drag should be turned to the minimum setting.

#### Lifetime original user warranty

All Hardy Uniqua Series 1 reels carry an original owner lifetime warranty against any defect in workmanship or materials. Should there be any defect, Hardy & Greys Ltd. will, at its option, repair or replace the item. This warranty does not cover damage caused by misuse, lack of maintenance, negligence or normal wear and tear. Warranty claims with the proof of purchase should be sent to:

Customer Service Department Hardy & Greys Limited Willowburn Alnwick Northumberland NE66 2PF England

Tel +44 (0)1665 602771 Fax +44 (0)1665 602389

www.hardyfishing.com sales@hardyfishing.com



# Uniqua<br/>Series 2



This reel has been made by craftsmen using the best materials available to ensure its reliability. Its high quality components are precision machined with the absolute minimum susceptibility to wear or the need for future readjustment.


Given care and periodic cleaning, your reel will be a faithful servant and give you years of superb performance.

Hardy & Greys Limited, Willowburn, Alnwick,
Northumberland, NE66 2PF, England
Tel +44 (0)1665 602771 Fax +44 (0)1665 602389
www.hardyfishing.com sales@hardyfishing.com

#### Care and maintenance

The same method of cleaning is valid for all reels in the Uniqua Series 2 Reel range.

- 1. Remove line and backing.
- 2. Remove the spool
- 3. Flush away dirt by placing the spool and frame under a stream of warm water.
- 4. Dry carefully with a lint free cloth.
- 5. Lubricate with a good quality oil & grease at the points illustrated on the diagrams.
- 6. Always ensure the spindle head is adequately greased.
- Always turn the disc-drag to the minimum setting to avoid compression of the pads & springs.
- 8. Always ensure the reel and line are dry before storing in the case or pouch.

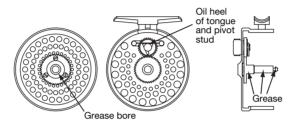


# Changing your reel from left to right hand wind

All Uniqua Series 2 reels are designed to work in right and left hand wind. When you receive your reel, it will be set for left hand wind.

#### To convert your reel to right hand wind:

- 1. Remove the spool from the frame
- Remove the circlip which holds the one way clutch into the pocket on the rear of the spool. The white inner sleeve of the one way clutch is visible in left hand mode.
- 3. Remove the one way clutch from the spool.
- Turn the one way clutch through 180 degrees and replace into the pocket in the rear of the spool, the stainless steel housing will now be visible.
- Refit the circlip to secure the one way clutch into place. Replace the spool back into the frame, your reel should now be operating in the right hand wind mode.

#### REAR OF SPOOL

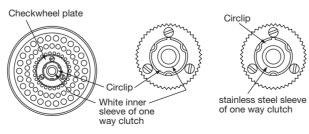

Left hand wind


Right hand wind

# **Uniqua Series 2 Disc drag**

The disc drag mechanism can be adjusted by simply turning the regulator button on the face of the frame, clockwise to increase the drag, anti-clockwise to decrease the drag. When the reel is not in use, the drag should be turned to the minimum setting.

#### Disengagement of outgoing click

The reel can be be made to run in silent mode by simply removing the tongue & spring out of the frame and storing in the reel pouch.

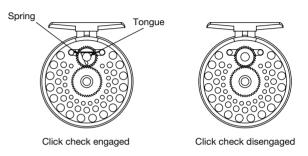

#### Lifetime original user warranty

All Hardy Uniqua Series 2 reels carry an original owner lifetime warranty against any defect in workmanship or materials. Should there be any defect, Hardy will, at its option, repair or replace the item. This warranty does not cover damage caused by misuse, lack of maintenance, negligence or normal wear and tear. Warranty claims with the proof of purchase should be sent to:

Customer Service Department Hardy & Greys Limited Willowburn Alnwick Northumberland NE66 2PF England

Tel +44 (0)1665 602771 Fax +44 (0)1665 602389

www.hardyfishing.com sales@hardyfishing.com