

Programming

IMPORTANT: Before any programming sequence, make sure that your door is open and unlocked.


For all programming sequences below, success is indicated by 2 beeps.
If unsuccessful, you will hear 3 beeps.




Note: If the lock is muted, you will not hear the lock beeping.

Move swiftly during programming. If no digit is pressed for 10 seconds, the touchscreen will turn off and you will need to restart the procedure.

How to change your Programming Code




The Programming Code (PC) will not unlock your door. It is an added security feature that is used to set up all functions.

 The default PC is 0-0-0-0. It is recommended that you change it to a code of your own.

1. Enter your existing PC, then press 
2. Press **4** - 
3. Enter a new PC. It must be between 4 and 10 digits.
4. Press 

How to add User Codes




A total of 6 User Codes (and a temporary one-time User Code) may be programmed. Do not program a User Code that is the same as your PC.

1. Enter your existing PC, then press 
2. Press **1** - 
3. Enter a new User Code. It must be between 4 and 10 digits.
4. Press 
5. Test the code: While your door is open, lock it. Enter your new User Code, then press the Lock symbol. The door should unlock.

How to delete individual User Codes






The lock is pre-programmed with a default User Code of 1-2-3-4. It is recommended that you delete this code.

1. Enter your existing PC, then press 
2. Press **2** - 
3. Enter the User Code you wish to delete.
4. Press 
5. Test the code: While your door is open, lock it. Enter the User Code, then press the Lock symbol. The door should not unlock.



How to add a one-time User Code

A one-time user code may be used only once, and then it will be deleted immediately after use.

1. Enter your existing PC, then press 
2. Press **8** - 
3. Enter a new User Code. It must be between 4 and 10 digits.
4. Press 


How to enable/disable User Codes

If User Codes are disabled (example: when you go on vacation), the lock can only be operated by the key and turnpiece until they are enabled again.

1. Enter your existing PC, then press 
2. Press **7** - 
3. Repeat steps 1 and 2 to enable or disable the codes again.



How to delete all User Codes

If all User Codes are deleted, the lock can only be operated by the key and turnpiece until a new User Code is added.

1. Enter your existing PC, then press 
2. Press **3** - 



How to enable/disable Auto-Lock

The Auto-Lock feature automatically re-locks your door 30 seconds after unlocking. This feature is off by default.

1. Enter your existing PC, then press 
2. Press **5** - 
3. Repeat steps 1 and 2 to enable or disable Auto-Lock again.

How to change Auto-Lock time delay

You can set the Auto-Lock time delay between 10 and 99 seconds.

1. Enter your existing PC, then press 
2. Press **6** - 
3. Enter time between 10 and 99 seconds.
4. Press 