# Kirkland's Home

### **Product Instructions for:**

**CONSOLE CASEY 61X14X34** 



#### ASSEMBLY REQUIREMENT

2-Person Assembly

15 Minutes Assembly Time

#### ASSEMBLY PREPARATION

- 1. Choose an assembly location that is flat and in close proximity to where product will be used. Allow ample room to work.
- 2. To prevent scratching of finish, assemble on clean, soft surface such as carpet or cloth.
- 3. Remove all packing material, staples, and packing straps from the carton. Carefully unpack product.
- 4. Review Part List and ensure all components are present and in good condition.

#### SAFETY PRECAUTION

- 1. KEEP ALL HARDWARE OUT OF REACH OF CHILDREN.
- 2. TO AVOID ANY RISK OF SUFFOCATION TO CHILDREN AND ANIMALS, DISPOSE PLASTIC PACKING MATERIAL IMMEDIATELY.

#### ASSEMBLY PRECAUTION

- 1. Prior to each assembly step, identify the required parts and hardware.
- 2. **DO NOT** overtighten hardware, damage may occur.
- 3. **DO NOT** use power tools during assembly.
- 4. **DO NOT** sit or stand on partially assembled product.

#### **CARE AND USE**

- 1. Rated for residential (non-commerical) use only.
- 2. Recommended for indoor use only.
- 3. **DO NOT** use product if any component becomes damaged. Check all hardware periodically and retighten as necessary.
- 4. **DO NOT** sit or stand on product. Use only for intended purpose.
- 5. **DO NOT** drag product across floor. Exercise care when moving product.
- 6. **DO NOT** place hot items directly onto product surface.
- 7. **DO NOT** use harsh abrasives or commerical cleaners. Wipe with soft, damp cloth.
- 8. **DO NOT** allow liquid of any kind to remain on product. Absorption may cause surface damage.

Ensure all parts and hardware are present and in good condition, before disposing packaging.





