


Kirkland's

Product Instructions for:

WINDSOR DINING CHAIR

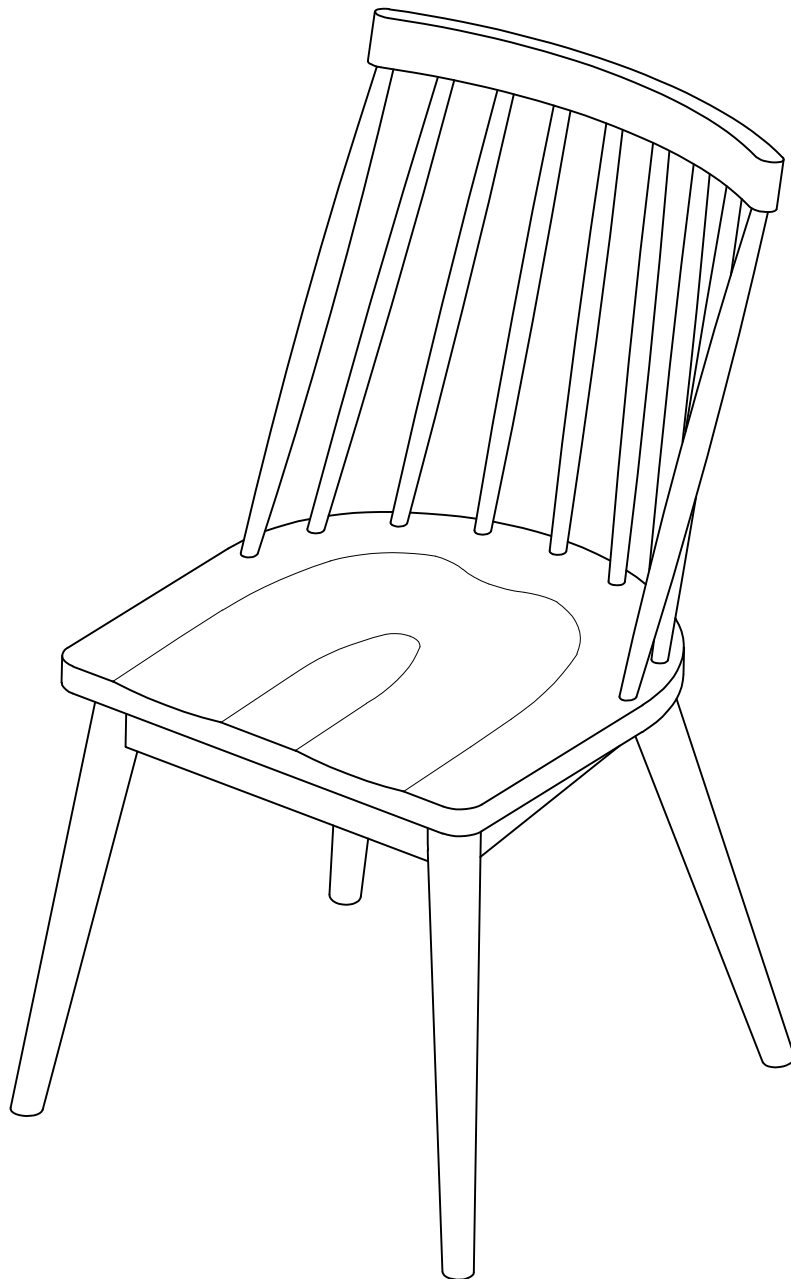

WINDSOR DINING CHAIR

ASSEMBLY REQUIREMENT

1-Person Assembly
5 Minutes Assembly Time

ASSEMBLY PREPARATION

1. Choose an assembly location that is flat and in close proximity to where product will be used. Allow ample room to work.
2. To prevent scratching of finish, assemble on clean, soft surface such as carpet or cloth.
3. Remove all packing material, staples, and packing straps from the carton. Carefully unpack product.
4. Review Part List and ensure all components are present and in good condition.

SAFETY PRECAUTION

- 1. KEEP ALL HARDWARE OUT OF REACH OF CHILDREN.**
- 2. TO AVOID ANY RISK OF SUFFOCATION TO CHILDREN AND ANIMALS, DISPOSE PLASTIC PACKING MATERIAL IMMEDIATELY.**

ASSEMBLY PRECAUTION




1. Prior to each assembly step, identify the required parts and hardware.
2. DO NOT overtighten hardware, damage may occur.
3. DO NOT use power tools during assembly.
4. DO NOT sit or stand on partially assembled product.

CARE AND USE

1. Rated for residential (non-commercial) use only.
2. Recommended for indoor use only.
3. DO NOT use product if any component becomes damaged. Check all hardware periodically and retighten as necessary.
4. DO NOT stand on product. Use only for intended purpose.
5. DO NOT drag product across floor. Exercise care when moving product.
6. DO NOT place hot items directly onto product surface.
7. DO NOT use harsh abrasives or commercial cleaners. Wipe with soft, damp cloth.
8. DO NOT allow liquid of any kind to remain on product. Absorption may cause surface damage.

WINDSOR DINING CHAIR


Ensure all parts and hardware are present and in good condition, before disposing packaging.

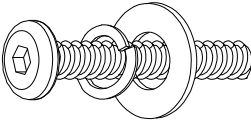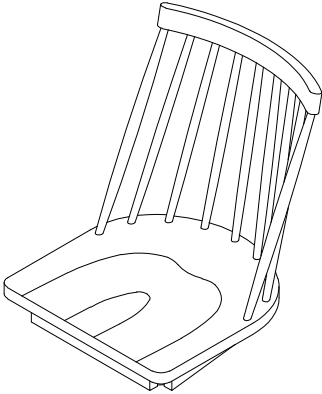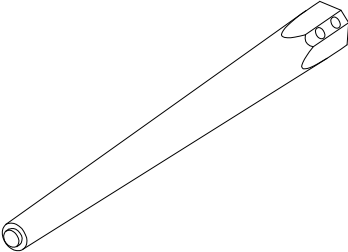Parts/Hardware List	
A Bolts 5/16" x 60mm (8) Open End Washer 5/16" (8) Flat Washer 5/16" (8) 	B Allen Key (1) 
1 Seat frame (1) 	2 Legs (4) 


WINDSOR DINING CHAIR

STEP 1

Tighten completely.

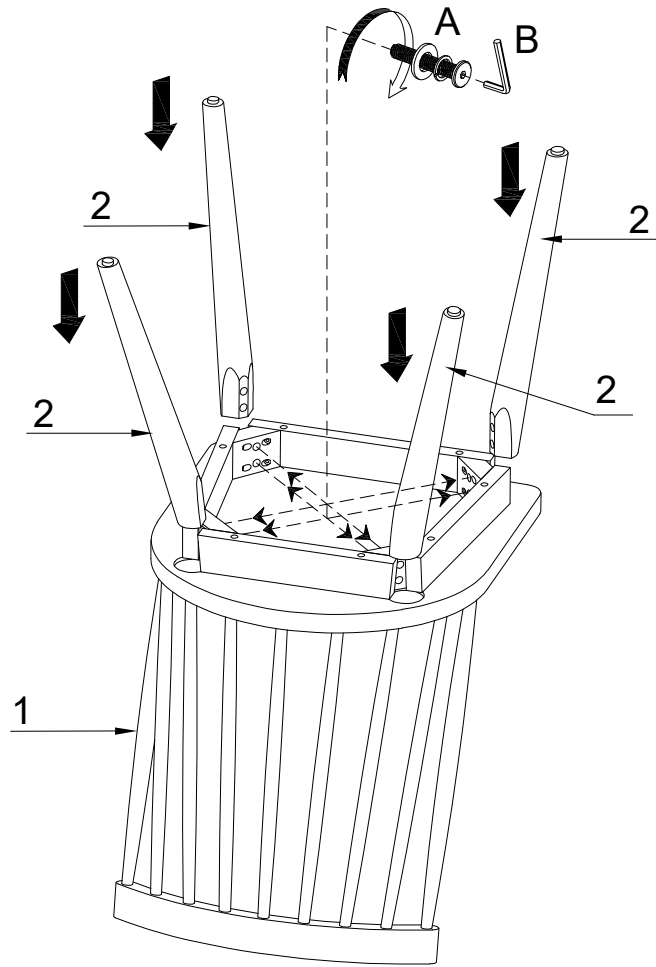

STEP 2

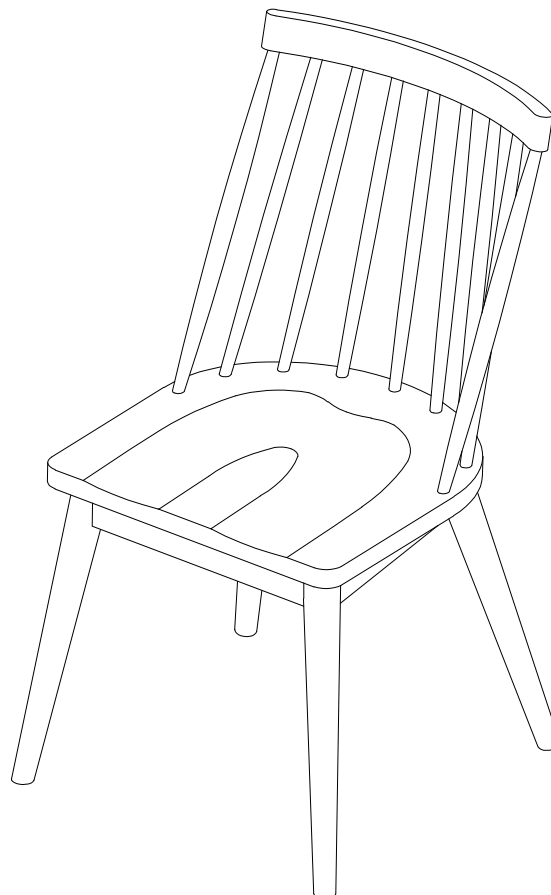

ASSEMBLY COMPLETE.