
# **ASSEMBLY** INSTRUCTIONS

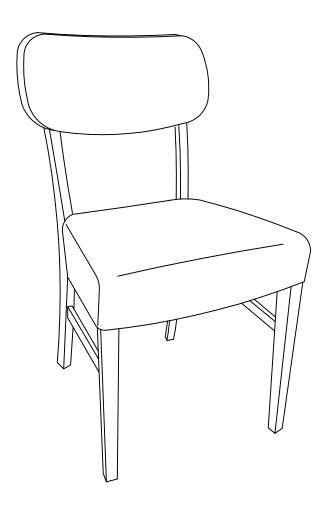

### **TOOLS REQUIRED**



#### Allen Wrench

(Included)



#### **Phillips** Screwdriver

(Not Included)



2 - Persons Recommended

### **ASSEMBLY RATING**



 




**DIFFICULT** 

The Assembly Rating is a 5-point system showing the level of effort needed to assemble a specific product.

VERSION 1# 24-03-15



Are you missing anything?	Check out our Quick Tips!
Double-check all parts, hardware and accessories listed on Page 6 are accounted for.	We recommend reviewing the pre-assembly handouts. Even experts need a refresher now and then!
Should we send any replacements?	Prep Time!
Are there any irregularities or flaws in the parts? We can send replacements!	Please review the assembly instructions and all diagrams prior to assembling. Set up your work- space by laying the parts and hardware out sepa- rately, then begin!

# PRE ASSEMBLY INTRODUCTION

We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.





#### Teamwork

ALWAYS have at least two people to help with transporting and assembling the product to avoid potential injury and/or damage.





#### Suitable Location

Assembling near the area of the intended location is highly recommended.





#### Sufficient Space

Make sure you have enough space to move around during the assembly.





#### **Avoid Scratches**

Use cardboard, blankets or a carpeted area while assembling furniture to prevent scratches.





#### Flat Surface

Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

# ASSEMBLY AND CARE ADVICE



FAILURE TO FOLLOW THE GUIDELINES BELOW MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.



Position each part correctly and insert screws or bolts into their respective holes.




Use the appropriate hand tools or power tools for assembly. Select steps, such as tightening screws and/or bolts, may require hand tools to avoid causing damage during assembly.



Turn clockwise to tighten and only tighten when step is completed or when instructed to do so.



Save the instructions and store any supplied tools for later maintenance.

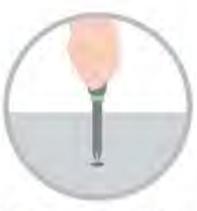


After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE. TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

# **DINING CHAIR**



- Please keep instructions for future reference.
- Check the quantity and irregularity of parts and hardware before you start.

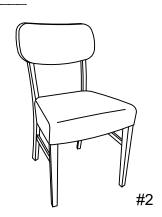


#### **PARTS**










  







Backrest

**Box Seat** 

Front Chair - Left (CL)

Front Chair - Right (CR)









Side Stretcher - Left (CL)

Side Stretcher - Right (CR)

#### **HARDWARE**



B 4pcs x2















M6 FLAT WASHER

JCBC Bolt M6 x 35mm JCBC Bolt M6 x 60mm JCBC Bolt M6 x 80mm

M6 SPRING WASHER



(G) 1pc







M4 x 38mm CB Screw M4 Allen Wrench

# **ASSEMBLY INSTRUCTIONS**


1

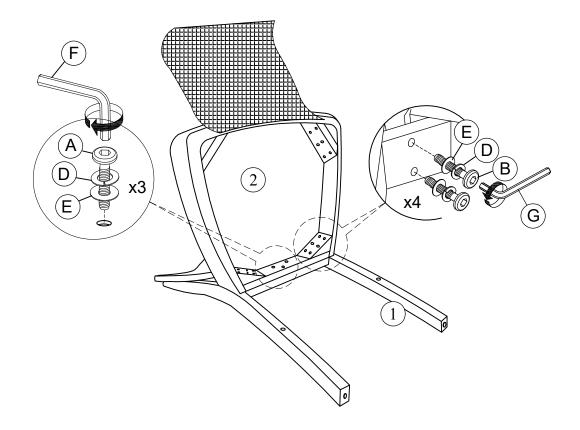


2

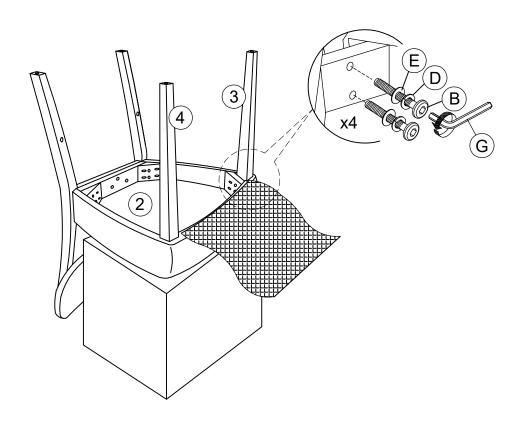

### **ASSEMBLY INSTRUCTIONS**

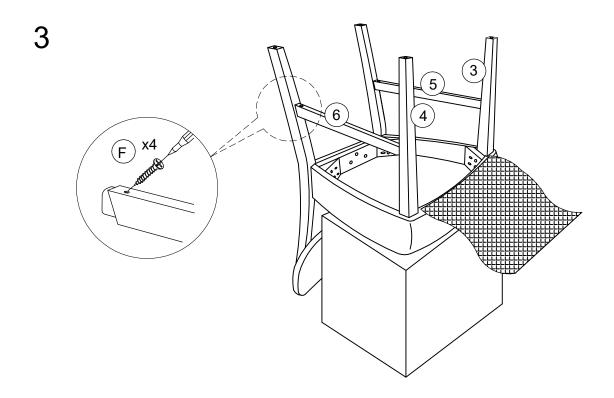

4

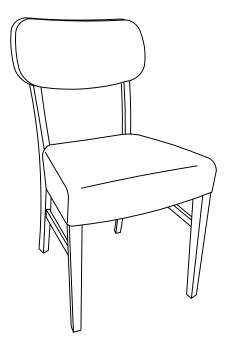

# ASSEMBLY COMPLETED



friese ensure the furniture rests on an even and flat surface. If the product wobbles or feels cose, double-check all polts and/or screws are properly tightened and secured.

### ✓ Keep this handy!

Please retain this instruction manual and any order-related information for future reference.

### ✓ Lift, don't drag!

To avoid damage to product please always LIFT the product when transporting of adjusting the placement.

This product is intended for RESIDENTIAL USE ONLY and not for commercial use.