

INSTRUCTIONS

BATTERY OPERATED: 4 AAA 1.5V batteries required, not included.

TO REPLACE BATTERIES:

1. Remove battery cover by twisting it to the left.
2. Clean the battery contacts and also those of the device prior to battery installation.
3. Insert 2 AAA batteries as shown.
4. Return battery cover back onto candle.

USE:

Press button to operate.
When candle is activated
the automatic timer
lights 6 hours ON,
18 hours OFF,
repeats daily until
pressed OFF
or batteries expire.

CARE:

1. Keep away from water or damp locations.
2. Turn off when not in use to save battery life.
3. Remove used batteries promptly.

**REMOVE BATTERIES IF EXPIRED OR IF PRODUCT IS TO BE LEFT
UNUSED FOR AN EXTENDED PERIOD OF TIME**

