


CROSLEY




F U R N I T U R E

Side Table



CF1342

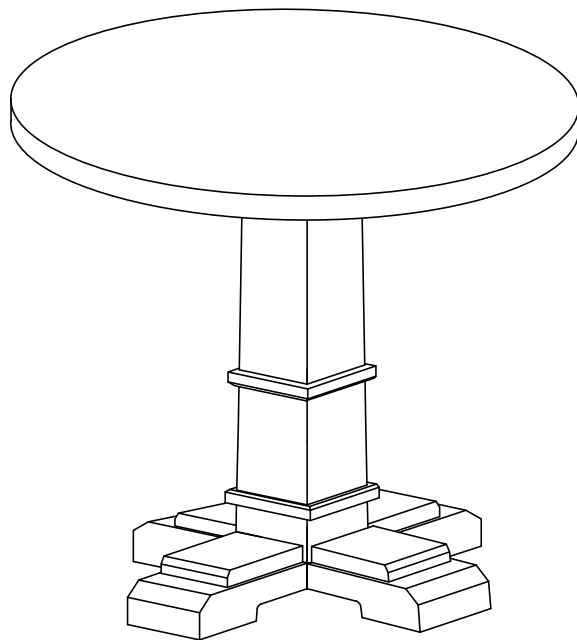

  
PART LIST
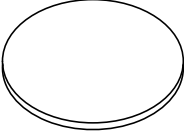
#A 	#B 	#C 	#D 
Table Top 1 PC	Pedestal 1 PC	Table Support 4 PCS	Leg 4 PCS

  HARDWARE LIST

#1  5/16"	#2  5/16"	#3  5/16"x22	#4  12.8mm	#5  M6 x 50mm
Hex Nut 12 PCS (Extra 1)	Spring Washer 12 PCS (Extra 1)	Flat Washer 12 PCS (Extra 1)	Wrench 1 PC	Bolt 4 PCS (Extra 1)
#6  1/4"	#7  M6 x 13mm	#8  M4		
Small Spring Washer 4 PCS (Extra 1)	Small Flat Washer 4 PCS (Extra 1)	Allen Wrench 1 PC		


Step 1. Attach legs (part D) to pedestal (part B) using flat washers (part #3), spring washers (part #2), hex nuts (part #1) and wrench (part #4).

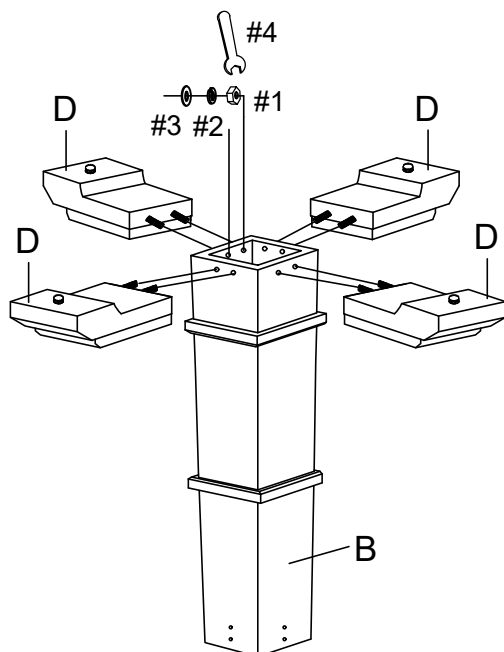

- #1  x 8
- #2  x 8
- #3  x 8
- #4  x 1


Step 2. Carefully turn assembled unit (parts B & D) upright.

Attach table supports (part C) to pedestal (part B) using flat washers (part #3), spring washers (part #2), hex nuts (part #1) and wrench (part #4).

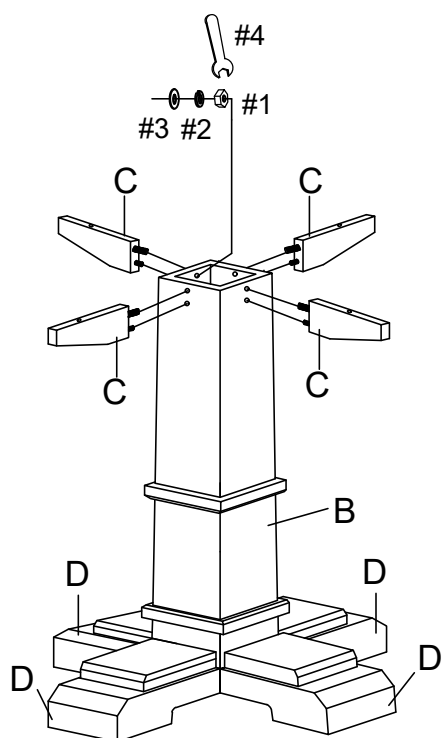


- #1  x 4
- #2  x 4
- #3  x 4
- #4  x 1

Step 3. Lay table top (part A) upside down on soft surface, such as carpet. Attach assembled unit (parts B, C & D) to table top (part A) using bolts (part #5), small spring washers (part #6), small flat washers (part #7) and allen wrench (part #8).

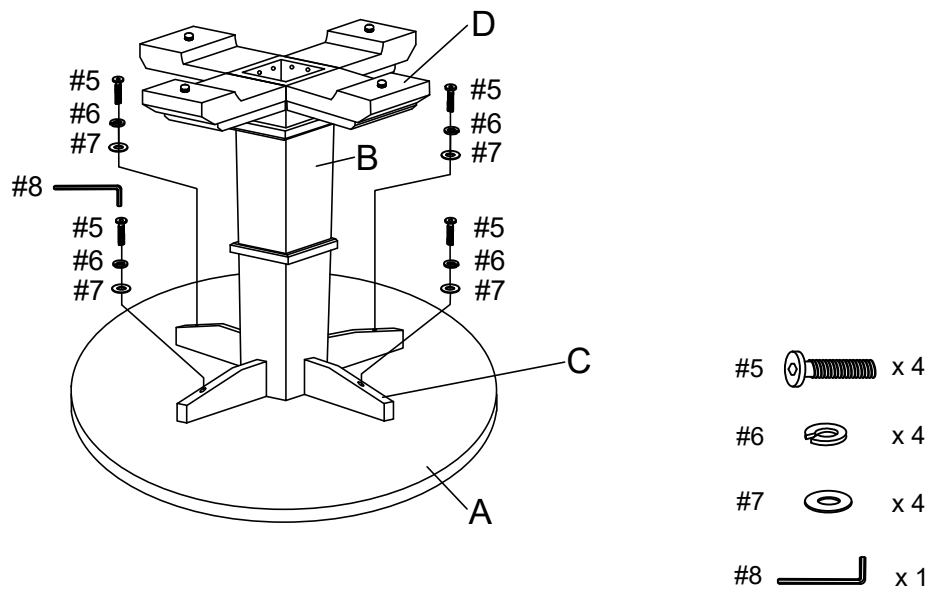

Step 4. Carefully turn assembled unit upright.

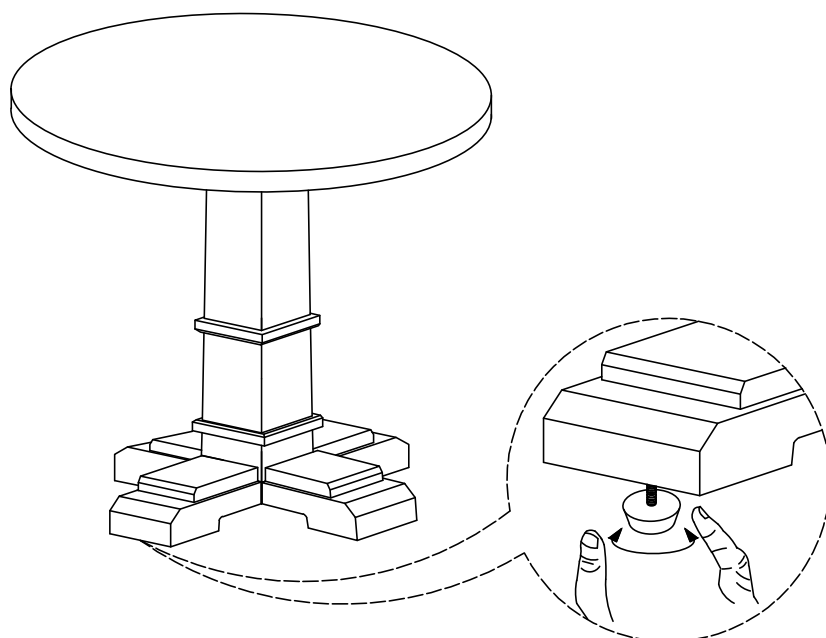

Note: It is important to adjust levelers once fully assembled and upright.
 Extend adjustable leveler until it's firmly in contact with the floor.
 If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.