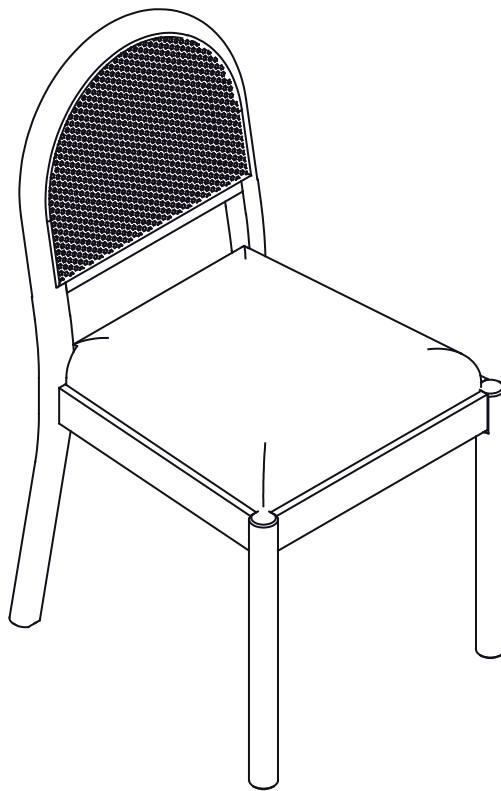


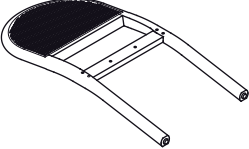
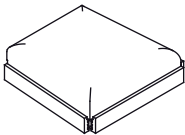
CROSLEY

FURNITURE

 
 
Dining Chair CF503419



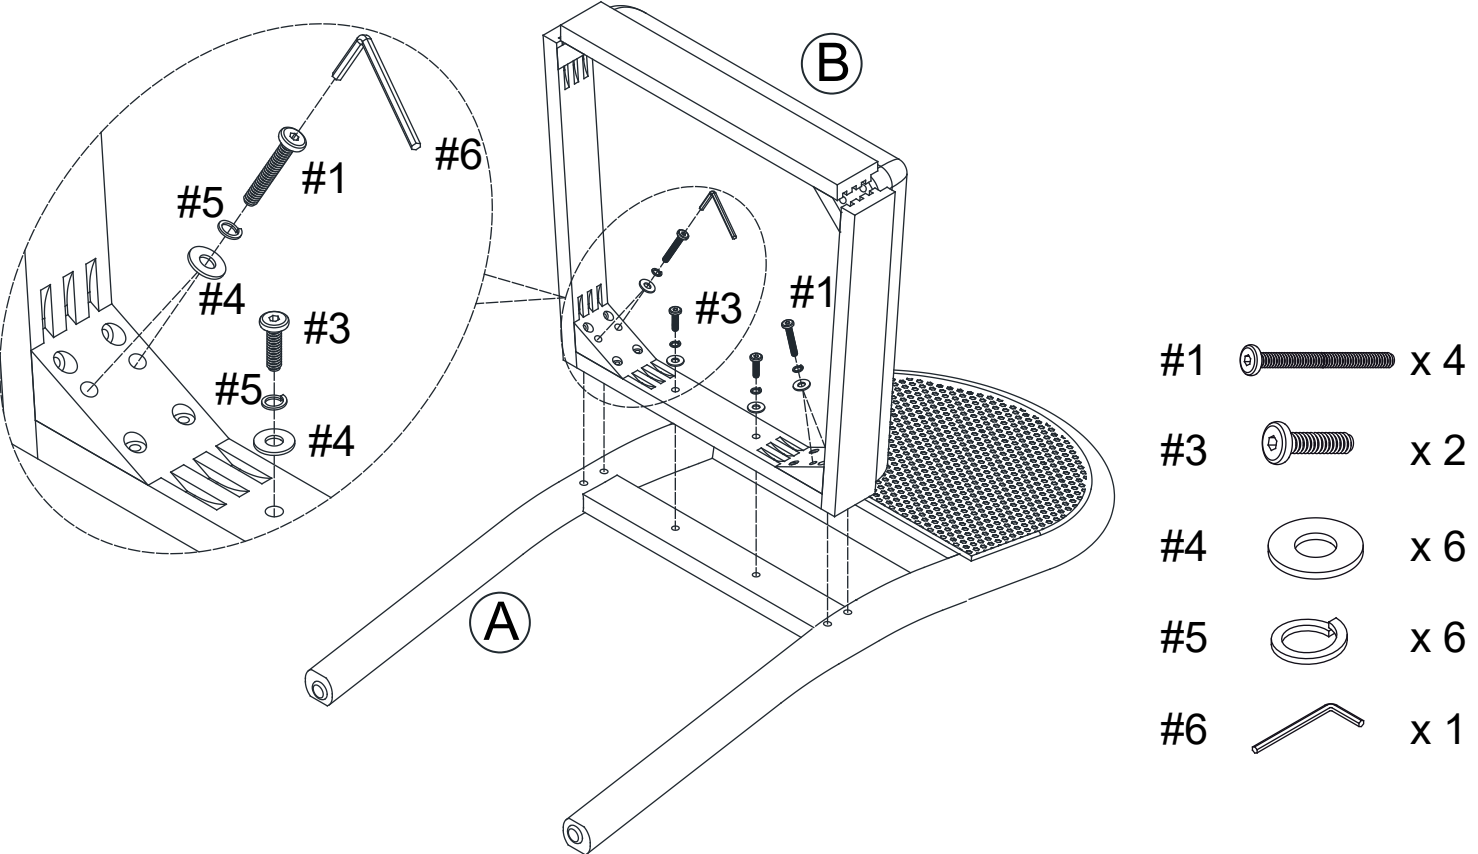
PART LIST

#A 	#B 	#C 
Back Frame 2 PCS	Seat Frame 2 PCS	Front Leg 4 PCS

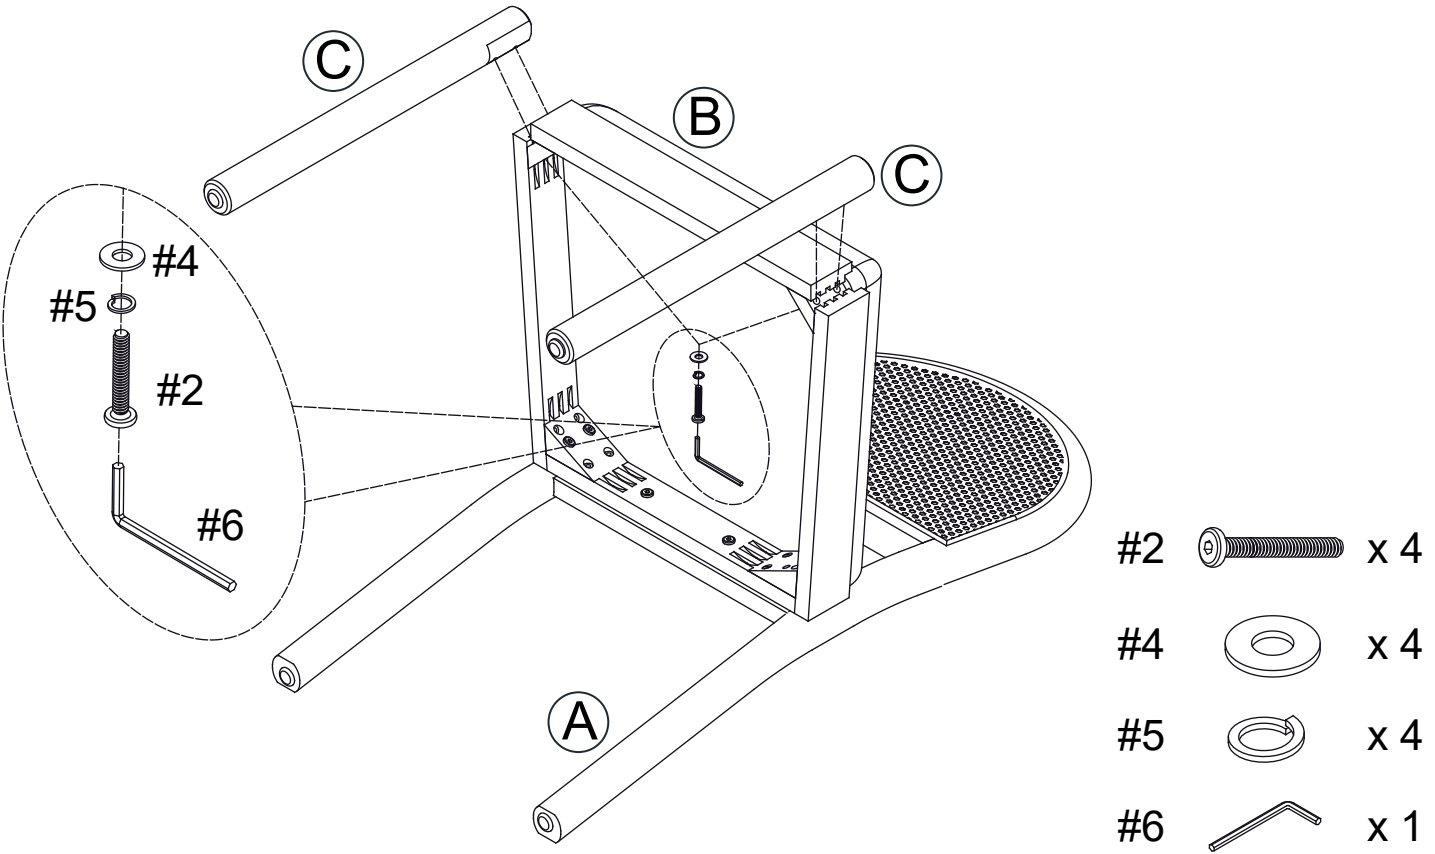
HARDWARE LIST

#1  Ø1/4"×3"	#2  Ø1/4"×2-1/2"	#3  Ø1/4"×1-1/2"	#4 	#5 
Long Bolt 8 PCS (Extra 1)	Medium Bolt 8 PCS (Extra 1)	Short Bolt 4 PCS (Extra 1)	Flat Washer 20 PCS (Extra 1)	Spring Washer 20 PCS (Extra 1)
#6  4mm Allen Wrench 1 PC				

Step 1. Attach seat frame (part B) to back frame (part A) using long bolts (part #1), short bolts (part #3), flat washers (part #4), spring washers (part #5) and allen wrench (part #6).



Step 2. Attach front legs (part C) to seat frame (part B) using medium bolts (part #2), flat washers (part #4), spring washers (part #5) and allen wrench (part #6).



Step 3. Carefully turn unit upright. Repeat steps 1-2 to assemble remaining chair.

