




## PARTS LIST FOR MODEL 321GTi – LEFT HAND

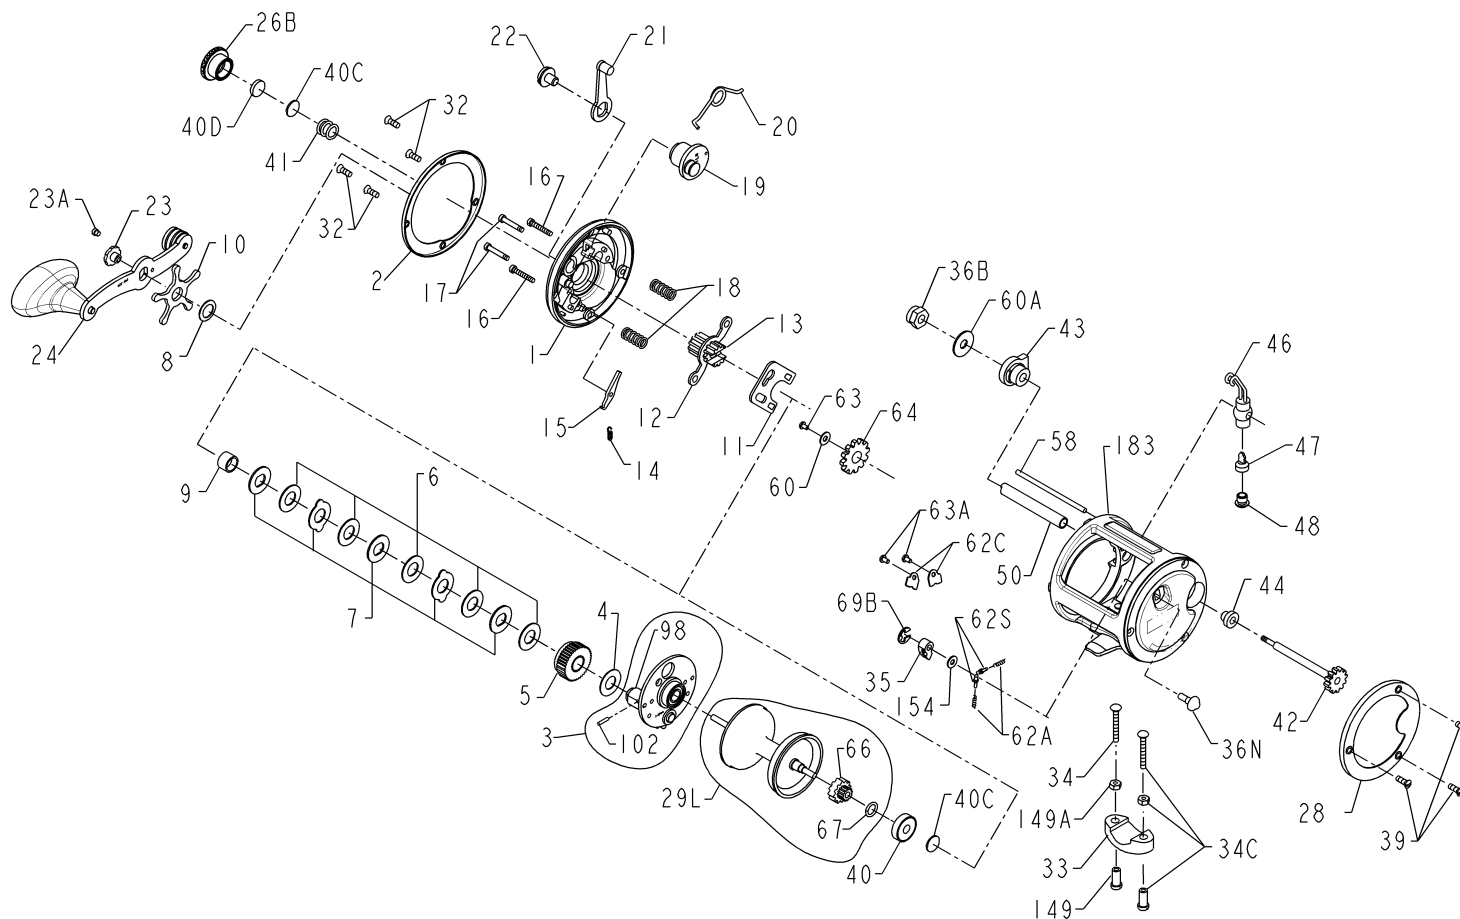

NOTE: NOT ALL PARTS ARE AT THE SAME SCALE

| KEY NO. | PART NO.  | DESCRIPTION                   |
|---------|-----------|-------------------------------|
| 1       | 001 321LH | Right Side Plate              |
| 2       | 002 321LH | Side Ring                     |
| 3       | 003 321LH | Bridge Assembly               |
| 4       | 004 349   | Fiber Washer                  |
| 5       | 005 321LH | Main Gear                     |
| 6       | 006 320   | Friction Drag Washer (5 req.) |
| 7       | 007C970   | Metal Drag Washer (Set of 5)  |
| 8       | 008 349   | Tension Spring                |
| 9       | 009 320   | Spacing Sleeve                |
| 10      | 010 321LH | Star Drag                     |
| 11      | 011 321LH | Eccentric Jack                |
| 12      | 012 155   | Pinion Yoke                   |
| 13      | 013 321LH | Pinion Gear                   |
| 14      | 014 330   | Dog Spring                    |
| 15      | 015 320   | Dog                           |
| 16      | 016 113H  | Lower Bridge Screw (2 req.)   |
| 17      | 017 113H  | Upper Bridge Screw (2 req.)   |
| 18      | 018 060   | Clutch Spring (2 req.)        |
| 19      | 019 321LH | Eccentric Cam                 |
| 20      | 020 321LH | Eccentric Spring              |
| 21      | 021 285   | Eccentric Lever Assembly      |
| 22      | 022 060   | Eccentric Screw               |
| 23      | 023 114   | Handle Assembly Screw         |
| 23A     | 110 060   | Handle Lock Screw             |
| 24      | 024S320   | Handle Assembly               |
| 26B     | 026B320   | Spool Tension Control Cap     |
| 28      | 028 321LH | Frame Ring                    |
| 29L     | 029L320   | Spool Assembly                |
| 32      | 032 017   | Side Plate Screw (5 req.)     |
| 33      | 033 113   | Rod Clamp                     |
| *       | *033R200  | *Ringed Rod Clamp (Optional)  |
| 34      | 034 045   | Clamp Screw Only              |
| 34C     | 034C045   | Clamp Screw w/Nuts            |
| 35      | 035 310N  | Click Tongue                  |
| 36N     | 036N320LD | Click Button                  |
| 36B     | 036 700   | Worm Shaft Nut                |
| 39      | 110 050   | Frame Screw (3 req.)          |
| 40      | 040 320   | Ball Bearing                  |
| 40C     | 040C320   | Metal Thrust Washer (2 req.)  |
| 40D     | 040D320   | Rubber Thrust Washer          |
| 41      | 041 330   | Right Side Thrust Spring      |
| 42      | 042 320N  | Worm Assembly                 |
| 43      | 043 330   | Right Side Worm Bearing       |
| 44      | 044 330   | Left Side Worm Bearing        |
| 46      | 046 320N  | Line Guide Carriage Assembly  |
| 47      | 047 975   | Pawl                          |
| 48      | 048 330N  | Pawl Cover Screw              |
| 50      | 050 320   | Worm Shield                   |
| 58      | 058 320   | Line Guide Post               |
| 60      | 060 320   | Idler Gear Washer             |
| 60A     | 060 320   | Idler Gear Washer             |
| 62A     | 062A310   | Click Spring (2 req.)         |
| 62C     | 062C321LH | Click Spring Cover (2 req.)   |
| 62S     | 062S310   | Click Pin (2 req.)            |
| 63      | 063 500S  | Idler Gear Screw              |
| 63A     | 063 500S  | Click Spring Screw (2 req.)   |
| 64      | 064 320   | Idler Gear                    |
| 66      | 066 320   | Spool Gear Click Ratchet      |
| 67      | 067 009   | Spool Gear Lock Ring          |
| 69B     | 069B600   | Retaining Ring (Click Button) |
| 98      | 098 321LH | Gear Sleeve                   |
| 102     | 102 113   | Gear Sleeve Pin               |
| 149     | 149 045   | Clamp Nut Only                |
| 149A    | 149 200   | Hex Nut Only                  |
| 154     | 154 117   | Click Button Washer           |
| 183     | 183 321LH | Frame Assembly                |

\* Not Shown