




PARTS LIST FOR MODEL CLL6000

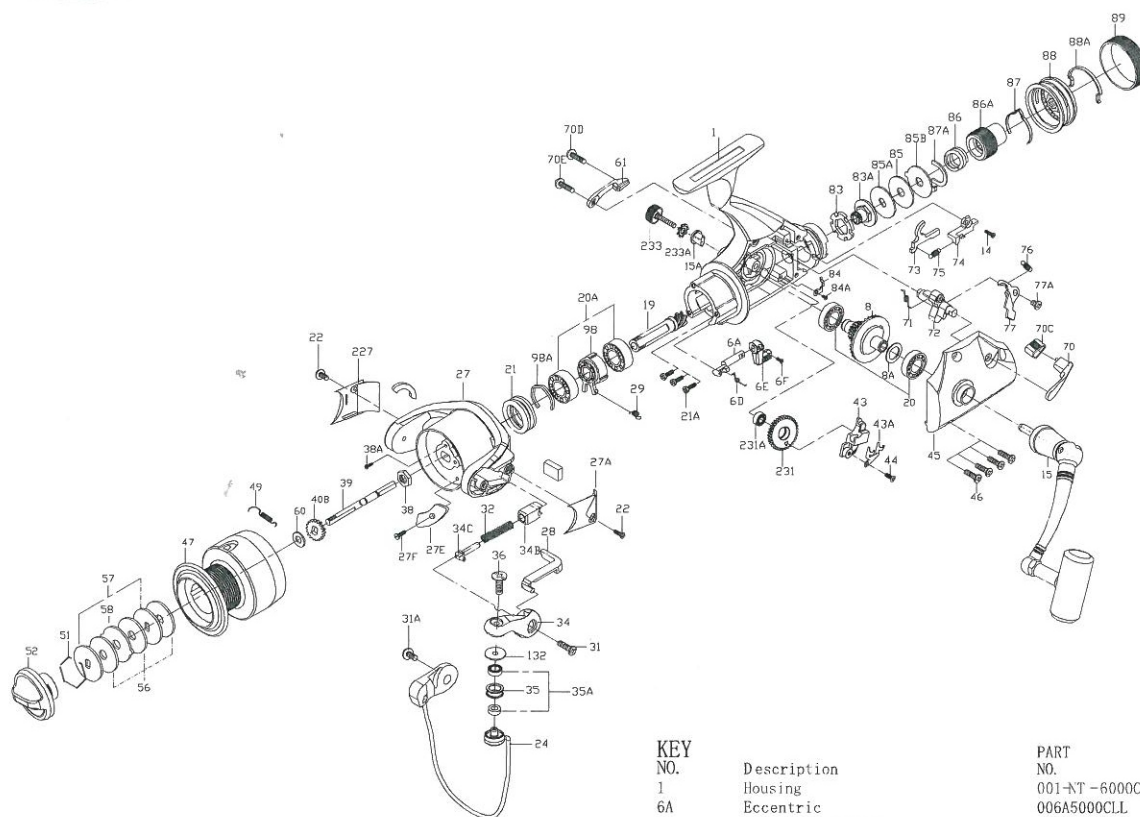

KEY

NO.	Description
1	Housing
6A	Eccentric
6D	Eccentric Spring
6E	Eccentric Lever
6F	Eccentric Lever Mounting Screw
8	Main Gear Assembly
8A	Main Gear Shim
14	Screw
15	Handle Assembly
15A	Handle Retaining Bushing
19	Pinion Gear
20	Housing Ball Bearing (2 req.)
20A	Pinion Ball Bearing (2 req.)
21	Collar
21A	Bearing Mounting Screws (3 req.)
22	Cover Screw (2 req.)
24	Bail Wire
27	Rotor Cup
27A	Bail Pivot Cover
27E	Balance Weight
27F	Balance Weight Screw

PART

NO.	Description
001-NT-6000CLL	
006A5000CLL	
006D 4000CLL	
006E5000CLL	
006F5000CLL	
008 5000CLL	
008A5000CV	
014 5000CLL	
015N6 000CV	
015A500CV	
019 5000CLL	
020 500CV	
020A500 0CV	
021 5000CV	
021A2000CV	
022 500CV	
024 6000CV	
027 000CV	
027A5000CV	
027E5000CV	
027F2000CV	

KEY

NO.	Description
28	Trip Lever
29	Spring
31	Bail Arm Screw
31A	Bail Wire Screw
32	Bail Spring
34	Bail Arm
34B	Pivot Guide
34C	Pivot Arm
35	Line Roller
35A	Line Roller Ball Bearing (2 req.)
36	Bail Stud Screw
38	Rotor Nut
38A	Rotor Nut Screw
39	Spool Shaft
40B	Click Ratchet
43	Crosswind Block
43A	Spool Shaft Clip
44	Crosswind Block Screw
45	Housing Cover
46	Housing Cover Screws (4 req.)
47	Spool Assembly
49	Click Spring
51	Retaining Ring
52	Drag Knob
56	Friction Drag Washer (3 req.)
57	Keyed Washer (2 req.)
58	Drag Washer Earred
60	Thrust Washer
70	L. S. Liveline Eccentric Lever
70B	R. S. Liveline Eccentric Lever
70C	(Mid) Liveline Eccentric Lever
70D	Liveline Eccentric Lever Screw
70E	Liveline Eccentric Lever Screw
71	Liveline Liveline Eccentric Spring
72	Liveline Eccentric
73	Liveline Plate
74	Liveline Dog
75	Dog Spring
76	Trip Spring
77	Eccentric Trip
77A	Eccentric Trip Screw
83	Rear Drag Ratchet
83A	Rear Ratchet Insert
84	Rear Drag Click
84A	Click Spring Screw
85	Rear Drag Washer
85A	Rear Keyed Washer
85B	Rear Earred Washer
86	Rear Drag Spring
86A	Rear Drag Nut
87	Rear Click Spring
87A	Rear Drag Retainer
88	Rear Drag Knob
88A	Rear Drag Knob Retainer
89	Rear Drag Knob Grip
98	Clutch Retainer
98A	Clutch Clip
132	Roller Washer
227	Cam Cover
231	Crosswind Gear
231A	Crosswind Gear Ball Bearing
233	Bearing Cover
233A	Handle Cap Washer

PART

NO.	Description
028 6000CV	
029 5000CV	
031 2000CV	
031A2000CV	
032 4000CV	
034 5000CV	
034B5000CV	
034C4000CV	
035 5000CV	
035A2000CV	
036 2000CV	
038 5000CV	
038A2000CV	
039 5000CLL	
040B5000CV	
043 5000CLL	
043A5000CLL	
044 2000CV	
045-NT-6000CLL	
046 5000CV	
047 6000CLL	
049 2000CV	
051 2000CV	
052 5000CV	
056 2000CV	
057 5000CV	
058 2000CV	
060 5000CLL	
070 5000CLL	
070B 5000CLL	
070C 5000CLL	
070D 4000CLL	
070E4000CLL	
071 4000CLL	
072 5000CLL	
073 5000CLL	
074 5000CLL	
075 5000CLL	
076 4000CLL	
077 4000CLL	
077A4000CLL	
083 5000CLL	
083A5000CLL	
084 5000CLL	
084A 4000CLL	
085 5000CLL	
085A5000CLL	
085B5000CLL	
086 5000CLL	
086A5000CLL	
087 5000CLL	
087A5000CLL	
088 5000CLL	
088A5000CLL	
089 5000CLL	
098 5000CLL	
098A5000CLL	
132 2000CV	
227 5000CV	
231 5000CLL	
020 500CV	
233N 2000CV	
233A 2000CV	