


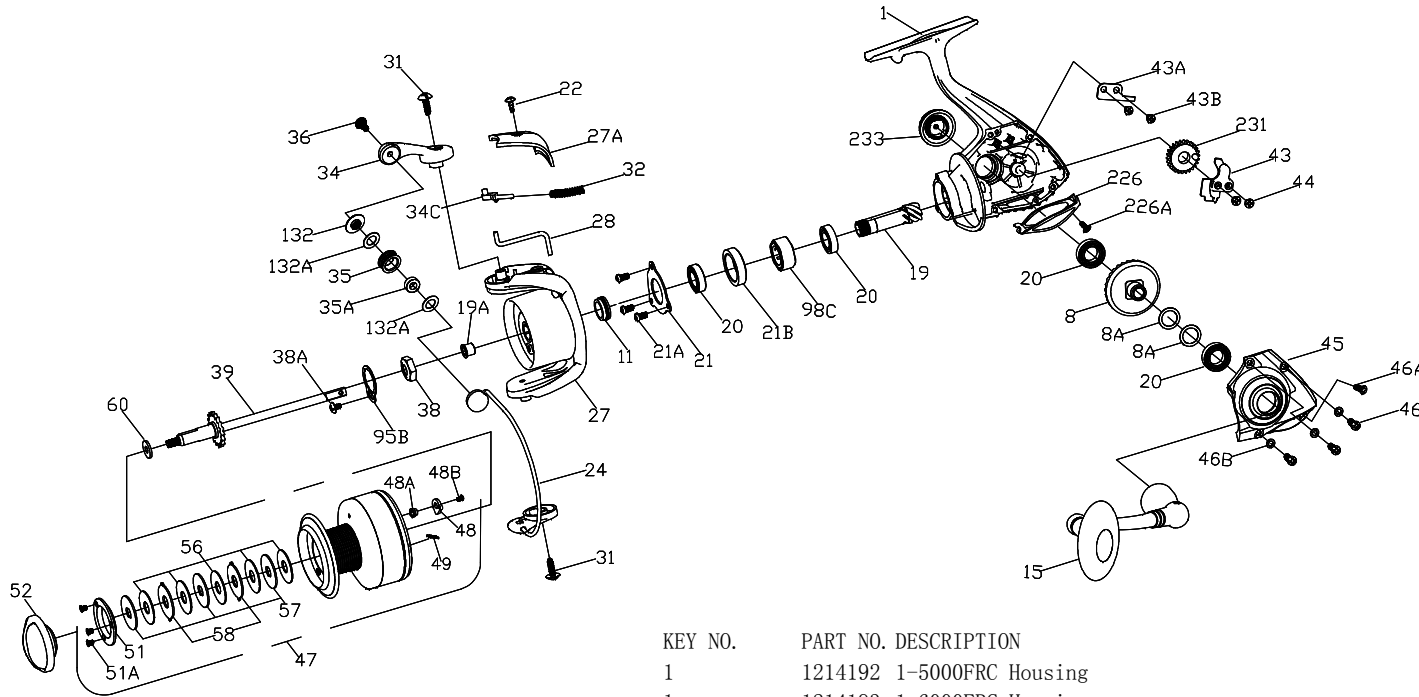

PARTS LIST FOR MODEL FIERCE 5000/6000  
REEL PART NO.1206118/1206121



KEY NO.	PART NO.	DESCRIPTION
28	1204027	28-6000PUR Trip Lever
31	1203987	31-3000PUR Bail Arm Screw (2 req)
31	1204039	31-6000PUR Bail Arm Screw (2 req)
32	1203988	32-3000PUR Bail Spring
32	1200520	32-6000SG Bail Spring
34	1211513	34-3000FRC Bail Arm
34	1214201	34-6000FRC Bail Arm
34C	1203990	34C-3000PUR Pivot Arm
34C	1204044	34C-6000PUR Pivot Arm
35	1191674	35-3000SG Line Roller
35A	1203992	35A-3000PUR Line Roller Bushing
36	1203993	36-3000PUR Bail Stud Screw
38	1191729	38-5000SG Rotor Nut
38A	1203995	38A-3000PUR Rotor Locking Plate Screw
39	1214202	39-5000FRC Spool Shaft Assembly
39	1214203	39-6000FRC Spool Shaft Assembly
43	1191805	43-5000SG Crosswind Block
43A	1191820	43A-5000SG Crosswind Block Plate
43B	1191736	38A-5000SG Rotor Locking Plate Screw
44	1191845	44-5000SG Crosswind Block Screw (2 req)
45	1214204	45-5000FRC Housing Cover
46	1191903	46-5000SG Housing Cover Screw (3 req)
46A	1191906	46A-3000SG Housing Cover Screw A
46B	1191908	46B-5000SG Housing Cover Washer (3 req)
47	1214205	47-5000FRC Spool Complete
47	1214206	47-6000FRC Spool Complete
48	1211625	48-5000SG Click Tongue
48A	1211626	48A-5000SG Click Tongue Washer
48B	1211612	48B-5000SG Spool Click Screw
49	1211627	49-5000SG Click Tongue Spring
51	1191978	51-5000SG Retaining Spacer
51A	1191986	51A-3000SG Retaining Screw (3 req)
52	1214207	52-5000FRC Drag Knob Assembly
56	1192036	56-5000SG Drag Washer (5 req)
57	1192044	57-5000SG Keyed Washer (3 req)
58	1192053	58-5000SG Eared Washer (2 req)
60	1192062	60-5000SG Thrust Washer
95B	1192186	95B-5000SG Rotor Locking Plate
98C	1192215	98C-5000SG Clutch/Sleeve Assembly
132	1192298	132-7000SG Roller Washer
132A	1192302	132A-3000SG Line Roller Washer (2 req)
226	1214208	226-5000FRC Rear Cover
226A	1192473	226A-3000SG Rear Cover Screw
231	1192503	231-5000SG Crosswind Gear
231	1200523	231-6000SG Crosswind Gear
233	1214209	233-5000FRC Bearing Cover Assembly

KEY NO.	PART NO.	DESCRIPTION
1	1214192	1-5000FRC Housing
1	1214193	1-6000FRC Housing
8	1191019	8-5000SG Main Gear
8A	1191030	8A-5000SG Shim (2 req)
11	1191085	11-5000SG Bushing
15	1211609	15-5000BTL Handle Assembly
19	1191240	19-5000SG Pinion
19A	1191253	19A-5000SG Pinion Bushing
20	1204012	20-5000PUR Ball Bearing (4 req)
21	1192636	21-5000SG Bearing Retainer
21A	1192645	21A-5000SG Bearing Retainer Screw (3 req)
21B	1192650	21B-5000SG Collar
22	1203978	22-3000PUR Bail Pivot Cover Screw
22	1204018	22-6000PUR Bail Pivot Cover Screw
24	1214195	24-5000FRC Bail Wire Assembly
24	1214196	24-6000FRC Bail Wire Assembly
27	1214197	27-5000FRC Rotor (w/weight & screw)
27	1214199	27-6000FRC Rotor (w/weight & screw)
27A	1214198	27A-5000FRC Bail Pivot Cover
27A	1214200	27A-6000FRC Bail Pivot Cover
28	1204026	28-5000PUR Trip Lever