


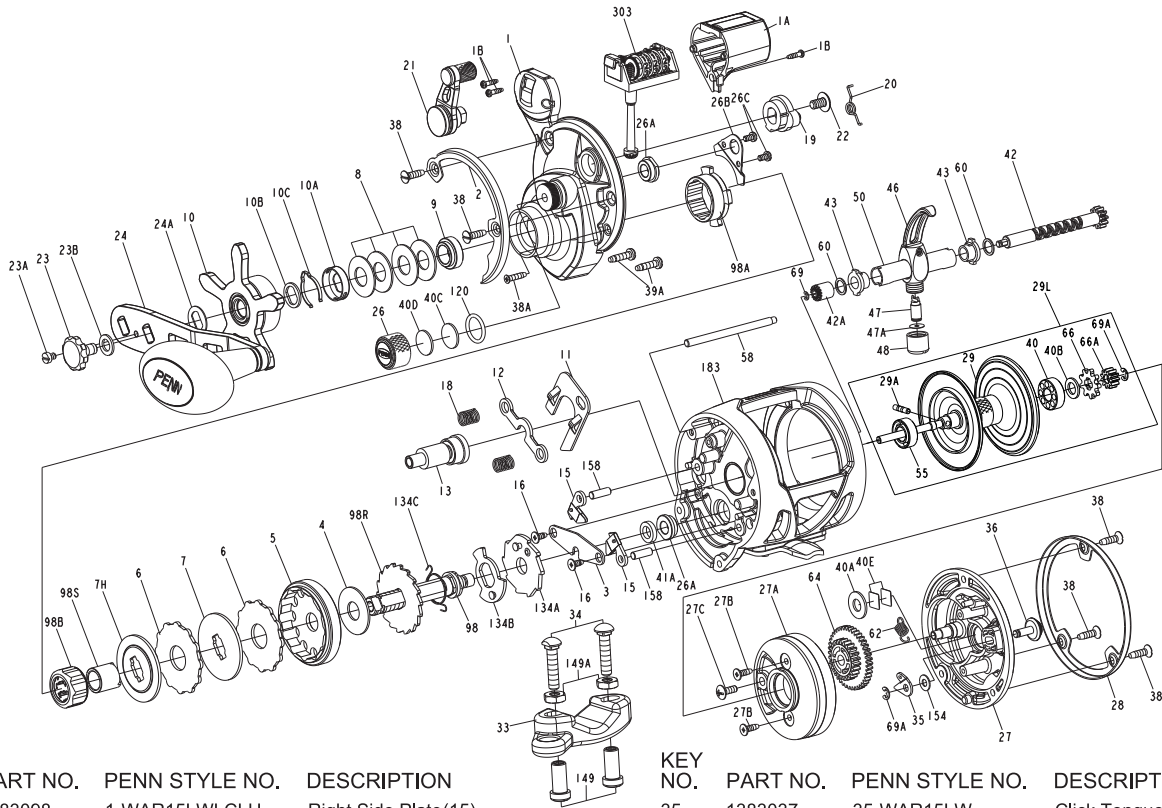

PARTS LIST FOR WAR15LWLCLH and WAR20LWLCLH
 REEL ASM. Nos. 1366189(WAR15LWLCLH)&1366194(WAR20LWLCLH)



KEY NO.	PART NO.	PENN STYLE NO.	DESCRIPTION	KEY NO.	PART NO.	PENN STYLE NO.	DESCRIPTION
1	1383098	1-WAR15LWLCLH	Right Side Plate(15)	35	1383037	35-WAR15LW	Click Tongue
1	1383099	1-WAR20LWLCLH	Right Side Plate(20)	36	1383038	36-WAR15LW	Click Button
1A	1383100	1A-WAR15LWLCLH	Line Counter Cover	38	1383039	38-WAR15LW	Screw (5 req)
1B	1383084	1B-WAR15LWLC	Screw, L.C.Cover(3req)	38A	1383040	38A-WAR15LW	Screw
2	1406057	2-WAR15LWLCLH	Right Side Ring	39A	1383041	39A-WAR15LW	Screw(2req)
3	1384179	3-WAR15LW	Bridge	40	1383042	40-WAR15LW	Ball Bearing
4	1382976	4-WAR15LW	Drag Washer	40A	1383043	40A-WAR15LW	Washer
5	1382977	5-WAR15LW	Main Gear	40B	1383044	40B-WAR15LW	Felt Washer
6	1382978	6-WAR15LW	Tabbed Drag Washer(2 req)	40C	1383045	40C-WAR15LW	Washer, Acetal Thrust
7	1382999	7-WAR15LW	Keyed Metal Drag Washer	40D	1383046	40D-WAR15LW	Washer, Rubber Thrust
7H	1383000	7H-WAR15LW	Heavy Metal Drag Washer	40E	1383047	40E-WAR15LW	Thrust Washer (2req)
8	1383001	8-WAR15LW	Spring Washer (4 req)	41A	1384181	41A-WAR15LW	Bushing
9	1384180	9-WAR15LW	Spacing Sleeve	42	1385461	42-WAR15LWLC	Worm Shaft Assembly(15)
10	1383002	10-WAR15LW	Star Drag	42	1385462	42-WAR20LWLC	Worm Shaft Assembly(20)
10A	1383003	10A-WAR15LW	Star Click Retainer	42A	1384183	42A-WAR15LWLC	Gear, L.C. Drive
10B	1383004	10B-WAR15LW	Star Click Washer	43	1383051	43-WAR15LW	Worm Shaft Bushing(2req)
10C	1383005	10C-WAR15LW	Star Click Spring	46	1383052	46-WAR15LW	Line Guide Assembly
11	1383006	11-WAR15LW	Eccentric Jack	47	1383053	47-WAR15LW	Line Guide Pawl
12	1383007	12-WAR15LW	Pinion Yoke	47A	1383054	47A-WAR15LW	Pawl Shim
13	1383008	13-WAR15LW	Pinion	48	1383055	48-WAR15LW	Line Guide Nut
15	1383276	15-WAR15LWLH	Anti Reverse Dog(2 req)	50	1383056	50-WAR15LW	Worm Shield(15)
16	1383010	16-WAR15LW	Screw (2 req)	50	1383057	50-WAR20LW	Worm Shield(20)
18	1383011	18-WAR15LW	Pinion Yoke Spring (2 req)	55	1451533	55-WAR15LW	Ball Bearing
19	1383012	19-WAR15LW	Eccentric	58	1383058	58-WAR15LW	Line Guide Post(15)
20	1446771	20-WAR15LWLH	Eccentric Spring	58	1383059	58-WAR20LW	Line Guide Post(20)
21	1383014	21-WAR15LW	Eccentric Lever	60	1383060	60-WAR15LW	Worm Shaft Washer(2req)
22	1383015	22-WAR15LW	Eccentric Screw	62	1383061	62-WAR15LW	Spring
23	1383016	23-WAR15LW	Handle Assembly Screw	64	1383062	64-WAR15LW	Idler Gear
23A	1383017	23A-WAR15LW	Handle Lock Screw	66	1383063	66-WAR15LW	Click Ratchet
23B	1383018	23B-WAR15LW	Handle Screw Washer	66A	1383064	66A-WAR15LW	Spool Gear
24	1383019	24-WAR15LW	Handle Assembly	69	1446770	69-WAR15LWLC	Retainer Ring
24A	1383020	24A-WAR15LW	Handle Thrust Washer	69A	1383066	69A-WAR15LW	Retainer Ring (2 req)
26	1383021	26-WAR15LW	Spool Tension Control Cap	98	1383094	98-WAR15LWLH	Main Gear Shaft
26A	1383022	26A-WAR15LW	Bushing(2req)	98A	1383068	98A-WAR15LW	Clutch Housing
26B	1383023	26B-WAR15LW	Clutch Retainer	98B	1384182	98B-WAR15LW	Clutch
26C	1383024	26C-WAR15LW	Screw(2req)	98R	1383069	98R-WAR15LW	Anti Reverse Ratchet
27	1383281	27-WAR15LWLCLH	Left Side Plate(15)	98S	1383070	98S-WAR15LW	Clutch Sleeve
27	1383282	27-WAR20LWLCLH	Left Side Plate(20)	120	1383071	120-WAR15LW	O-Ring
27A	1383027	27A-WAR15LW	Bearing Housing	134A	1383095	134A-WAR15LWLH	Clutch Recover Plate
27B	1383028	27B-WAR15LW	Screw(2req)	134B	1383073	134B-WAR15LW	Clutch Recover Support Plate
27C	1383029	27C-WAR15LW	Screw	134C	1383097	134C-WAR15LWLH	Clutch Recover Spring
28	1383030	28-WAR15LW	Left Side Ring	149	1184702	149-045	Rod Clamp Nut (2 req)
29	1383031	29-WAR15LW	Spool (15)	149A	1184706	149-200	Hex Nut (2 req)
29	1383032	29-WAR20LW	Spool (20)	154	1383077	154-WAR15LW	Click Button Washer
29A	1451532	29A-WAR15LW	Pin	158	1383078	158-WAR15LW	Dog Pin(2req)
29L	1383033	29L-WAR15LW	Spool Assembly(15)	183	1383279	183-WAR15LWLH	Frame Assembly(15)
29L	1383034	29L-WAR20LW	Spool Assembly(20)	183	1383280	183-WAR20LWLH	Frame Assembly(20)
33	1182754	33-113	Rod Clamp	303	1383283	303-WAR15LWLCLH	Counter Wheel Assembly
34	1182788	34-045	Screw (2 req)				