WEISER

1 Go to the main app screen, then tap on [icon] in the bottom left corner.

WEISER

Home

Front Door
Last updated today at 2:33 PM

100%

Unlocked

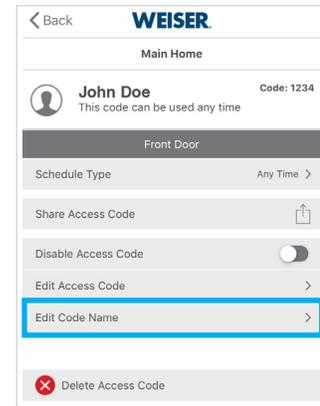People | History | Settings
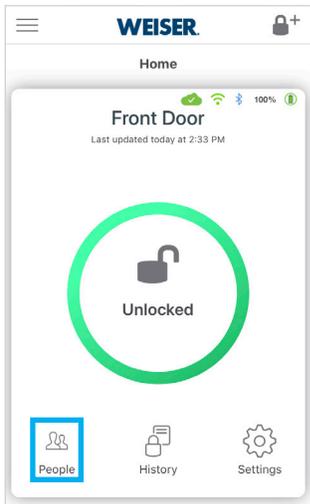
For **Aura locks**, you will need to be within Bluetooth range of the lock to access some features.

2 Tap on the User you would like to edit.

‹ Back **WEISER**

Main Home

People
Front Door

Secure Mode
Temporarily disable the keypad

249 of 250 Access Codes available

John Doe
Any Time ›

3 Tap on "Edit Code Name."

‹ Back **WEISER**

Main Home

John Doe — Code: 1234
This code can be used any time

Front Door

Schedule Type — Any Time ›

Share Access Code

Disable Access Code

Edit Access Code ›
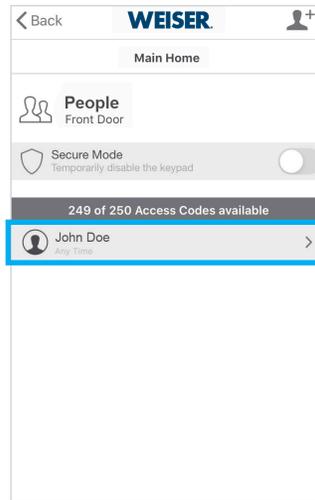
Edit Code Name ›

❌ Delete Access Code

4 Enter a new name, then tap "Submit."

‹ Back **WEISER**

Main Home

Give the access code a new name.

John Doe
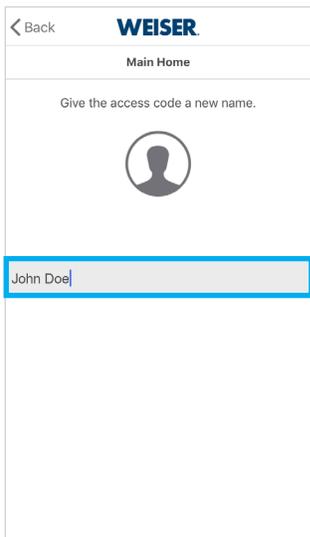
It may take a few moments for changes to take effect.

Access codes will change from yellow to black when changes have been completed.