


SMART CODE

Installing Batteries

a. Install 4 new AA Alkaline batteries.

Install the new batteries as indicated in illustration. Make sure batteries lie flat in holder. For best performance, rechargeable batteries are not recommended.

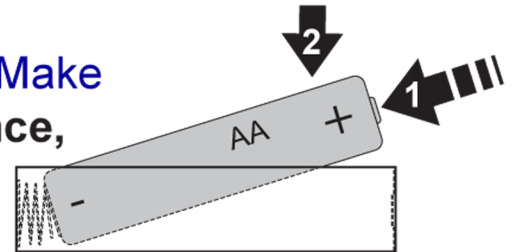

Alkaline Battery WARNING: Do not dispose of in fire, recharge, put in backwards, disassemble, mix with used or other battery types. May explode or leak and cause personal injury.