

Draperies

Thank you for making Levolor a part of your home. You have chosen the finest drapery available, backed by the world-renowned Levolor name. Visit www.levolor.com for ideas. information, and support.



Read all installation instructions before installation.

Review your drapery hardware installation instructions for directions on how to mount your hardware. These instructions will guide you through hanging and dressing your drapery.

Important information

Warranty:

Please refer to the enclosed pamphlet for warranty information.

NOTE: A sales receipt is required for all claims.


Pardon my wrinkles

Levolor custom draperies are packed and shipped with care to ensure that your draperies are ready to hang when received.

Some wrinkling may occur during shipping but should fall out within 72 hours after installation.

Please refer to the unpacking and training section in this manual as well as the sewn-in label on the drapery for complete care instructions.

Standard, Goblet or European Pinch Pleat

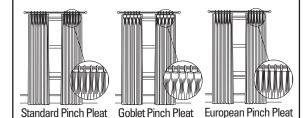



Decorative Rod With Rings:

- A. Insert drapery hook into the ring eyelet, making sure to remove any clips.
- B. Remove paper banding around drapery, let hang freely, and verify the drapery hardware placement and functionality.
- C. Depending on hardware selection, drapery returns may be required to be pinned to the wall using
- D. See "How to Train Your Drapery" to finalize installation.



Decorative Traverse Rod

- A. Insert drapery hook into ring slide starting from non-return side and working toward the return(s). Traverse rods may have more ring slides than drapery pins. Consult your drapery hardware instructions to remove slides.
- B. Remove paper banding around drapery, let hang freely, and verify the drapery hardware placement and functionality.
- C. Depending on hardware selection, drapery returns may be required to be pinned to the wall using a straight pin.
- D. See "How to Train Your Drapery" to finalize installation.



Basic Traverse Rod


- A. Insert drapery hook into slide starting from nonreturn side and working toward the return(s). Traverse rods may have more slides than drapery pins. Consult your drapery hardware instructions to
- B. Remove paper banding around drapery, let hang freely, and verify the drapery hardware placement and functionality.
- C. Depending on hardware selection, drapery returns may be required to be pinned to the wall using a straight pin.
- D. See "How to Train Your Drapery" to finalize installation.



Basic Curtain Rod

- A. Insert drapery hook over curtain rod.
- B. Remove paper banding around drapery, let hang freely, and verify the drapery hardware placement and functionality.
- C. Depending on hardware selection, drapery returns may be required to be pinned to the wall using a straight pin.
- D. See "How to Train Your Drapery" to finalize installation.

Grommet Draperv

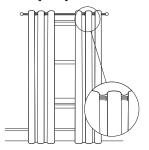

Decorative Rod Without Rings

- A. Insert rod into grommets ensuring the leading and trailing edges point toward the wall.
- B. Hang rod in accordance with your hardware manual.
- C. Remove paper banding around drapery, let hang freely, and verify the drapery hardware placement and functionality.
- D. See "How to Train Your Drapery" to finalize installation.

Ring Top Drapery






Decorative Rod With Rings

- A. Insert drapery hook into the ring eyelet, making sure to remove any clips.
- B. Remove paper banding around drapery, let hang freely, and verify the drapery hardware placement and functionality.
- C. Depending on hardware selection, drapery returns may be required to be pinned to the wall using a straight pin.
- D. See "How to Train Your Drapery" to finalize installation.


Tab Top Drapery

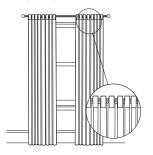

Decorative Rod Without Rings

- A. Insert curtain rod into drapery tabs.
- B. Hang rod in accordance with your hardware manual.
- C. Remove paper banding around drapery, let hang freely, and verify the drapery hardware placement and functionality.
- D. See "How to Train Your Drapery" to finalize installation.

Rod Pocket Drapery

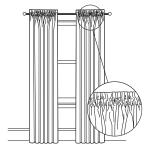

Decorative Rod Without Rings


- A. Insert curtain rod into drapery pocket.
- B. Hang rod in accordance with your hardware manual.
- C. Remove paper banding around drapery, let hang freely, and verify the drapery hardware placement and functionality.
- D. See "How to Train Your Drapery" to finalize installation.



■ Basic Curtain Rod

- Insert curtain rod into drapery pocket.
- B. Hang curtain rod in accordance with your hardware manual.
- C. Remove paper banding around drapery, let hang freely, and verify the drapery hardware placement and functionality.
- D. See "How to Train Your Drapery" to finalize installation.

Tie Top Drapery

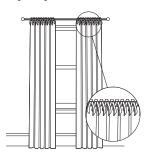


Decorative Rod Without Rings

- A. Tie drapery around the curtain rod.
- B. Hang rod in accordance with your hardware manual.
- C. Remove paper banding around drapery, let hang freely, and verify the drapery hardware placement and functionality.
- D. See "How to Train Your Drapery" to finalize installation.

How to Train Your Drapery

Training is the art of styling draperies. Proper execution will ensure that your drapery hangs correctly and will fold properly if used with a traversing system.

- A. After hanging your drapery, close the drapery.
- B. Fold the excess material vertically between the drapery attachment points
- C. Do this consistently to the front or back, depending on personal style.
- D. Once all of the sections are even, loosely band drapery together using a paper band or string starting from the top and working your way down.
- E. Allow to hang for 72 hours; then remove bands.
- F. If the drapery panels are stationary, space the drapery within the desired area.
- G. Push the top edge of the drapery down between the attachment points.

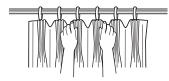

Troubleshooting

Pleated or ring top draperies too long.

• Move pin hook down (up to 1/2 inch) or adjust placement of drapery rod.

Pleated or ring top draperies too short.

• Move pin hook up (up to 1/2 inch) or adjust placement of drapery rod.

Tie top draperies too long.

 Increase the amount of tie above the rod (up to 2 inches).

Tie top draperies too short.

 Reduce the amount of tie above the rod (up to 2 inches).

Drapery is wrinkled.

- Most wrinkles from shipment should fall out after 72 hours.
- · Steam if wrinkles persist.

Contact Us

To contact Levolor customer service regarding any questions or concerns you may have about your new draperies, you may reach us at:

1-800-LEVOLOR

(8:00 a.m.-7:00 p.m. EST, Monday-Friday)

www.levolor.com

Additional Parts and Services

Purchasing extra or replacement parts

Please contact Levolor customer service at 1-800-LEVOLOR or through www.levolor.com for replacement parts.