

Valances and Cornices

Thank you for making Levolor a part of your home. You have chosen the finest valance/cornice available, backed by the world-renowned Levolor name. Visit www.levolor.com for ideas, information, and support.



Read all installation instructions before installation.

Important information

Warranty:
Please refer to the enclosed pamphlet for warranty information.

NOTE: A sales receipt is required for all claims.

Pardon my wrinkles

Levolor custom valances and cornices are packed and shipped with care to ensure they are ready to hang when received.

Some wrinkling may occur during shipping but should fall out within 72 hours after installation.

Please refer to the sewn-in label on the valances or cornices for complete care instructions.

Tools Required (not included)


The following tools may be required for assembling and installing your valance/cornice.

Always observe all safety warnings, precautions, and operating instructions when using tools.


Wear proper eye protection.



Phillips Screwdriver




Level

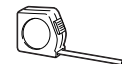

Tape Measure



Drill

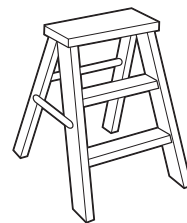

Step Ladder




Hammer



Pencil

Hardware Required (included)

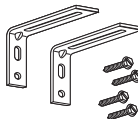

L-Brackets
1 1/2" Screws (2 per bracket)



Hollow Wall Fasteners
(2 per bracket)




1/2" Screws to Secure Cornice to L-Brackets (1 per bracket)

NOTE: Check your installation space to determine the type of screws and/or wall anchors needed.


1 Place the Valance or Cornice

- 1) Determine how high the top of the valance/cornice will be above the top of the molding.
- 2) Make a small pencil mark on the wall marking the top of the valance/cornice.

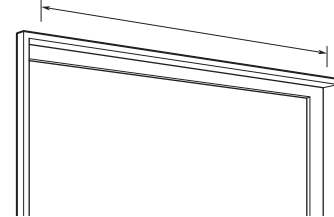

2 Mark for Bracket Placement

- 1) From the mark on the wall, make a second mark 3/4" below it. Check this line for level.
- 2) Line up the top of the L-brackets with this mark.

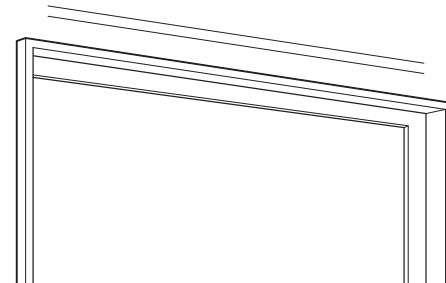


3 Attach Brackets

- 1) Locate the studs or the header above the window, drill pilot holes for the screws, and use 1 1/2" screws to attach the L-brackets to the wall.
- 2) If you do not find a wood support, use the included wall anchors suitable for your walls to attach the L-brackets.
- 3) If installing more than 2 brackets, they should be equally spaced.



NOTE: Precise placement of the brackets is not necessary, but you do not want the brackets:

- 1) close together, since this might make the valance/cornice unstable.
- 2) too close to the outside edges, since this will prevent adjusting to center the valance/cornice.

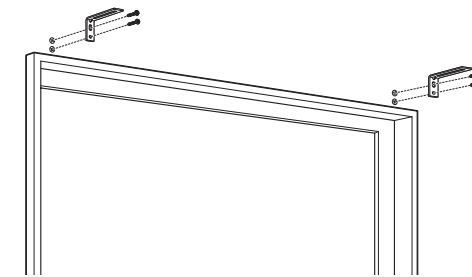


4 Set Valance or Cornice in Place

- 1) Rest the valance/cornice on the two L-brackets.
- 2) Center the valance/cornice over the window.

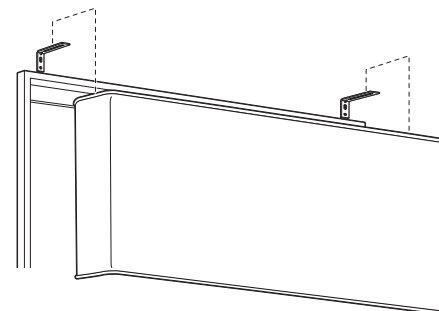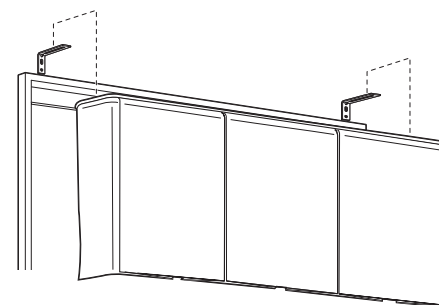

5 Secure Valance or Cornice

- 1) Use 1/2" screws to secure valance/cornice to L-brackets.

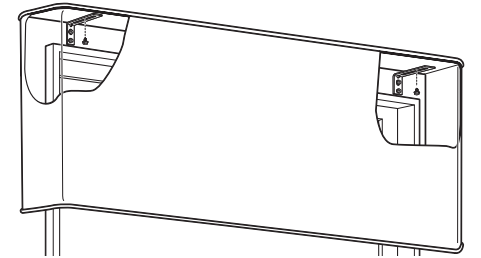

Contact Us

To contact Levolor customer service regarding any questions or concerns you may have about your new valances/cornices, you may reach us at:

1-800-LEVOLOR
(8:00 a.m.–7:00 p.m. EST, Monday–Friday)

www.levolor.com

Additional Parts and Services

- **Purchasing extra or replacement parts**
Please contact Levolor customer service at 1-800-LEVOLOR or through www.levolor.com for replacement parts.