


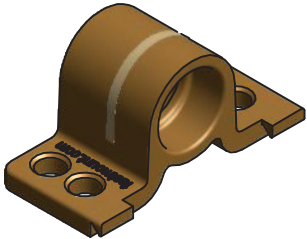










## PC-RF1 Side mount female

	USE WITH:	PC-M1B	PC-VM1	PC-SM2	INSTALL WITH:	CP-01A	CT-09	CT-10
	     	 or CP01ST						
INSTALLATION STEPS								


**1** Screw fit PC-RF1 to side of frame

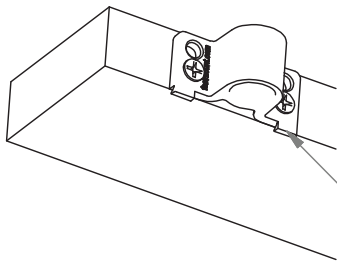

**2** Fit CP-01A into PC-RF1

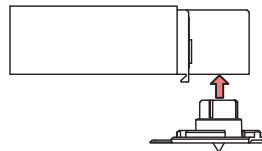


**3** Press panel onto CP-01A to mark

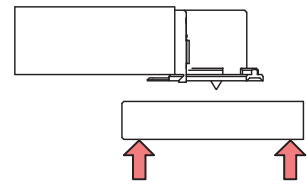


Break off setting tabs as required


**4** Drill panel on mark with CT-09

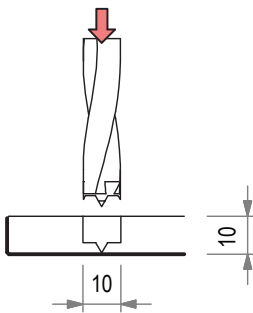

**5** Screw fit male clip with CT-10

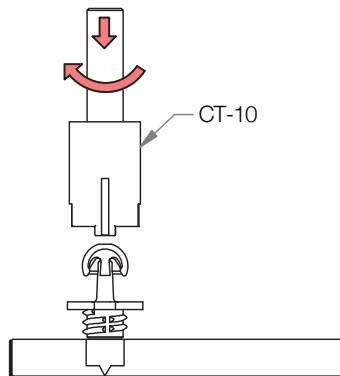


**6** Panel clipped in place

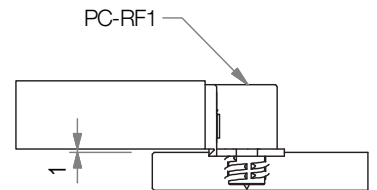


OPTION WITH ADHESIVE FIT MALE (complete 1 above)


**A** Clip PC-SM2 into PC-RF1

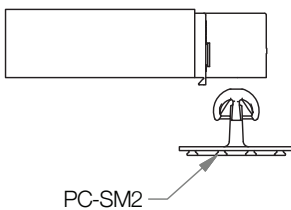

**B** Apply adhesive to PC-SM2

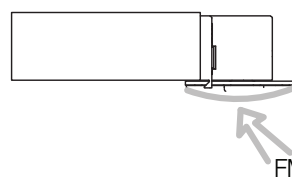

**C** Place panel & support while adhesive dries

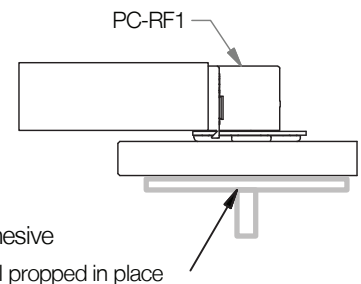

MORE INFO: Setout Guide TD-02