

Converting to a Full Size Bed

Step 1: Disassemble the crib or toddler/day bed.

- Using the wrench provided remove the components in the following order:
- Remove the footboard
- Remove the mattress platform
- Remove the crib ends from the crib headboard
- Keep and store all the hardware for future assembly of the crib. Store the crib components in a safe dry place to prevent damage.

Step 2: Attach the side rails and slat roll.

- The side rails can be installed in two positions. The lower position, along with the purchase of Safety Rails, is recommended for transition from the crib to a child's first full size bed. The bed side rails can be moved to the upper position after your child adapts to the transition. Under bed storage options can be used with the bed rails positioned in the upper location. Contact your **youngAmerica** dealer for more information on available options.
- Install the rails into the headboard and foot board as shown and press down to lock into position.
- Remove (4) bolts from headboard. Note: The factory-installed Bolt Retainer Sleeve in the posts may give resistance. The bolts require unthreading from back side of headboard.
- Insert (2) 1" connector bolts and 3/4" caps in the headboard and (4) 3/4" connector bolts in the footboard to cover the crib assembly holes. Tighten with the wrench provided. See Figure 15.
- Install the slat roll using the instructions provided with the slat roll for proper installation.

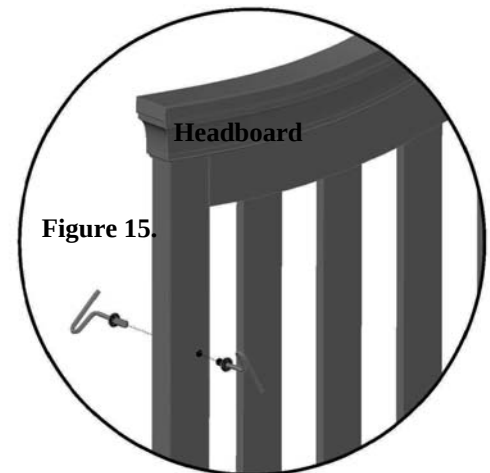
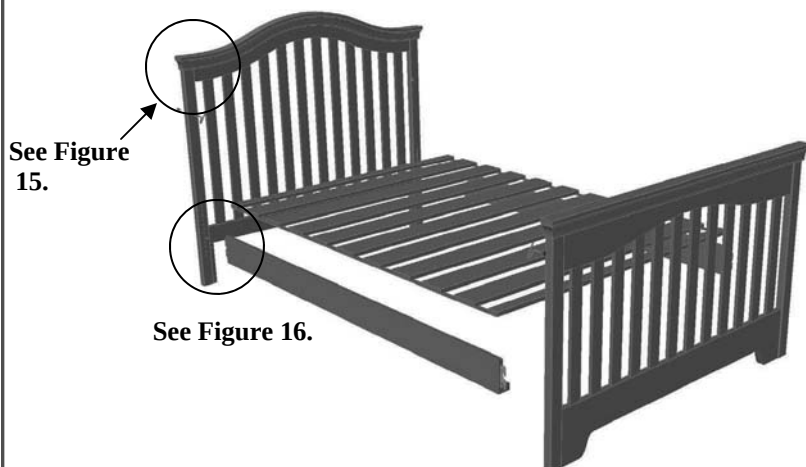


Figure 16.

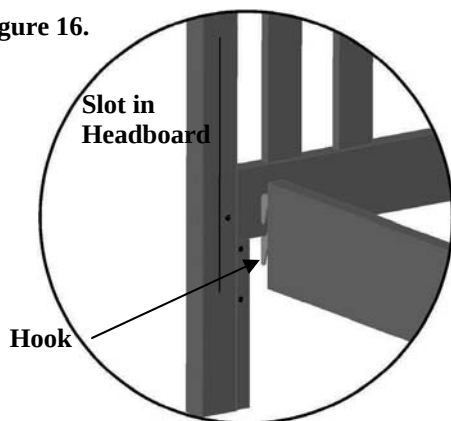


Figure 15.

