


Inclusion of Kwikset® 914 Home Connect with Z-Wave Lock Step-by-Step Guide


1

Prior to installing lock on door, install 4 AA batteries in the battery pack and place battery pack in the interior of the lock.

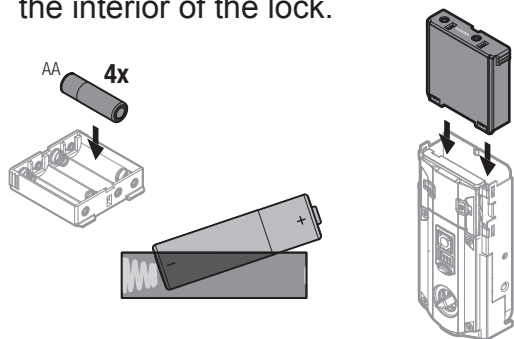


2

Bring the interior of the lock next to the controller within a 12 inch range. Note: no need to connect the keypad exterior at this time.

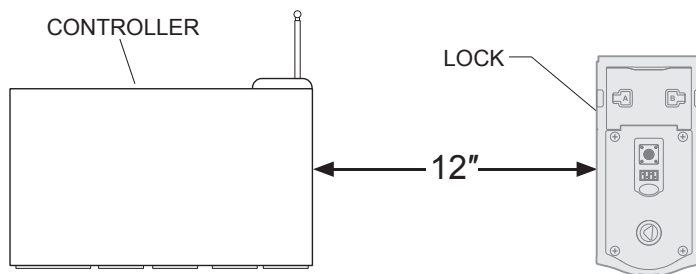

3

Follow the controller instructions and include Z-Wave lock in the network. When prompted, press button "A" once to include the lock.

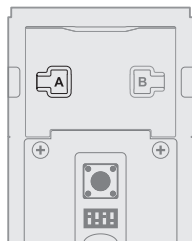


4

Verify the lock has been included properly on the display screen.


5

Remove the battery pack from the lock and set aside.

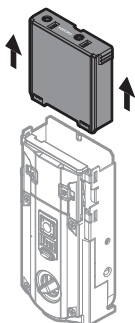

6

Mount the lock on door. Follow the instructions in the SmartCode 914 Installation and User Guide.

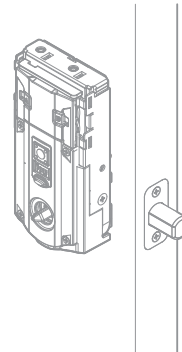

7

Conduct the door handing process. See SmartCode 914 Installation Guide.

8

Actuate the lock from the controller to verify operation. Lastly, verify that the status of the lock matches the controller status. The Z-Wave lock is now ready to use.

