

## How to Install Stock Natural Shades

Before you begin your installation:

### READ ALL INSTALLATION INSTRUCTIONS!

**IMPORTANT:** If bound, do not remove binding until the shade is installed in the window.

- Make sure that you have all tools and hardware needed for installation.
- Check the installation surface (wall, ceiling, or window frame) to ensure that you have suitable fasteners and tools for the material.
- Double check the headrail and shade for proper width and length. If you are installing several sets of shades, be sure to match them with the appropriate window.
- Check the parts list shipped with the product to confirm that you have the correct number of brackets.

### PARTS LIST





Width	Up to 36 in.	36 in. to 48 in.	Greater than 48 in.
A. Bracket/Wingnut	2	3	4
B. Cord Cleat	1	1	1
C. #6 Screw x 1-1/4 in.	5	7	9
D. Phillips 3/8 in. Screw	2	2	2

### 1. TOOLS YOU MAY NEED (NOT INCLUDED):


- Tape Measure
- Pencil
- Flat-blade or Philips Head Screwdriver
- Drill with Bits

### 2. REMOVE CENTERING CLIP

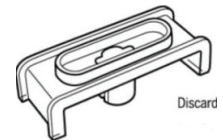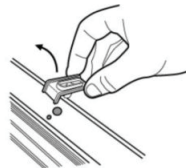


### 3. BRACKET PLACEMENT

Pre-drill wood frame if necessary.


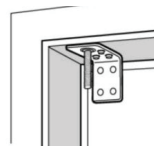


Inside Mount

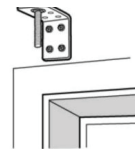

Outside Mount

### 4. SHADE ATTACHMENT

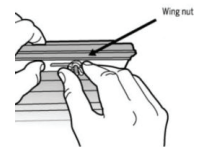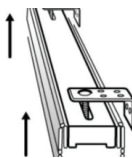

### 5. MOUNT THE CLEAT

