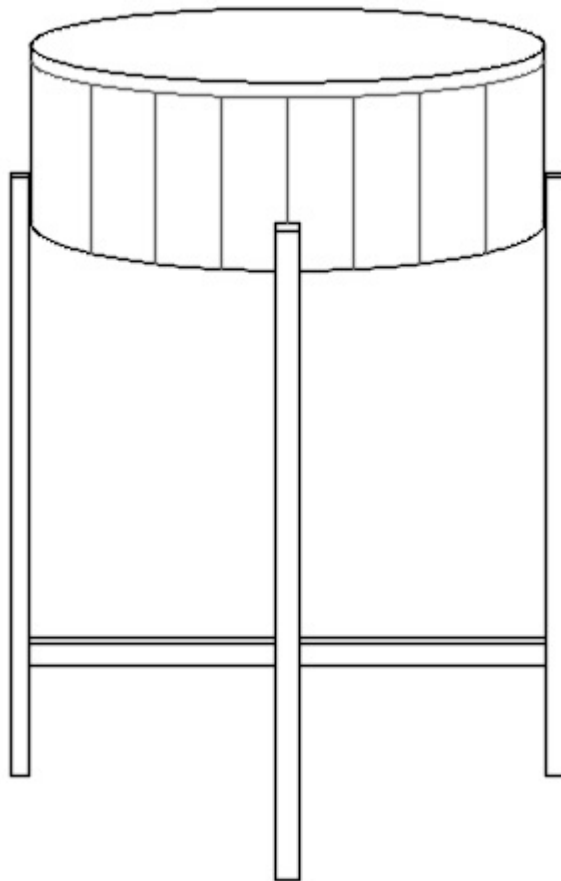


Kirkland's Home

Product Instructions for:

JODI SIDE TABLE



Kirkland's Home

Manufactured & Distributed for
Kirkland's Stores, Inc.
Jackson, TN 38301
Made in China

SKU 285325

Page 1 of 5

JODI SIDE TABLE

ASSEMBLY REQUIREMENTS

2-Person Assembly
10 Minutes Assembly Time

ASSEMBLY PREPARATION

1. Choose an assembly location that is flat and in close proximity to where the product will be used. Allow ample room to work.
2. To prevent scratching on finish: Assemble on a clean, soft surface such as carpet or on a cloth.
3. Remove all packing materials, staples and packing straps from the carton. Make sure to carefully un-pack the product.
4. Review hardware list and ensure all components are present and in good condition.

SAFETY PRECAUTIONS

- 1. KEEP ALL HARDWARE OUT OF CHILDREN'S REACH.**
- 2. DISPOSE OF PLASTIC PACKING MATERIALS IMMEDIATELY TO AVOID RISK OF SUFFOCATION TO CHILDREN AND ANIMALS.**

ASSEMBLY PRECAUTIONS

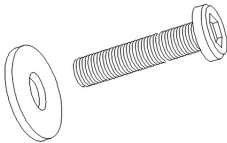
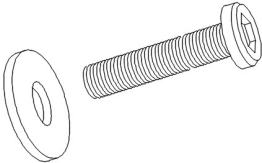
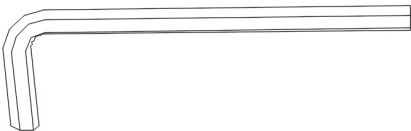
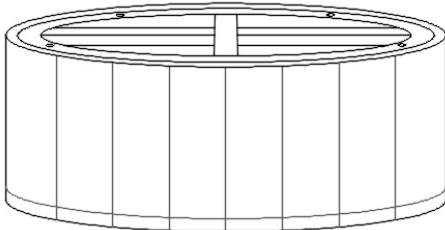
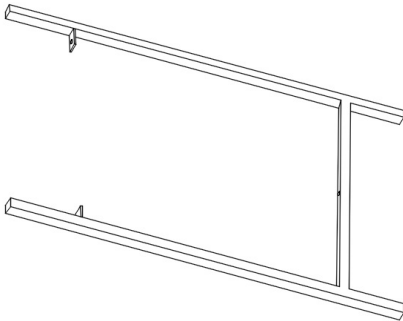
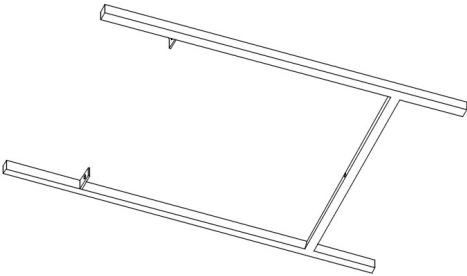
1. Identify the required parts and hardware prior to each assembly step.
2. DO NOT use power tools for assembly.
3. DO NOT over tighten hardware. Damage may occur.
4. DO NOT sit or stand on partially assembled product.

CARE AND USE

1. For Residential Use Only (Non-Commercial).
2. Recommended for Indoor Use Only.
3. DO NOT use product if components are damaged. Check all hardware periodically and re-tighten as necessary.
4. DO NOT sit or stand on product. Use only for intended purpose.
5. DO NOT drag product across floor. Exercise caution when moving product.
6. DO NOT place hot items directly on product surface.
7. DO NOT use commercial or harsh abrasive cleaners on surfaces. Wipe with soft, damp cloth.
8. DO NOT allow liquid of any kind to remain on product. Absorption may cause surface damage.

JODI SIDE TABLE


ENSURE ALL PARTS AND HARDWARE ARE PRESENT AND IN GOOD CONDITION BEFORE DISPOSAL OF PACKAGING.

Parts/Hardware List	
A Bolt M2/8 x 15 mm (4) Flat Washer M06 (4) 	B Bolt M2/8 x 30 mm (1) Flat Washer M06 (1) 
C Allen Key (1) 	1 TOP-1 x 1 
2 LEG-1 x 1 	3 LEG-2 x1 

JODI SIDE TABLE


STEP 1

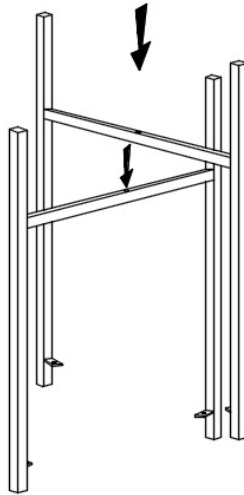-ALIGN LEG-2 OVER LEG-1 AND
MATCH THE SCREW HOLE AS SHOWN.



STEP 2

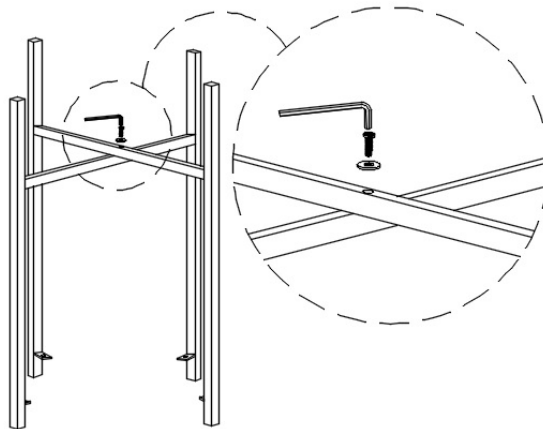
-INSERT SCREW WITH WASHER, TIGHTEN 50%.



STEP 3

-PLACE TABLE TOP ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET
TO AVOID THE TABLE SURFACE FROM BEING SCRATCHED.

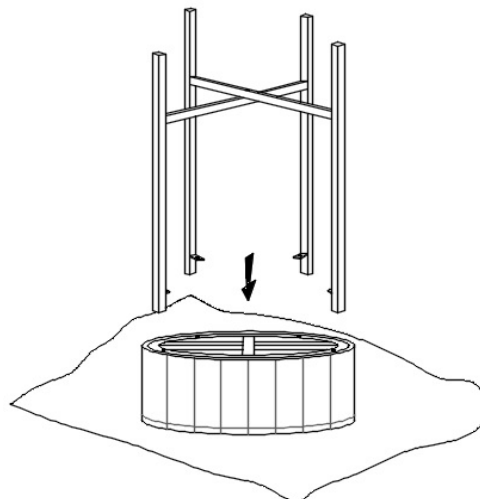
-ALIGN JOINED LEG OVER TABLE, MATCH THE SCREW HOLE AS SHOWN.



JODI SIDE TABLE

STEP 4

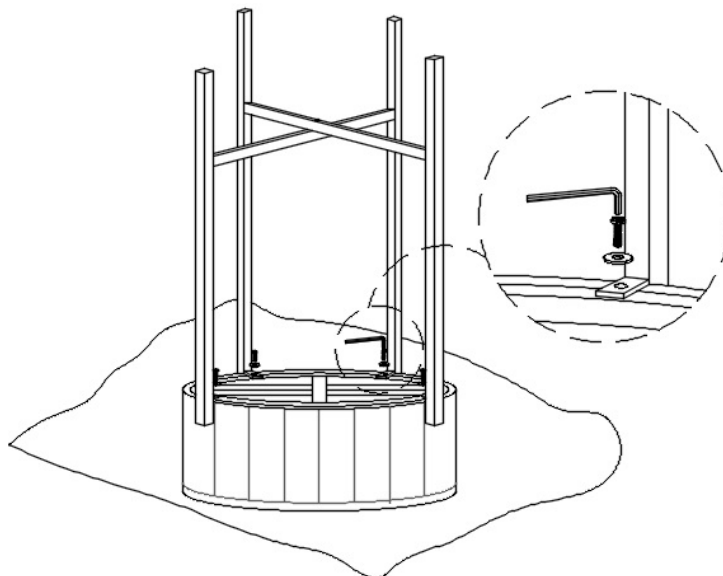-INSERT SCREW WITH WASHER AND TIGHTEN 50%.



-TIGHTEN 100% ALL THE BOLTS & PRODUCT IS READY TO USE.

