


CONVENIENCE CONCEPTS

Winston Coffee Table 121282

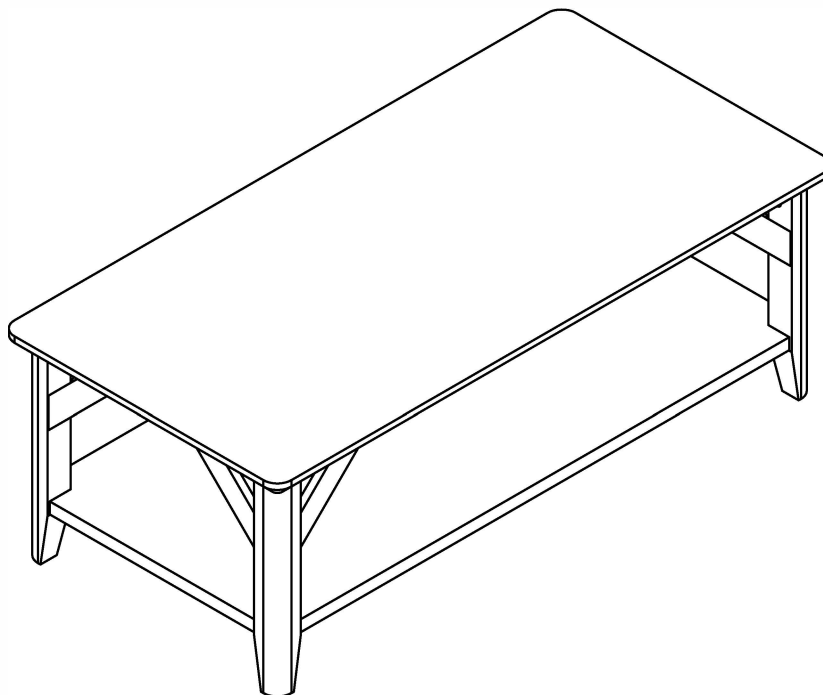

Assembly Instructions

We have designed our furniture with you, the customer in mind. Our clear, easy to follow, step by step instructions will guide you through the project from start to finish.

Feel confident that this will be a fun and rewarding project. The final product will be a quality piece of furniture that will go together smoothly and give years of enjoyment.



Please do not return to the store

. Broken or missing Hardware?

. Need help with Assembly?

Our Illinois based customer service team is ready to help with any problems or questions you may have. Please give us a call (Toll Free) at 1-800-468-6447, or email us at parts@convenience-concepts.com.









Normal hours of Operation: M-F* 8am-4pm CST.

*Excludes Holidays

This product's warranty is only valid through authorized dealers.


VERSION:2019.07.10

Hardware List


A  L29	B  ø15	C  ø8×25	D  M6×12
Cambolt (24pcs)	Camlock (24pcs)	Dowel (16pcs)	Flat head Screw (2pcs)
E  ø16	F  ø22	G  80x25x97	H  Glue(1pc)
Foot Pin (4pcs)	Small sticker (20pcs)	Metal Leg (1pc)	Glue: For securing please apply to wood dowel first before inserting into panel

Please count and verify all parts before assembly.

Panel List

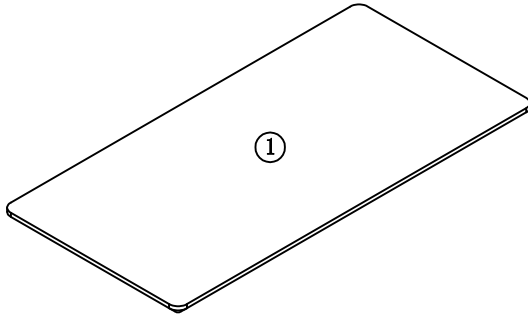


TOP(1pc)

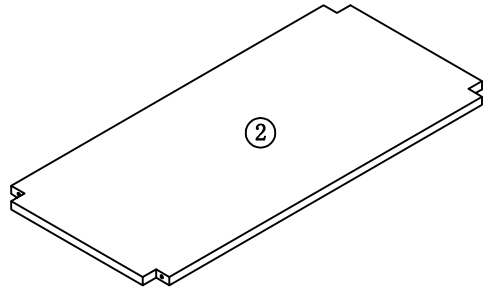


SHELF(1pc)



LEG (2pcs)








LEG(2pcs)




CROSSBAR(8pcs)

Please count and verify all parts before assembly.

Assembling the unit with camlocks and wood dowels.

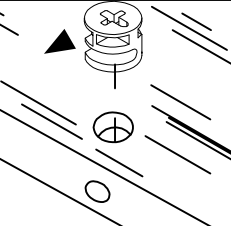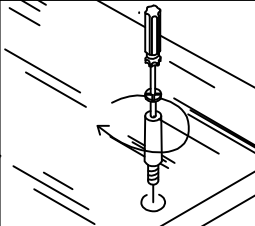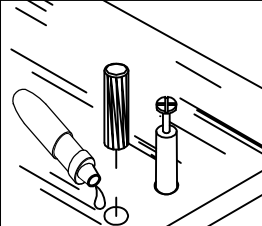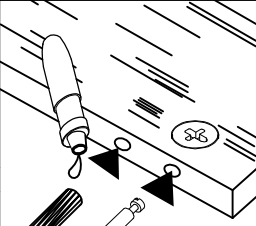
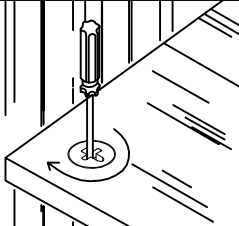
				
Insert camlock, camlock must face bolt hole	Gently screw cam bolt into the threaded anchor	lightly glue one end of wood dowel and tap into hole.	lightly glue dowel and connect to second panel by inserting dowels into holes	Gently screw the cam clockwise into locked position. Do not overtighten.

Exploded Views

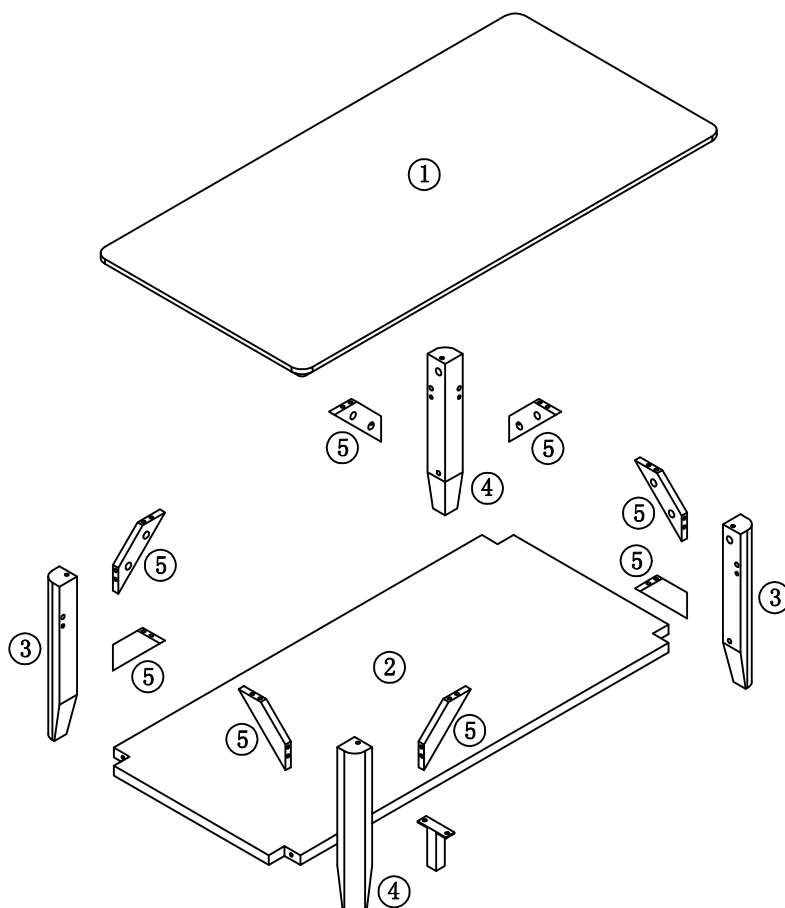



Step1

1. Screw Cambolts(A) into leg(3), insert dowels(C) into leg(3).
2. Attach crossbar (5) to leg (3) using Camlocks (B) and gently tighten.
3. Place covers(F) over holes as shown.
4. Repeat for another three legs.

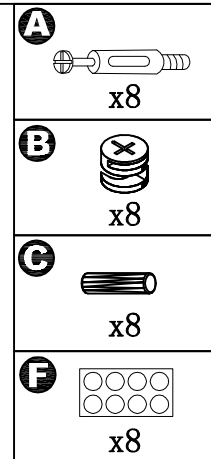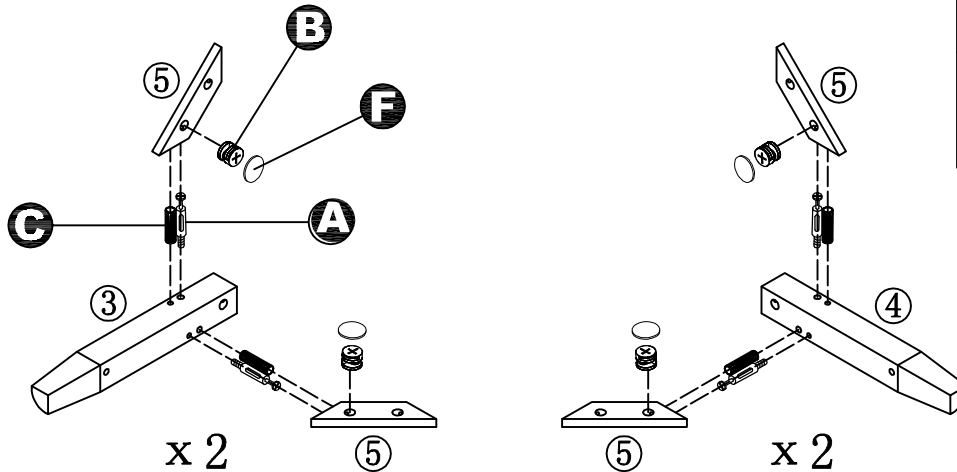




Step2

1. Screw Cambolt(A) into leg(3,4).
2. Attach legs (3,4) to shelf(2) using Camlock (A) and gently tighten.

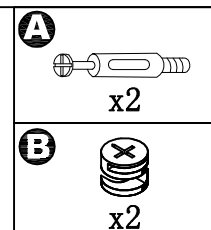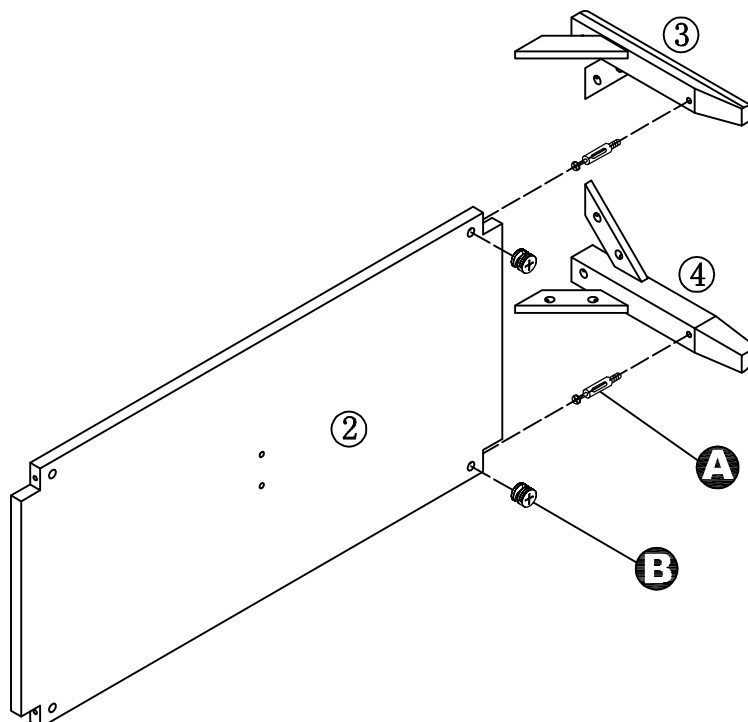





Step3

1. Screw Cambolts(A) into legs(3,4).
2. Attach legs (3,4) to shelf(2) using Camlocks (A) and gently tighten.





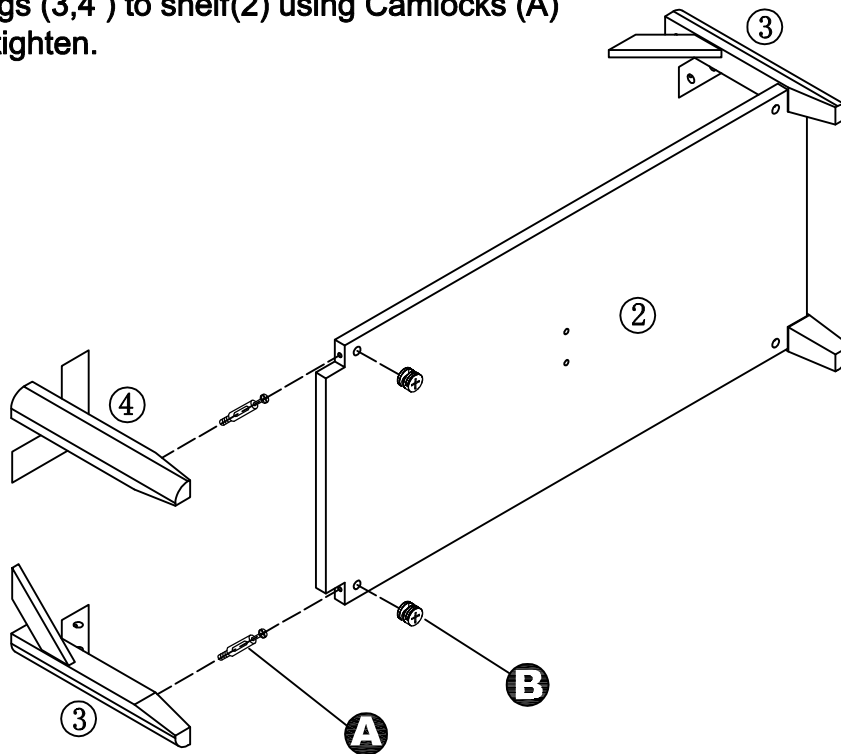


Step4

1. Put table upside down.
2. Attach metal leg(G) to shelf(2) using flat head screws(D) as shown .
3. Knock foot tacks(E) onto legs.

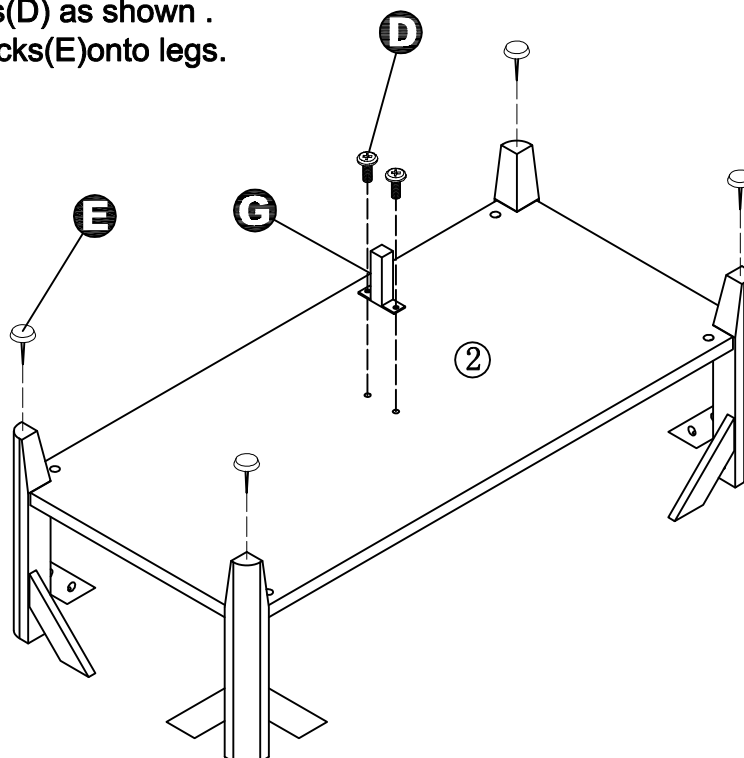

Step5

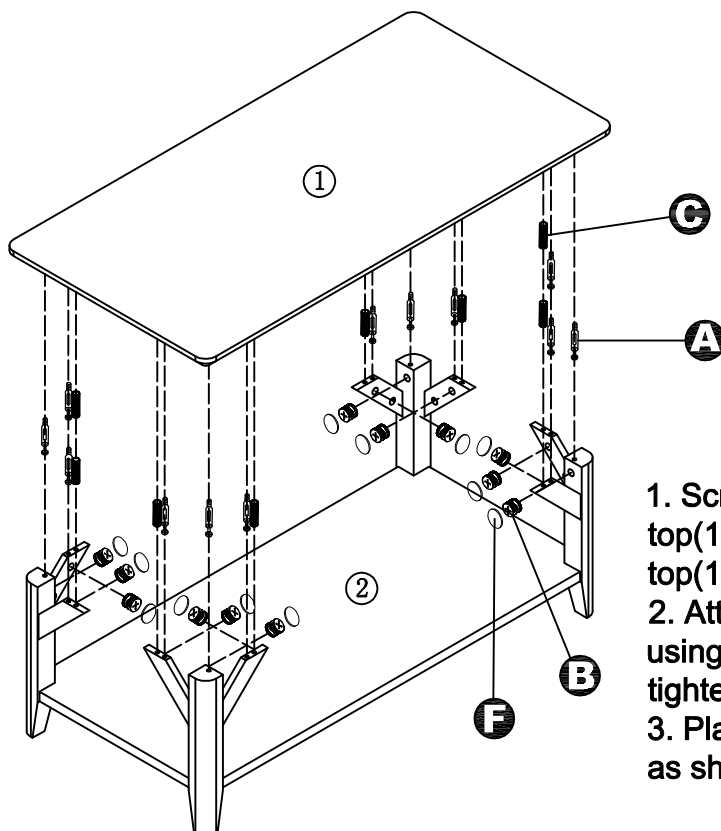

1. Screw Cambolts(A) into top(1), insert dowels(C) into top(1).
2. Attach leg s(3,4) to top(1) using Camlocks (A) and gently tighten.
3. Place covers(F) over holes as shown.

Step6

Enjoy your Winston Coffee Table!

