


CONVENIENCE CONCEPTS

Winston Hall Table

121289

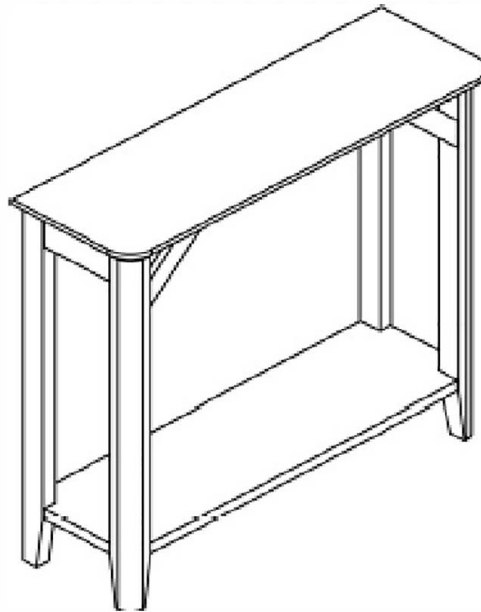

Assembly Instructions

We have designed our furniture with you, the customer in mind. Our clear, easy to follow, step by step instructions will guide you through the project from start to finish. Feel confident that this will be a fun and rewarding project. The final product will be a quality piece of furniture that will go together smoothly and give years of enjoyment.



Please do not return to the store
• Broken or missing Hardware?
• Need help with Assembly?

Our Illinois based customer service team is ready to help with any problems or questions you may have. Please give us a call (Toll Free) at 1-800-468-6447, or email us at parts@convenience-concepts.com.





Normal hours of Operation: M-F* 8am-4pm CST.

*Excludes Holidays

This product's warranty is only valid through authorized dealers.


VERSION:2019.07.10

Hardware List


A  L29 Cambolt (26pcs)	B  ø15 Camlock (26pcs)	C  ø8×25 Dowel (7pcs)	D  ø16 Foot Pin (4pcs)
E  ø22 Small sticker (22pcs)	F  197×5x1 ANTI-TIP Strap (1pc)	G  12×12×1 Bracket (2pcs)	H  ø4×25 Small Screw (1pc)
I  ø5X40 Wall Screw (1pc)	J  ø8X40 Plastic Anchor (1pc)	K  Glue(1pc) Glue: For securing please apply to wood dowel first before inserting into panel	

Please count and verify all parts before assembly.

Panel List

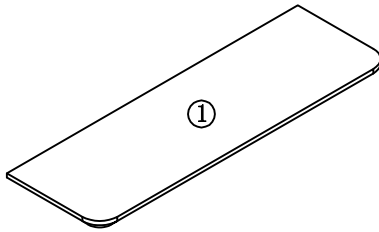

TOP(1pc)

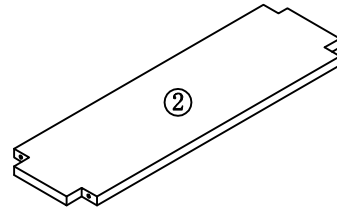

SHELF(1pc)




FRONT LEG LEG(1pc)



FRONT RIGHT LEG(1pc)



REAR LEFT LEG(1pc)




REAR RIGHT LEG(1pc)



FRONT CROSSBAR(2pcs)








SIDE CROSSBAR(2pcs)

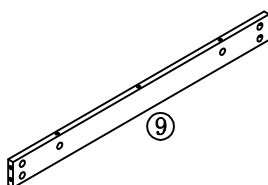


REAR CROSSBAR(1pc)

Please count and verify all parts before assembly.

Assembling the unit with camlocks and wood dowels.

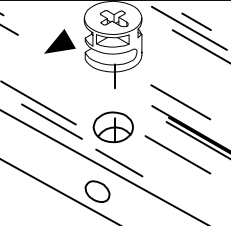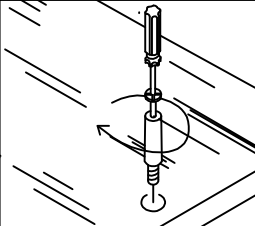
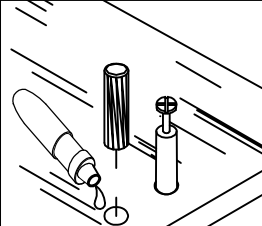
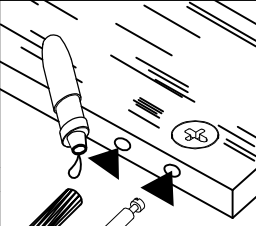
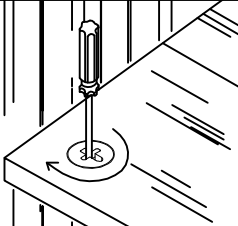
				
Insert camlock, camlock must face bolt hole	Gently screw cam bolt into the threaded anchor	lightly glue one end of wood dowel and tap into hole.	lightly glue dowel and connect to second panel by inserting dowels into holes	Gently screw the cam clockwise into locked position. Do not overtighten.

Exploded Views

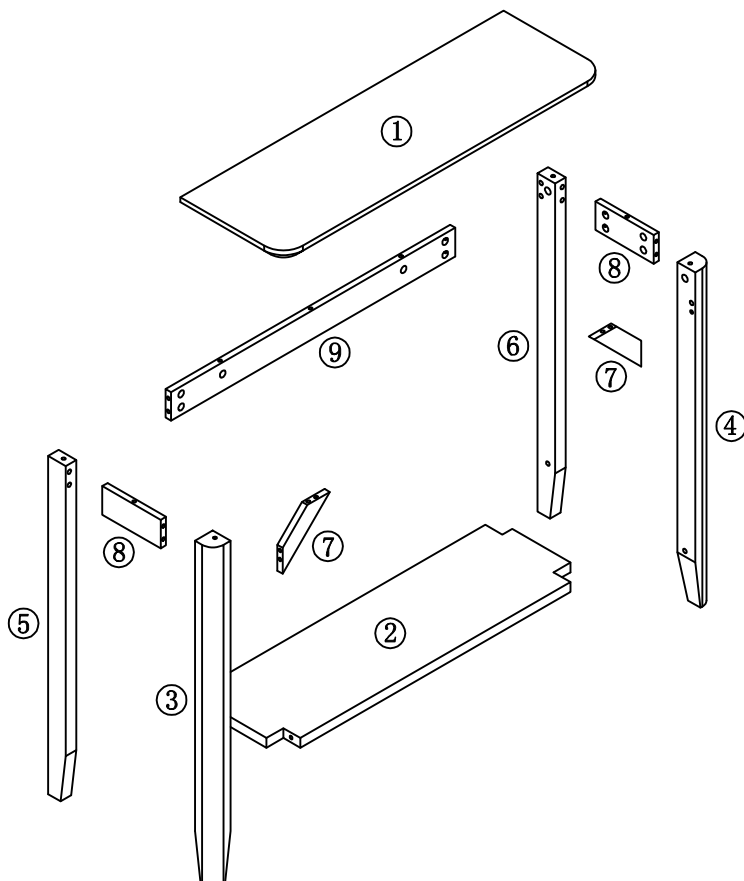




Step1

1. Screw cambolts(A) into legs(3,4,5,6).
2. Attach side crossbars(8) to legs(3,4,5,6) separately using camlocks (B) and gently tighten.
3. Place covers(E) over holes as shown.

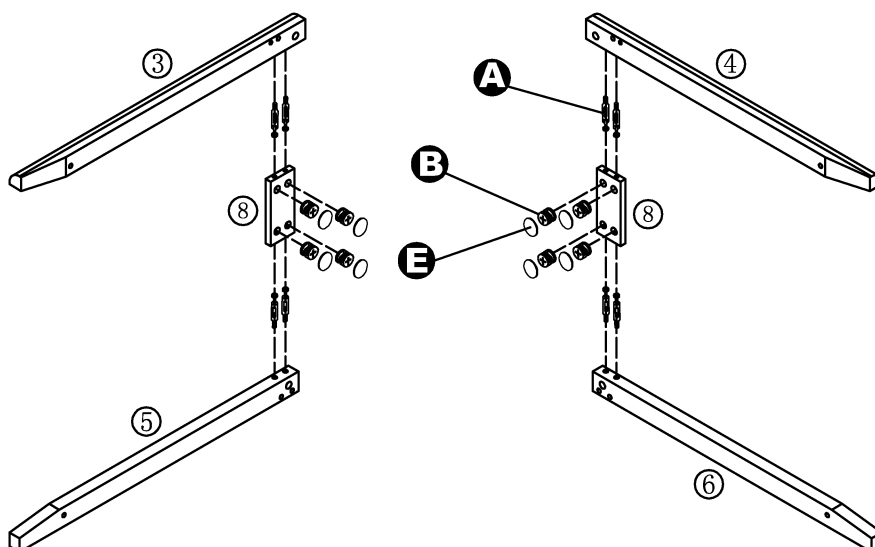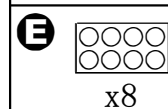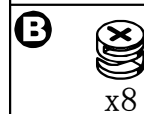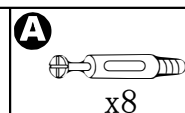



Step2

1. Screw cambolts(A) into legs(4,6).
2. Attach shelf(2) to legs(4,6) using camlocks(B) and gently tighten.

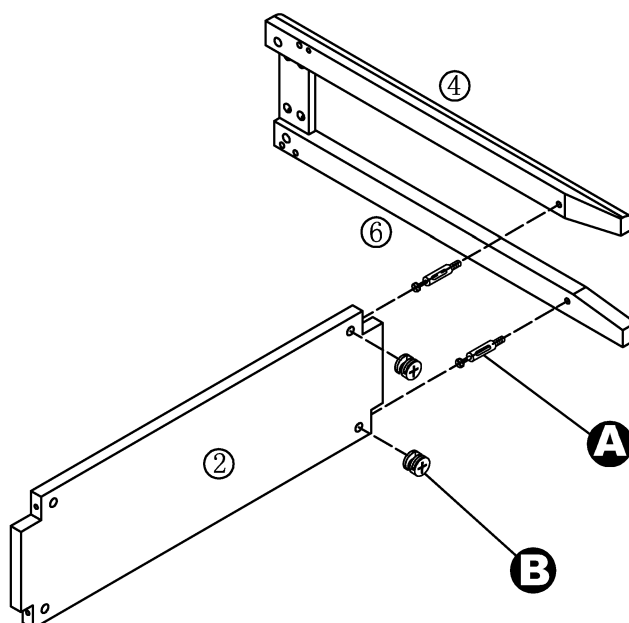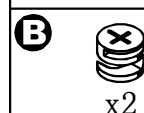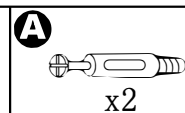



Step3

1. Screw cambolts(A) into leg(6).
2. Attach rear crossbar(9) to leg(6) using camlocks (B) and gently tighten.
3. Place covers(E) over holes as shown.

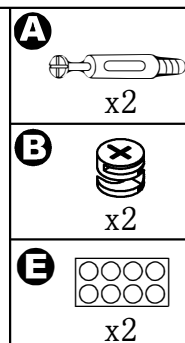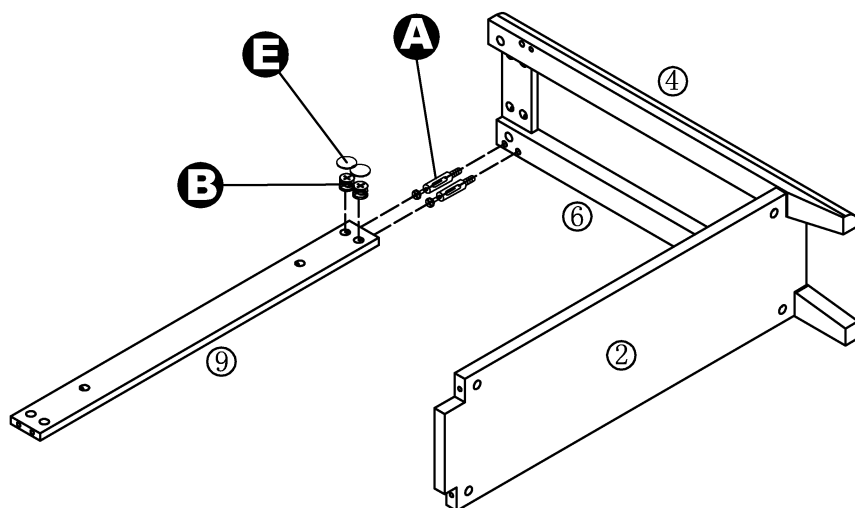


Step4

1. Screw cambolts(A) into leg(5).
2. Attach rear crossbar(9) to leg(5) using camlocks (B) and gently tighten.
3. Place covers(E) over holes as shown.

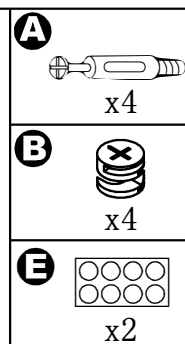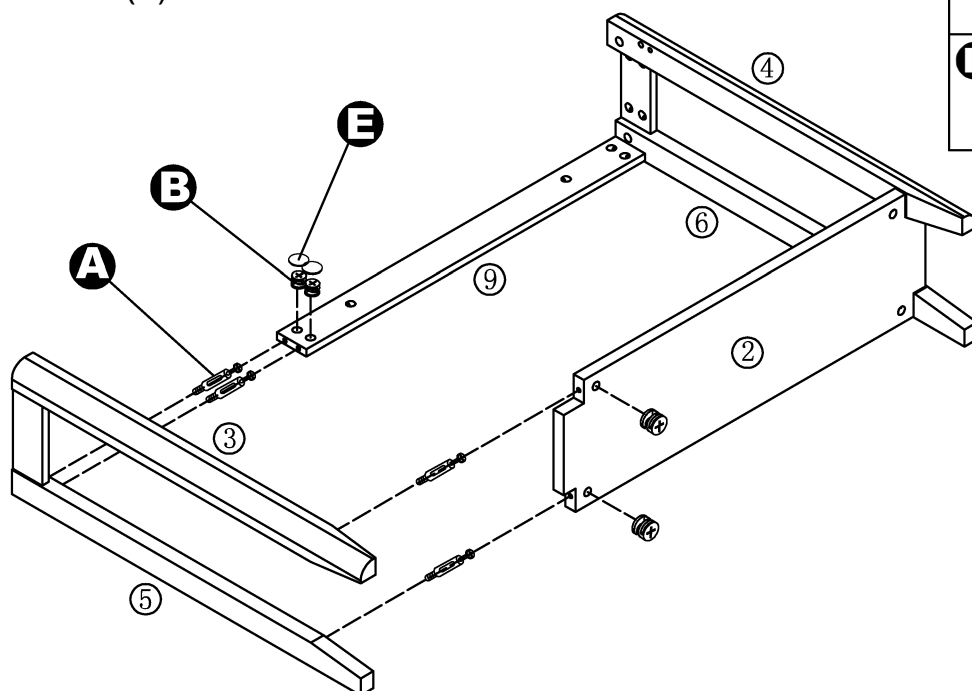






Step5

1. Knock foot tacks (D) onto legs.

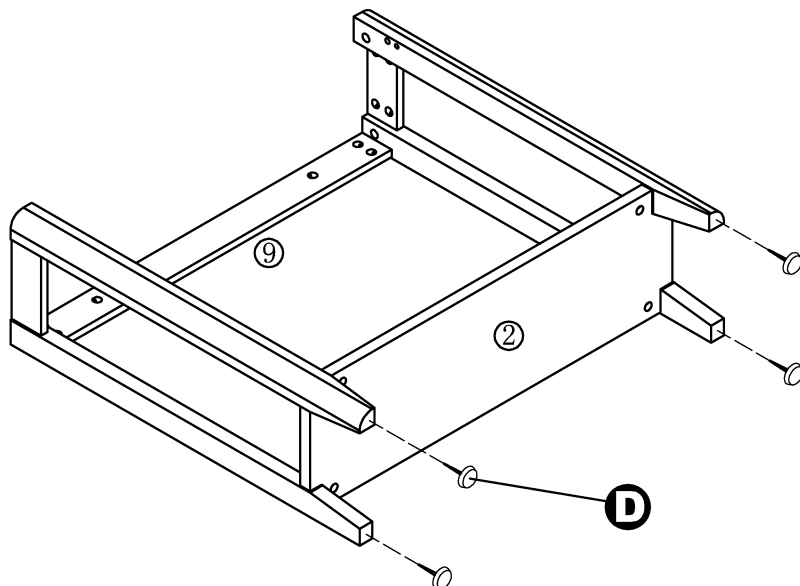






Step6

1. Screw cambolts(A) into legs as shown.
2. Attach front crossbar(7) to front leg using camlock(B) and gently tighten.
3. Place covers(E) over holes as shown.

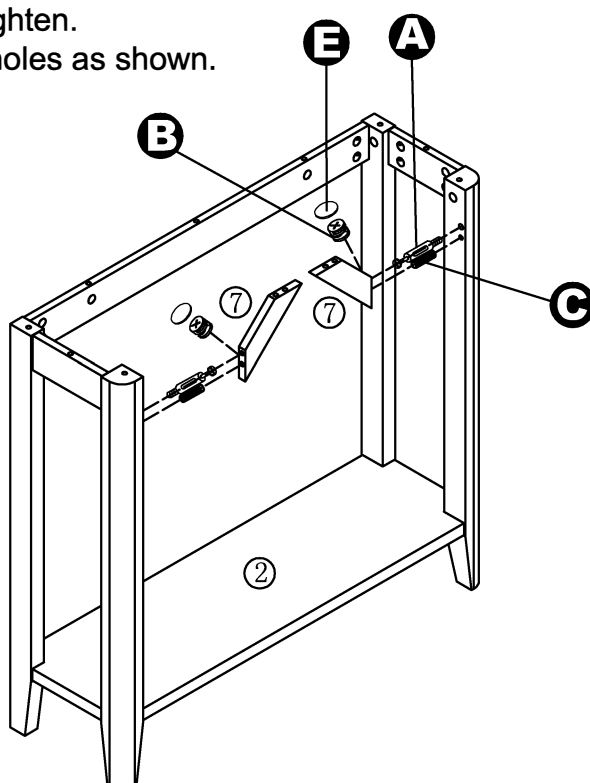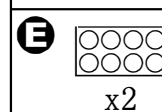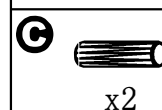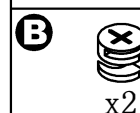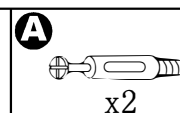


Step7

1. Screw cambolts(A) into top(1), insert dowels(C) into top.
2. Attach top (1) to base unit using camlocks(B) and gently tighten.
3. Place covers(E) over holes as shown.

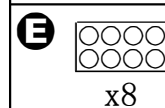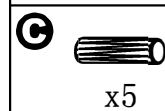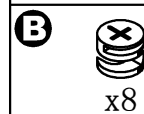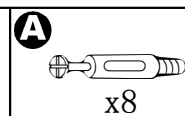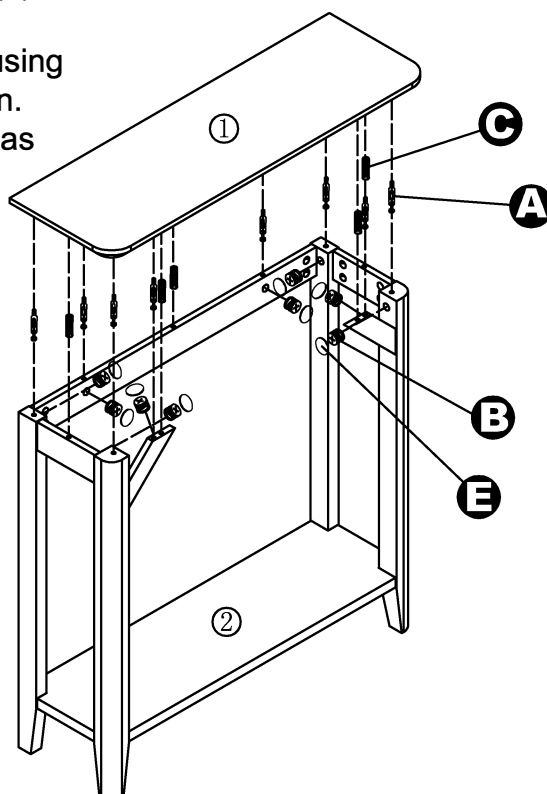

Step8

Enjoy your Winston Hall Table!

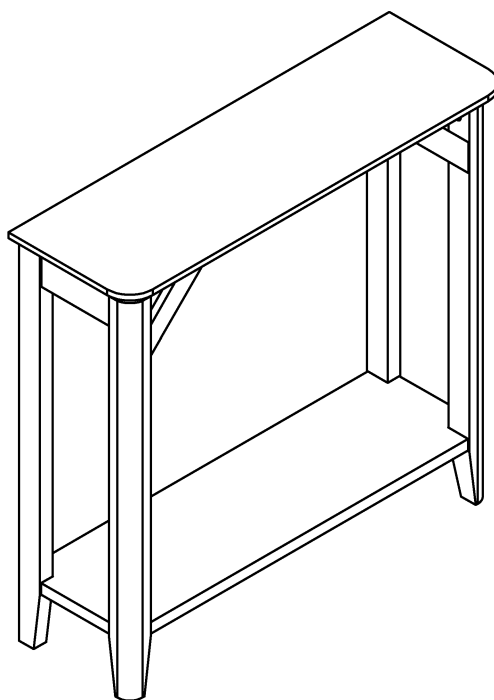


ANTI-TIPPING STRAP INSTRUCTION

HARDWARE (INCLUDED) :


TOOLS NEEDED (NOT INCLUDED) :



DRYWALL ANCHOR $\phi 8 \times 40$ X 1PC

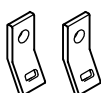

METAL BRACKETS $12 \times 12 \times 1$ X 2PCS

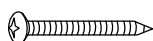

DRYWALL SCREW $\phi 5 \times 40$ X 1PC



STRAP $197 \times 5 \times 1$ X 1PC



FLATHEAD SCREW $\phi 4 \times 25$ X 1PC




DRILL & DRILL BIT



LIGHT HAMMER


Note: Hardware included only compatible with standard drywalls.

STEP 1

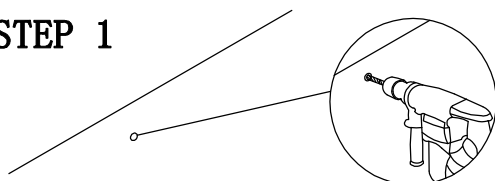


1. Find spot on wall 1" below top of item.
2. Using a drill bit slightly thinner than anchor, drill hole into drywall.

STEP 2

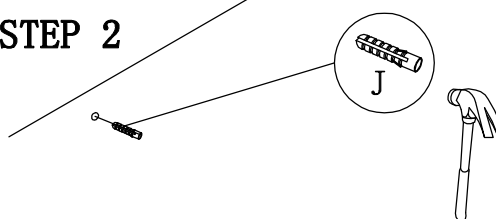


1. Use a light hammer to tap anchor into hole.
2. Anchor should fit snugly. If hole is too small, drill again to increase hole size. Do not force anchor into wall.

STEP 3

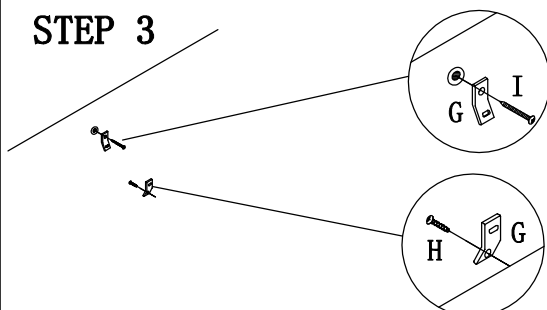

1. Insert drywall screw into metal bracket and into drywall anchor.
2. Insert flathead screw into second metal bracket and into back of item along top edge.

STEP 4

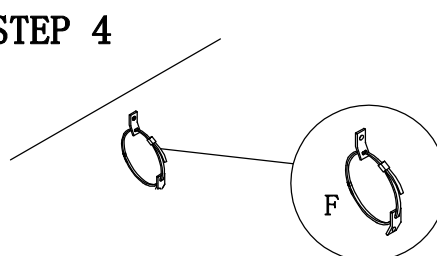

1. Insert strap thru bracket attached to wall, then thru bracket on item, and into head of strap.
 2. pull lightly til strap stops.
- Assembly is complete.