



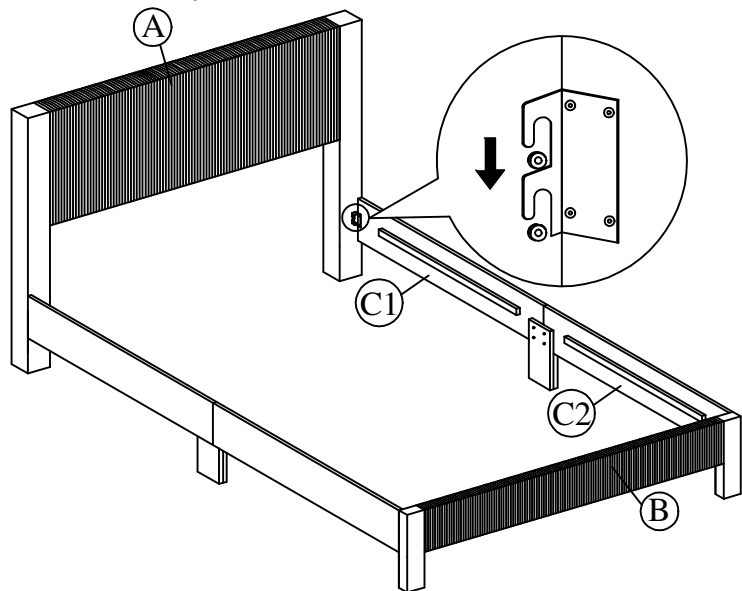

Step 5 : Attach Side rail (#C) to the Headboard (#A) and Footboard (#B) by pushing the bracket down to fit. Tighten the 4 corners with Allen Key (#O).

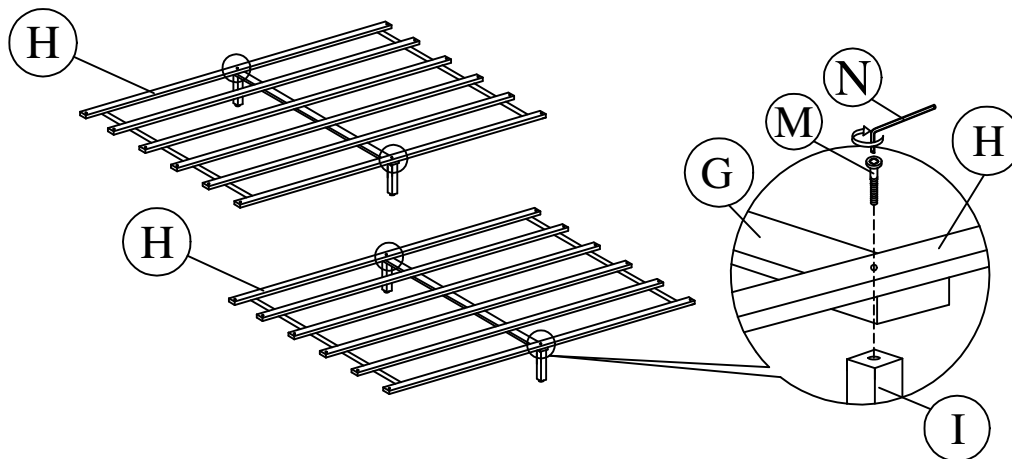

Step 6 : Align the Center rail (#G) to the center of Slats (#H). Secure the support legs (#I) to the Center Rail (#G) and Slats (#H) by using Bolt (#M).



Step 7 : Install the bed slats by aligning to the Side. The distance of the slats should be sufficient to obtain desirable stability. Tighten the slats by using Screw (#P).

