

NOTICE

- *Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
- *This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- * This item may require periodic tightening.
- *If you are having difficulty , our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

PREPARATION

- *Before beginning assembly of product , make sure all parts are present . Compare parts with part contents list and hardware contents list.
- *If any part is missing or damaged , do not attempt to assemble the product.
- *Estimated Assembly Time: 10 minutes.
- *Tolls Required for Assembly (included) : Allen Key

CARE AND MAINTENCE

- *Spot clean using a mild water-free solvent.
- * Only a professional cleaner should undertake a complete overall cleaning.
- *The use of steam or water-based cleaners may cause excessive shrinking or staining.


Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Seat Body		1X
B	Front Legs		2X
C1	Rear leg-right		1X
C2	Rear leg-left		1X
HW1	Allen bolt : M8 x 1.25 x 55 mm		8X
HW2	Spring Washer : M8		8X
HW3	Flat Washer : M8x22mm		8X
HW4	Allen Key		1X

 **SAFAVIEH**
FURNITURE

Item ID: MCR1000

Product Dimensions: 22.4" W x 27.9" D x 31.8" H

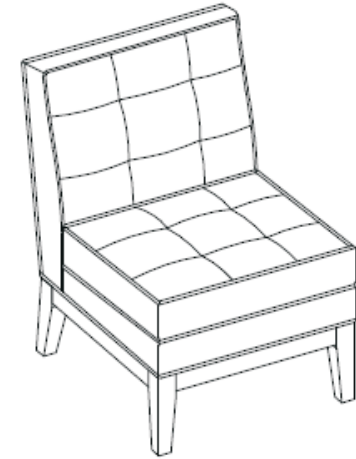

WARNING



Weight Capacity: 275 lbs

WARNING: DO NOT STAND ON CHAIR

WARNING: DO NOT OVER TORQUE BOLTS/SCREWS

PREPARATION


*Before beginning assembly of product , make sure all parts are present . Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged , do not attempt to assemble the product.


*Estimated Assembly Time: 10 minutes.

*Tolls Required for Assembly (included) : Allen Key


*If you are having difficulty , our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

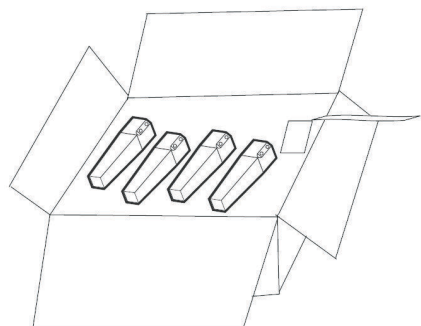


STEP 1: OPEN THE ZIPPER ON THE UNDERSIDE OF THE SEAT AND TAKE OUT LEGS AND HARDWARE.

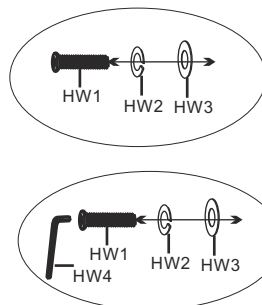


STEP 2: PUT THE WASHERS ON THE BOLT IN THE ORDER SHOWN IN THE PICTURE.

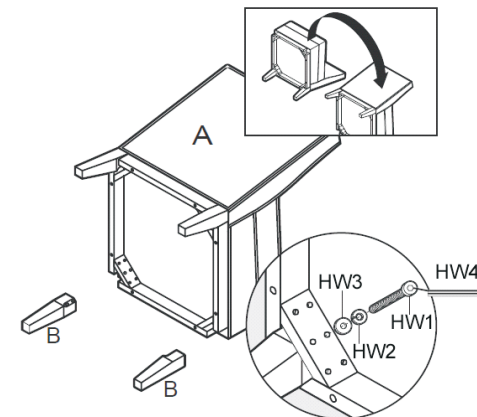

STEP 3: ASSEMBLY THE FRONT LEGS AND SCREW IN THE BOLTS. BUT DON'T TIGHTEN COMPLETELY.

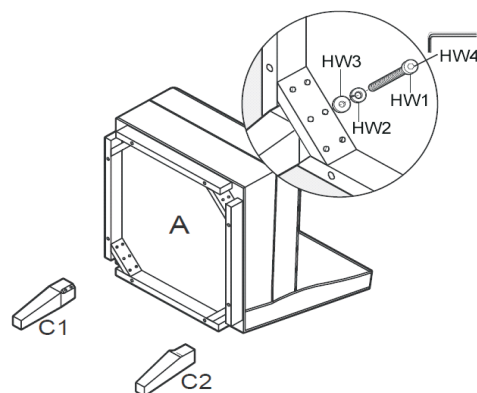

STEP 4: ASSEMBLY THE REAR LEGS AND SCREW IN THE BOLTS. BUT DON'T TIGHTEN COMPLETELY.

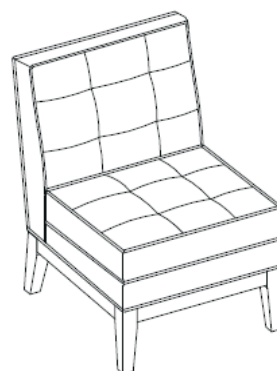

STEP 5: PUT THE CHAIR UPRIGHT AND MAKE SURE ALL LEGS ARE LEVEL, THEN FIRMLY TIGHTEN BOLTS WITH ALLEN KEY WHILE THE CHAIR IS UPRIGHT AS PICTURED ABOVE.